

# DVX 90

Model	Activity Code Description	Activity Code	Qty In Min
DVX 90	Battery	AC02	12
DVX 90	Electric Start Ring Gear	AC03	36
DVX 90	Solenoid	AC06	12
DVX 90	Starter Motor	AC11	24
DVX 90	Voltage Regulator/Rectifier	AC14	12
DVX 90	Frame	BD02	246
DVX 90	Decal, Body (ATV)	BD28	12
DVX 90	Decal, Warning (ATV)	BD29	12
DVX 90	Body Panel	BD30	60
DVX 90	Bumper (Front)	CH05	12
DVX 90	Footrest	CH06	18
DVX 90	Seat Assembly	CH18	12
DVX 90	V-Belt Cover/Gasket	CT18	12
DVX 90	Transmission Inner components	CT19	36
DVX 90	Brake Assembly/ Calipers	DR02	24
DVX 90	Brake Cable	DR03	12
DVX 90	Brake Disc	DR04	18
DVX 90	Brake Hose (Hyd)	DR06	36
DVX 90	Brake Lever (Cable)/Lock	DR07	12
DVX 90	Brake Lever (Hyd)/Lock	DR08	12
DVX 90	Chain/Reverse Chain	DR12	36
DVX 90	Chain Tensioner	DR19	12
DVX 90	Drive Clutch Complete	DR21	30
DVX 90	Driven Pulley (Complete)	DR31	30
DVX 90	Driven Pulley Fixed Face	DR32	36
DVX 90	Driven Pulley Moveable Sheave	DR33	36
DVX 90	Master Cylinder Complete	DR53	30
DVX 90	Brake/Throttle Assembly Base	DR61	18
DVX 90	Sprocket (Engine)	DR70	18
DVX 90	Sprocket (Rear)	DR71	30
DVX 90	Air Cleaner Assembly	EG01	24
DVX 90	Cam Chain Tensioner	EG04	36
DVX 90	Cam Shaft and/or Sprocket	EG05	30
DVX 90	Cam Shaft Drive Chain	EG06	126
DVX 90	Carburetor Assembly (Complete)	EG08	24
DVX 90	Carburetor Assembly (Overhaul)	EG09	36
DVX 90	Exhaust Pipe	EG12	24
DVX 90	CDI	EL01	12
DVX 90	Headlight Assembly	EL03	12
DVX 90	Headlight Harness	EL04	12
DVX 90	Ignition Coil (1)	EL05	12
DVX 90	Ignition Switch	EL06	18
DVX 90	Stator	EL07	30
DVX 90	Main Wiring Harness	EL09	54
DVX 90	Rotor Assembly/Starter Clutch Set	EL10	24
DVX 90	Spark Plug Cap Assembly	EL13	12
DVX 90	Taillight Housing	EL15	12
DVX 90	Crankcase	EN06	174
DVX 90	Crankshaft/Bearing(s)/Seals/Clean	EN07	126

DVX 90	Cylinder(s)/Gasket	EN09	60
DVX 90	Engine (Complete)	EN12	42
DVX 90	Fan Protector	EN25	18
DVX 90	Head and/or Gasket(s)	EN28	54
DVX 90	Piston(s)/Pin(s)/Bearing(s)	EN30	60
DVX 90	Ring Set(s)	EN31	60
DVX 90	Kick Start Lever	EN41	12
DVX 90	Kick Start Components	EN42	24
DVX 90	Valve, Intake/Exhaust	EN54	54
DVX 90	Oil Pump Chain or Sprocket	EN59	36
DVX 90	Gas Tank (Complete)	FU04	36
DVX 90	Oil Pump/GaskRings (Complete)	FU12	36
DVX 90	Throttle Cable	FU16	18
DVX 90	Choke, Electric	FU43	24
DVX 90	Crankcase Side Cover Assembly/Gskt	GM01	36
DVX 90	Shock Absorber (Front/Rear)	SB06	12
DVX 90	Handlebar	SB09	30
DVX 90	Handlebar Grip	SB10	12
DVX 90	Spindle	SB13	18
DVX 90	Steering Post	SB15	42
DVX 90	Steering Tie Rod	SB16	18
DVX 90	Tie Rod End (1)	SB19	18
DVX 90	Handlebar Clamp Bracket	SB21	18
DVX 90	Steering Post Bearing	SB22	18
DVX 90	A-Arm Assembly (L or R)	SB23	24
DVX 90	Axle Shaft (1) (Front or Rear)	SS02	36
DVX 90	Hub Bearing (1) (Front)/Knuckle	SS03	18
DVX 90	Tire	SS05	18
DVX 90	Shock absorber (Rear Arm)	SU16	24

## DVX 300

Model	Activity Code Description	Activity Code	Qty In Min
DVX 300	Battery	AC02	12
DVX 300	Solenoid	AC06	12
DVX 300	Starter Motor	AC11	18
DVX 300	Voltage Regulator/Rectifier	AC14	30
DVX 300	Frame	BD02	276
DVX 300	Skid Plate (Front/Rear)	BD08	18
DVX 300	Fender (L or R)	BD14	12
DVX 300	Frame (Rear)	BD17	60
DVX 300	Headlight Switch	BD20	18
DVX 300	Decal, Body (ATV)	BD28	12
DVX 300	Decal, Warning (ATV)	BD29	12
DVX 300	Body Panel	BD30	60
DVX 300	Console/LED Panel	CH04	12
DVX 300	Bumper (Front)	CH05	12
DVX 300	Air Intake Duct	CH14	36
DVX 300	Seat Assembly	CH18	12
DVX 300	Centrifugal Clutch Assembly	CT02	36
DVX 300	Gear Shift Cable/Rod	CT09	18
DVX 300	Gear Shift Cable/Rod (Reverse)	CT10	12
DVX 300	Starter Clutch Set	CT16	42
DVX 300	V-Belt Cover/Gasket	CT18	24
DVX 300	Transmission Inner components	CT19	90
DVX 300	Shift Lever Knob	CT21	12
DVX 300	Brake Assembly/ Calipers	DR02	24
DVX 300	Brake Disc	DR04	24
DVX 300	Brake Hose (Hyd)	DR06	30
DVX 300	Brake Lever (Hyd)/Lock	DR08	12
DVX 300	Brake Switch	DR11	12
DVX 300	Chain/Reverse Chain	DR12	40
DVX 300	Drive Clutch Complete	DR21	30
DVX 300	Driven Pulley (Complete)	DR31	30
DVX 300	Driven Pulley Fixed Face	DR32	36
DVX 300	Driven Pulley Moveable Sheave	DR33	36
DVX 300	Driven Pulley Spring	DR34	36
DVX 300	Master Cylinder Complete	DR53	30
DVX 300	Brake Pedal	DR59	12
DVX 300	Master Cylinder Reservoir (Rear)	DR74	30
DVX 300	Master Cylinder (Rear)	DR75	24
DVX 300	Battery Cable	EE01	18
DVX 300	Battery Cable,Relay to Starter	EE04	18
DVX 300	Air Cleaner Assembly	EG01	12
DVX 300	Cam Chain Adjuster	EG02	12
DVX 300	Cam Chain Guide	EG03	60
DVX 300	Cam Chain Tensioner	EG04	102
DVX 300	Cam Shaft and/or Sprocket	EG05	42
DVX 300	Cam Shaft Drive Chain	EG06	102
DVX 300	Carburetor Assembly (Complete)	EG08	18
DVX 300	Carburetor Assembly (Overhaul)	EG09	24
DVX 300	Crank Balancer Assembly	EG10	192

DVX 300	Exhaust Pipe	EG12	24
DVX 300	Oil Pump Drive Gear	EG16	42
DVX 300	Radiator Assembly	EG20	54
DVX 300	Radiator Cap	EG21	12
DVX 300	Radiator Screen	EG22	36
DVX 300	Valve Rocker Arm/Shaft	EG23	42
DVX 300	Exhaust Heat Shield	EG24	12
DVX 300	CDI	EL01	12
DVX 300	Headlight Assembly	EL03	24
DVX 300	Ignition Coil (1)	EL05	18
DVX 300	Ignition Switch	EL06	18
DVX 300	Stator	EL07	36
DVX 300	Main Wiring Harness	EL09	48
DVX 300	Rotor Assembly/Starter Clutch Set	EL10	36
DVX 300	Spark Plug Cap Assembly	EL13	12
DVX 300	Taillight Housing	EL15	12
DVX 300	Relay	EL53	12
DVX 300	Coolant Hose	EN04	54
DVX 300	Crankcase	EN06	414
DVX 300	Crankshaft/Bearing(s)/Seals/Clean	EN07	414
DVX 300	Cylinder(s)/Gasket	EN09	72
DVX 300	Engine (Complete)	EN12	204
DVX 300	Fan Assembly	EN20	42
DVX 300	Fan Protector	EN25	42
DVX 300	Head and/or Gasket(s)	EN28	60
DVX 300	Piston(s)/Pin(s)/Bearing(s)	EN30	84
DVX 300	Ring Set(s)	EN31	84
DVX 300	Thermostat and Gasket	EN36	24
DVX 300	Water Pump Components	EN38	24
DVX 300	Coolant Tank	EN53	18
DVX 300	Valve, Intake/Exhaust	EN54	60
DVX 300	Belt Cooling Duct (Front)	EN57	12
DVX 300	Belt Cooling Duct (Rear)	EN58	12
DVX 300	Oil Pump Chain or Sprocket	EN59	42
DVX 300	Choke Cable	FU02	12
DVX 300	Gas Tank (Complete)	FU04	36
DVX 300	Throttle Cable	FU16	18
DVX 300	Water Temperature Sensor	FU31	18
DVX 300	Crankcase Side Cover Assembly/Gskt	GM01	48
DVX 300	A-Arm (Lower)	SB01	30
DVX 300	A-Arm (Upper)	SB02	30
DVX 300	Shock Absorber (Front/Rear)	SB06	18
DVX 300	Handlebar	SB09	24
DVX 300	Handlebar Grip	SB10	12
DVX 300	Spindle	SB13	30
DVX 300	Steering Post	SB15	48
DVX 300	Steering Tie Rod	SB16	18
DVX 300	Tie Rod End (1)	SB19	18
DVX 300	Handlebar Clamp Bracket	SB21	30
DVX 300	Axle Shaft (1) (Front or Rear)	SS02	48
DVX 300	Hub Bearing (1) (Front)/Knuckle	SS03	24
DVX 300	Tire	SS05	18
DVX 300	Wheel Assembly (Front or Rear)	SS06	24

DVX 300	Axle Housing (Rear) (1 or 2)	SU07	48
DVX 300	Shock absorber (Rear Arm)	SU16	24

## 300 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
300 STOCKMAN	Battery	AC02	12
300 STOCKMAN	Solenoid	AC06	12
300 STOCKMAN	Speedometer Cable	AC08	18
300 STOCKMAN	Starter Motor	AC11	18
300 STOCKMAN	Voltage Regulator/Rectifier	AC14	30
300 STOCKMAN	Fender (Front)	BD01	30
300 STOCKMAN	Frame	BD02	276
300 STOCKMAN	Rack (Front/Rear)	BD05	12
300 STOCKMAN	Headlight Switch	BD20	18
300 STOCKMAN	Decal, Body (ATV)	BD28	12
300 STOCKMAN	Decal, Warning (ATV)	BD29	12
300 STOCKMAN	Fender (Rear)	BD31	30
300 STOCKMAN	Console/LED Panel	CH04	12
300 STOCKMAN	Bumper (Front)	CH05	12
300 STOCKMAN	Footrest	CH06	12
300 STOCKMAN	Air Intake Duct	CH14	36
300 STOCKMAN	Instrument Panel Decals	CH16	12
300 STOCKMAN	Seat Assembly	CH18	12
300 STOCKMAN	Centrifugal Clutch Assembly	CT02	42
300 STOCKMAN	Driveshaft (Rear)	CT05	60
300 STOCKMAN	Gear Shift Cable/Rod	CT09	18
300 STOCKMAN	Gear Shift Cable/Rod (Reverse)	CT10	12
300 STOCKMAN	Gear Case (Rear)	CT15	90
300 STOCKMAN	Starter Clutch Set	CT16	42
300 STOCKMAN	V-Belt Cover/Gasket	CT18	24
300 STOCKMAN	Transmission Inner components	CT19	90
300 STOCKMAN	Shift Lever Knob	CT21	12
300 STOCKMAN	Brake Assembly/ Calipers	DR02	24
300 STOCKMAN	Brake Disc	DR04	24
300 STOCKMAN	Brake Bleeding (Hyd)	DR05	30
300 STOCKMAN	Brake Hose (Hyd)	DR06	30
300 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
300 STOCKMAN	Brake Switch	DR11	12
300 STOCKMAN	Drive Clutch Complete	DR21	30
300 STOCKMAN	Driven Pulley (Complete)	DR31	30
300 STOCKMAN	Driven Pulley Fixed Face	DR32	36
300 STOCKMAN	Driven Pulley Moveable Sheave	DR33	36
300 STOCKMAN	Driven Pulley Spring	DR34	36
300 STOCKMAN	Master Cylinder Complete	DR53	30
300 STOCKMAN	Brake Pedal	DR59	12
300 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
300 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	30
300 STOCKMAN	Master Cylinder (Rear)	DR75	24
300 STOCKMAN	Battery Cable	EE01	18
300 STOCKMAN	Battery Cable,Relay to Starter	EE04	18
300 STOCKMAN	Air Cleaner Assembly	EG01	12
300 STOCKMAN	Cam Chain Adjuster	EG02	12
300 STOCKMAN	Cam Chain Guide	EG03	60
300 STOCKMAN	Cam Chain Tensioner	EG04	102

300 STOCKMAN	Cam Shaft and/or Sprocket	EG05	42
300 STOCKMAN	Cam Shaft Drive Chain	EG06	102
300 STOCKMAN	Carburetor Assembly (Complete)	EG08	18
300 STOCKMAN	Carburetor Assembly (Overhaul)	EG09	24
300 STOCKMAN	Crank Balancer Assembly	EG10	402
300 STOCKMAN	Exhaust Pipe	EG12	24
300 STOCKMAN	Radiator Assembly	EG20	54
300 STOCKMAN	Radiator Cap	EG21	12
300 STOCKMAN	Radiator Screen	EG22	36
300 STOCKMAN	Valve Rocker Arm/Shaft	EG23	42
300 STOCKMAN	Exhaust Heat Shield	EG24	12
300 STOCKMAN	CDI	EL01	12
300 STOCKMAN	Headlight Assembly	EL03	24
300 STOCKMAN	Ignition Coil (1)	EL05	18
300 STOCKMAN	Ignition Switch	EL06	18
300 STOCKMAN	Stator	EL07	36
300 STOCKMAN	Main Wiring Harness	EL09	48
300 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	36
300 STOCKMAN	Spark Plug Cap Assembly	EL13	12
300 STOCKMAN	Taillight Housing	EL15	12
300 STOCKMAN	Speedometer, Digital	EL29	12
300 STOCKMAN	Relay	EL53	12
300 STOCKMAN	Coolant Hose	EN04	54
300 STOCKMAN	Crankcase	EN06	414
300 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	414
300 STOCKMAN	Cylinder(s)/Gasket	EN09	72
300 STOCKMAN	Engine (Complete)	EN12	210
300 STOCKMAN	Fan Assembly	EN20	42
300 STOCKMAN	Fan Protector	EN25	42
300 STOCKMAN	Head and/or Gasket(s)	EN28	60
300 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	84
300 STOCKMAN	Ring Set(s)	EN31	84
300 STOCKMAN	Recoil Components	EN33	24
300 STOCKMAN	Recoil (Complete)	EN34	12
300 STOCKMAN	Thermostat and Gasket	EN36	24
300 STOCKMAN	Water Pump Components	EN38	24
300 STOCKMAN	Coolant Tank	EN53	18
300 STOCKMAN	Valve, Intake/Exhaust	EN54	60
300 STOCKMAN	Belt Cooling Duct (Front)	EN57	12
300 STOCKMAN	Belt Cooling Duct (Rear)	EN58	12
300 STOCKMAN	Oil Pump Chain or Sprocket	EN59	42
300 STOCKMAN	Choke Cable	FU02	12
300 STOCKMAN	Gas Tank (Complete)	FU04	36
300 STOCKMAN	Throttle Cable	FU16	18
300 STOCKMAN	Water Temperature Sensor	FU31	18
300 STOCKMAN	Fuel Level Sensor	FU44	30
300 STOCKMAN	Crankcase Side Cover Assembly/Gskt	GM01	48
300 STOCKMAN	A-Arm (Lower)	SB01	30
300 STOCKMAN	A-Arm (Upper)	SB02	30
300 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
300 STOCKMAN	Handlebar	SB09	24
300 STOCKMAN	Handlebar Grip	SB10	12
300 STOCKMAN	Spindle	SB13	30

300 STOCKMAN	Steering Post	SB15	48
300 STOCKMAN	Steering Tie Rod	SB16	18
300 STOCKMAN	Tie Rod End (1)	SB19	18
300 STOCKMAN	Handlebar Clamp Bracket	SB21	30
300 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	90
300 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	24
300 STOCKMAN	Tire	SS05	18
300 STOCKMAN	Shock absorber (Rear Arm)	SU16	18
300 STOCKMAN	Rear Swinging Arm or Bearing	SU32	60



## 400 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
400 STOCKMAN	Battery	AC02	12
400 STOCKMAN	Solenoid	AC06	18
400 STOCKMAN	Starter Motor	AC11	18
400 STOCKMAN	Voltage Regulator/Rectifier	AC14	30
400 STOCKMAN	Fender (Front)	BD01	54
400 STOCKMAN	Frame	BD02	552
400 STOCKMAN	Rack (Front/Rear)	BD05	18
400 STOCKMAN	Seat Lock Assembly	BD07	12
400 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
400 STOCKMAN	Decal, Body (ATV)	BD28	24
400 STOCKMAN	Decal, Warning (ATV)	BD29	12
400 STOCKMAN	Fender (Rear)	BD31	30
400 STOCKMAN	Brake Pressure Switch	BE01	18
400 STOCKMAN	Console/LED Panel	CH04	12
400 STOCKMAN	Bumper (Front)	CH05	30
400 STOCKMAN	Footrest	CH06	12
400 STOCKMAN	Seat Assembly	CH18	12
400 STOCKMAN	Seat Cover/Foam	CH19	30
400 STOCKMAN	Decal/Reflector (Any)	CH24	12
400 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
400 STOCKMAN	Driveshaft (Front)	CT04	30
400 STOCKMAN	Driveshaft (Rear)	CT05	48
400 STOCKMAN	Gearcase, Front	CT07	108
400 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
400 STOCKMAN	Gear Shifting Lever	CT12	12
400 STOCKMAN	Gear Case (Rear)	CT15	90
400 STOCKMAN	Starter Clutch Set	CT16	120
400 STOCKMAN	Starter Idler Gear	CT17	120
400 STOCKMAN	V-Belt Cover/Gasket	CT18	36
400 STOCKMAN	Transmission Inner components	CT19	630
400 STOCKMAN	Shifter Detent/Spring	CT20	24
400 STOCKMAN	Shift Lever Knob	CT21	12
400 STOCKMAN	Gearcase, Front Rebuild	CT23	156
400 STOCKMAN	Shift Linkage	CT26	12
400 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
400 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
400 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
400 STOCKMAN	Brake Assembly/ Calipers	DR02	72
400 STOCKMAN	Brake Disc	DR04	42
400 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
400 STOCKMAN	Brake Hose (Hyd)	DR06	150
400 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
400 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
400 STOCKMAN	Driven Pulley (Complete)	DR31	48
400 STOCKMAN	Master Cylinder Complete	DR53	54
400 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
400 STOCKMAN	Brake Pedal	DR59	24
400 STOCKMAN	Gear Case Bladder	DR64	12
400 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150

400 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
400 STOCKMAN	Master Cylinder (Rear)	DR75	30
400 STOCKMAN	Brake Hose (Auxiliary)	DR86	18
400 STOCKMAN	Battery Cable	EE01	12
400 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
400 STOCKMAN	Air Cleaner Assembly	EG01	18
400 STOCKMAN	Cam Chain Adjuster	EG02	12
400 STOCKMAN	Cam Chain Guide	EG03	72
400 STOCKMAN	Cam Chain Tensioner	EG04	78
400 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
400 STOCKMAN	Cam Shaft Drive Chain	EG06	318
400 STOCKMAN	Carburetor Assembly (Complete)	EG08	42
400 STOCKMAN	Carburetor Assembly (Overhaul)	EG09	72
400 STOCKMAN	Crank Balancer Assembly	EG10	660
400 STOCKMAN	Engine Oil Strainer	EG11	30
400 STOCKMAN	Exhaust Pipe	EG12	42
400 STOCKMAN	Oil Cooler	EG14	36
400 STOCKMAN	Oil Pump Drive Gear	EG16	126
400 STOCKMAN	Oil Pump Driven Gear	EG17	132
400 STOCKMAN	Output/Input Hose	EG18	18
400 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
400 STOCKMAN	Exhaust Heat Shield	EG24	12
400 STOCKMAN	CDI	EL01	12
400 STOCKMAN	Dimmer Switch	EL02	12
400 STOCKMAN	Headlight Assembly	EL03	12
400 STOCKMAN	Headlight Harness	EL04	12
400 STOCKMAN	Ignition Coil (1)	EL05	30
400 STOCKMAN	Ignition Switch	EL06	12
400 STOCKMAN	Stator	EL07	120
400 STOCKMAN	Magneto Case	EL08	78
400 STOCKMAN	Main Wiring Harness	EL09	156
400 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	120
400 STOCKMAN	Oil Sending Unit	EL11	18
400 STOCKMAN	Spark Plug Cap Assembly	EL13	12
400 STOCKMAN	Taillight Housing	EL15	12
400 STOCKMAN	12 Volt Power Adapter	EL22	12
400 STOCKMAN	Cooling Fan Sensor Switch	EL24	18
400 STOCKMAN	Speedometer, Digital	EL29	12
400 STOCKMAN	Speed Sensor Assembly	EL32	12
400 STOCKMAN	Relay	EL53	12
400 STOCKMAN	Gear Shift Position Sensor	EL58	90
400 STOCKMAN	Taillight Harness	EL59	12
400 STOCKMAN	Crankcase	EN06	636
400 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
400 STOCKMAN	Cylinder(s)/Gasket	EN09	168
400 STOCKMAN	Cylinder Honing	EN10	30
400 STOCKMAN	Engine (Complete)	EN12	240
400 STOCKMAN	Engine Rubber Mount(s)	EN14	240
400 STOCKMAN	Exhaust Resonator	EN17	12
400 STOCKMAN	Fan Assembly	EN20	54
400 STOCKMAN	Head and/or Gasket(s)	EN28	138
400 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	180
400 STOCKMAN	Ring Set(s)	EN31	126

400 STOCKMAN	Intake Manifold/Studs/Bolts	EN49	42
400 STOCKMAN	Valve, Intake/Exhaust	EN54	162
400 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
400 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
400 STOCKMAN	Exhaust Seal	EN69	36
400 STOCKMAN	Plastic Magneto Cover	EN70	12
400 STOCKMAN	Gas Tank (Complete)	FU04	24
400 STOCKMAN	Fuel Line	FU07	12
400 STOCKMAN	Air Intake Silencer	FU10	18
400 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
400 STOCKMAN	Throttle Cable	FU16	36
400 STOCKMAN	Choke, Electric	FU43	30
400 STOCKMAN	Fuel Level Sensor	FU44	12
400 STOCKMAN	A-Arm (Lower)	SB01	36
400 STOCKMAN	A-Arm (Upper)	SB02	36
400 STOCKMAN	Shock Absorber (Front/Rear)	SB06	12
400 STOCKMAN	Handlebar	SB09	48
400 STOCKMAN	Handlebar Grip	SB10	12
400 STOCKMAN	Steering Post	SB15	54
400 STOCKMAN	Steering Tie Rod	SB16	24
400 STOCKMAN	Throttle Assembly	SB18	12
400 STOCKMAN	Handlebar Clamp Bracket	SB21	18
400 STOCKMAN	Steering Post Bearing	SB22	72
400 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
400 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
400 STOCKMAN	Steering Ball Joint	SS04	30
400 STOCKMAN	Tire	SS05	18
400 STOCKMAN	Stud/Hub	SS07	12
400 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
400 STOCKMAN	Arm (Rear)	SU01	18

## XC 450

Model	Activity Code Description	Activity Code	Qty In Min
XC 450	Battery	AC02	12
XC 450	Solenoid	AC06	12
XC 450	Starter Motor	AC11	18
XC 450	Voltage Regulator/Rectifier	AC14	48
XC 450	Fender (Front)	BD01	42
XC 450	Frame	BD02	552
XC 450	Seat Lock Assembly	BD07	12
XC 450	Skid Plate (Front/Rear)	BD08	24
XC 450	Decal, Body (ATV)	BD28	24
XC 450	Decal, Warning (ATV)	BD29	12
XC 450	Fender (Rear)	BD31	30
XC 450	Console/LED Panel	CH04	12
XC 450	Bumper (Front)	CH05	12
XC 450	Footrest	CH06	12
XC 450	Seat Assembly	CH18	12
XC 450	Decal/Reflector (Any)	CH24	12
XC 450	Centrifugal Clutch Assembly	CT02	120
XC 450	Driveshaft (Front)	CT04	30
XC 450	Driveshaft (Rear)	CT05	60
XC 450	Gearcase, Front	CT07	108
XC 450	Gear Shifting Cam/Fork	CT11	660
XC 450	Gear Shifting Lever	CT12	12
XC 450	Gear Case (Rear)	CT15	90
XC 450	Starter Clutch Set	CT16	150
XC 450	V-Belt Cover/Gasket	CT18	36
XC 450	Transmission Inner components	CT19	630
XC 450	Shifter Detent/Spring	CT20	24
XC 450	Shift Lever Knob	CT21	12
XC 450	Gearcase, Front Rebuild	CT23	156
XC 450	Shift Linkage	CT26	18
XC 450	Pinion Housing Seal (Front)	CT27	120
XC 450	Pinion Housing Seal (Rear)	CT28	102
XC 450	Clutch Cover/Gasket/Seal	DR01	78
XC 450	Brake Assembly/ Calipers	DR02	72
XC 450	Brake Disc	DR04	42
XC 450	Brake Bleeding (Hyd)	DR05	60
XC 450	Brake Hose (Hyd)	DR06	150
XC 450	Brake Lever (Hyd)/Lock	DR08	12
XC 450	Brake Switch	DR11	12
XC 450	Drive Clutch Stationary Sheave	DR28	42
XC 450	Driven Pulley (Complete)	DR31	48
XC 450	Master Cylinder Complete	DR53	54
XC 450	Drive Clutch Movable Sheave	DR55	42
XC 450	Brake Pedal	DR59	24
XC 450	Gear Case Bladder	DR64	12
XC 450	Gear Case, Rear (Rebuild)	DR65	150
XC 450	Master Cylinder Reservoir (Rear)	DR74	18
XC 450	Master Cylinder (Rear)	DR75	18
XC 450	Brake Hose (Auxiliary)	DR86	18

XC 450	Battery Cable	EE01	12
XC 450	Battery Cable,Relay to Starter	EE04	12
XC 450	Cam Chain Adjuster	EG02	12
XC 450	Cam Chain Guide	EG03	72
XC 450	Cam Chain Tensioner	EG04	78
XC 450	Cam Shaft and/or Sprocket	EG05	90
XC 450	Cam Shaft Drive Chain	EG06	198
XC 450	Crank Balancer Assembly	EG10	600
XC 450	Engine Oil Strainer	EG11	30
XC 450	Exhaust Pipe	EG12	18
XC 450	Oil Pump Drive Gear	EG16	126
XC 450	Oil Pump Driven Gear	EG17	132
XC 450	Output/Input Hose	EG18	18
XC 450	Radiator Assembly	EG20	48
XC 450	Radiator Cap	EG21	12
XC 450	Valve Rocker Arm/Shaft	EG23	78
XC 450	Exhaust Heat Shield	EG24	12
XC 450	Dimmer Switch	EL02	48
XC 450	Headlight Assembly	EL03	12
XC 450	Headlight Harness	EL04	12
XC 450	Ignition Coil (1)	EL05	12
XC 450	Ignition Switch	EL06	18
XC 450	Stator	EL07	150
XC 450	Magneto Case	EL08	108
XC 450	Main Wiring Harness	EL09	156
XC 450	Rotor Assembly/Starter Clutch Set	EL10	150
XC 450	Spark Plug Cap Assembly	EL13	12
XC 450	Taillight Housing	EL15	12
XC 450	Speedometer, Digital	EL29	12
XC 450	Tilt Sensor Switch	EL31	12
XC 450	Speed Sensor Assembly	EL32	18
XC 450	Actuator	EL33	24
XC 450	Relay	EL53	12
XC 450	Gear Shift Position Sensor	EL58	12
XC 450	Taillight Harness	EL59	12
XC 450	Coolant Hose	EN04	24
XC 450	Crankcase	EN06	636
XC 450	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
XC 450	Cylinder(s)/Gasket	EN09	168
XC 450	Cylinder Honing	EN10	30
XC 450	Engine (Complete)	EN12	240
XC 450	Engine Rubber Mount(s)	EN14	240
XC 450	Exhaust Resonator	EN17	12
XC 450	Fan Assembly	EN20	54
XC 450	Head and/or Gasket(s)	EN28	180
XC 450	Intake Flange/Studs/Bolts	EN29	42
XC 450	Piston(s)/Pin(s)/Bearing(s)	EN30	180
XC 450	Ring Set(s)	EN31	126
XC 450	Thermostat and Gasket	EN36	18
XC 450	Valve, Intake/Exhaust	EN54	162
XC 450	Belt Cooling Duct (Front)	EN57	18
XC 450	Belt Cooling Duct (Rear)	EN58	36
XC 450	Oil Pump Chain or Sprocket	EN59	174

XC 450	Water Pump Complete	EN61	60
XC 450	Exhaust Seal	EN69	12
XC 450	Gas Tank (Complete)	FU04	24
XC 450	Fuel Line	FU07	12
XC 450	Fuel Pump	FU09	12
XC 450	Air Intake Silencer	FU10	18
XC 450	Oil Pump/GaskRings (Complete)	FU12	138
XC 450	Throttle Cable	FU16	12
XC 450	ECU	FU21	42
XC 450	Fuel Injectors	FU23	66
XC 450	Throttle Body	FU29	60
XC 450	Throttle Position Sensor	FU30	12
XC 450	Water Temperature Sensor	FU31	12
XC 450	Idle Speed Control Valve	FU45	66
XC 450	Air Pressure Sensor	FU49	54
XC 450	A-Arm (Lower)	SB01	36
XC 450	A-Arm (Upper)	SB02	36
XC 450	Shock Absorber (Front/Rear)	SB06	18
XC 450	Handlebar	SB09	48
XC 450	Handlebar Grip	SB10	12
XC 450	Steering Post	SB15	54
XC 450	Sway Bar Assembly	SB17	24
XC 450	Throttle Assembly	SB18	18
XC 450	Tie Rod End (1)	SB19	24
XC 450	Handlebar Clamp Bracket	SB21	18
XC 450	Steering Post Bearing	SB22	72
XC 450	Axle Shaft (1) (Front or Rear)	SS02	48
XC 450	Hub Bearing (1) (Front)/Knuckle	SS03	60
XC 450	Steering Ball Joint	SS04	30
XC 450	Tire	SS05	18
XC 450	Stud/Hub	SS07	12
XC 450	Axle Seal (Front or Rear)	SS08	60
XC 450	Arm (Rear)	SU01	18

## 450 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
450 STOCKMAN	Battery	AC02	12
450 STOCKMAN	Solenoid	AC06	18
450 STOCKMAN	Starter Motor	AC11	18
450 STOCKMAN	Voltage Regulator/Rectifier	AC14	30
450 STOCKMAN	Fender (Front)	BD01	54
450 STOCKMAN	Frame	BD02	552
450 STOCKMAN	Rack (Front/Rear)	BD05	18
450 STOCKMAN	Seat Lock Assembly	BD07	12
450 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
450 STOCKMAN	Decal, Body (ATV)	BD28	24
450 STOCKMAN	Decal, Warning (ATV)	BD29	12
450 STOCKMAN	Fender (Rear)	BD31	30
450 STOCKMAN	Brake Pressure Switch	BE01	18
450 STOCKMAN	Console/LED Panel	CH04	12
450 STOCKMAN	Bumper (Front)	CH05	30
450 STOCKMAN	Footrest	CH06	12
450 STOCKMAN	Seat Assembly	CH18	12
450 STOCKMAN	Seat Cover/Foam	CH19	30
450 STOCKMAN	Decal/Reflector (Any)	CH24	12
450 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
450 STOCKMAN	Driveshaft (Front)	CT04	30
450 STOCKMAN	Driveshaft (Rear)	CT05	60
450 STOCKMAN	Gearcase, Front	CT07	108
450 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
450 STOCKMAN	Gear Shifting Lever	CT12	12
450 STOCKMAN	Gear Case (Rear)	CT15	90
450 STOCKMAN	Starter Clutch Set	CT16	150
450 STOCKMAN	V-Belt Cover/Gasket	CT18	36
450 STOCKMAN	Transmission Inner components	CT19	630
450 STOCKMAN	Shifter Detent/Spring	CT20	24
450 STOCKMAN	Shift Lever Knob	CT21	12
450 STOCKMAN	Gearcase, Front Rebuild	CT23	156
450 STOCKMAN	Shift Linkage	CT26	18
450 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
450 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
450 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
450 STOCKMAN	Brake Assembly/ Calipers	DR02	72
450 STOCKMAN	Brake Disc	DR04	42
450 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
450 STOCKMAN	Brake Hose (Hyd)	DR06	150
450 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
450 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
450 STOCKMAN	Driven Pulley (Complete)	DR31	48
450 STOCKMAN	Master Cylinder Complete	DR53	54
450 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
450 STOCKMAN	Brake Pedal	DR59	24
450 STOCKMAN	Gear Case Bladder	DR64	12
450 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
450 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18

450 STOCKMAN	Master Cylinder (Rear)	DR75	18
450 STOCKMAN	Brake Hose (Auxiliary)	DR86	18
450 STOCKMAN	Battery Cable	EE01	12
450 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
450 STOCKMAN	Cam Chain Adjuster	EG02	12
450 STOCKMAN	Cam Chain Guide	EG03	72
450 STOCKMAN	Cam Chain Tensioner	EG04	78
450 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
450 STOCKMAN	Cam Shaft Drive Chain	EG06	198
450 STOCKMAN	Crank Balancer Assembly	EG10	600
450 STOCKMAN	Engine Oil Strainer	EG11	30
450 STOCKMAN	Exhaust Pipe	EG12	60
450 STOCKMAN	Oil Pump Drive Gear	EG16	126
450 STOCKMAN	Oil Pump Driven Gear	EG17	132
450 STOCKMAN	Radiator Assembly	EG20	48
450 STOCKMAN	Radiator Cap	EG21	12
450 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
450 STOCKMAN	Exhaust Heat Shield	EG24	24
450 STOCKMAN	Dimmer Switch	EL02	48
450 STOCKMAN	Headlight Assembly	EL03	12
450 STOCKMAN	Ignition Coil (1)	EL05	12
450 STOCKMAN	Ignition Switch	EL06	12
450 STOCKMAN	Stator	EL07	150
450 STOCKMAN	Magneto Case	EL08	108
450 STOCKMAN	Main Wiring Harness	EL09	156
450 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
450 STOCKMAN	Spark Plug Cap Assembly	EL13	12
450 STOCKMAN	Taillight Housing	EL15	12
450 STOCKMAN	12 Volt Power Adapter	EL22	12
450 STOCKMAN	Speedometer, Digital	EL29	12
450 STOCKMAN	Tilt Sensor Switch	EL31	12
450 STOCKMAN	Speed Sensor Assembly	EL32	12
450 STOCKMAN	Actuator	EL33	24
450 STOCKMAN	Relay	EL53	12
450 STOCKMAN	Gear Shift Position Sensor	EL58	12
450 STOCKMAN	Coolant Hose	EN04	24
450 STOCKMAN	Crankcase	EN06	636
450 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
450 STOCKMAN	Cylinder(s)/Gasket	EN09	168
450 STOCKMAN	Cylinder Honing	EN10	30
450 STOCKMAN	Engine (Complete)	EN12	240
450 STOCKMAN	Engine Rubber Mount(s)	EN14	240
450 STOCKMAN	Exhaust Resonator	EN17	18
450 STOCKMAN	Fan Assembly	EN20	54
450 STOCKMAN	Head and/or Gasket(s)	EN28	180
450 STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
450 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	180
450 STOCKMAN	Ring Set(s)	EN31	126
450 STOCKMAN	Thermostat and Gasket	EN36	18
450 STOCKMAN	Valve, Intake/Exhaust	EN54	162
450 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
450 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
450 STOCKMAN	Oil Pump Chain or Sprocket	EN59	174



450 STOCKMAN	Water Pump Complete	EN61	60
450 STOCKMAN	Gas Tank (Complete)	FU04	24
450 STOCKMAN	Fuel Line	FU07	12
450 STOCKMAN	Fuel Pump	FU09	12
450 STOCKMAN	Air Intake Silencer	FU10	18
450 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
450 STOCKMAN	Throttle Cable	FU16	36
450 STOCKMAN	ECU	FU21	24
450 STOCKMAN	Fuel Injectors	FU23	24
450 STOCKMAN	Throttle Body	FU29	42
450 STOCKMAN	Throttle Position Sensor	FU30	18
450 STOCKMAN	Water Temperature Sensor	FU31	12
450 STOCKMAN	Idle Speed Control Valve	FU45	24
450 STOCKMAN	Air Pressure Sensor	FU49	24
450 STOCKMAN	A-Arm (Lower)	SB01	36
450 STOCKMAN	A-Arm (Upper)	SB02	36
450 STOCKMAN	Shock Absorber (Front/Rear)	SB06	12
450 STOCKMAN	Handlebar	SB09	48
450 STOCKMAN	Handlebar Grip	SB10	12
450 STOCKMAN	Steering Post	SB15	54
450 STOCKMAN	Throttle Assembly	SB18	18
450 STOCKMAN	Tie Rod End (1)	SB19	24
450 STOCKMAN	Handlebar Clamp Bracket	SB21	18
450 STOCKMAN	Steering Post Bearing	SB22	72
450 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
450 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
450 STOCKMAN	Steering Ball Joint	SS04	30
450 STOCKMAN	Tire	SS05	18
450 STOCKMAN	Stud/Hub	SS07	12
450 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
450 STOCKMAN	Arm (Rear)	SU01	18

## 500 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
500 STOCKMAN	Battery	AC02	12
500 STOCKMAN	Solenoid	AC06	18
500 STOCKMAN	Starter Motor	AC11	18
500 STOCKMAN	Voltage Regulator/Rectifier	AC14	18
500 STOCKMAN	Fender (Front)	BD01	78
500 STOCKMAN	Frame	BD02	552
500 STOCKMAN	Rack (Front/Rear)	BD05	18
500 STOCKMAN	Seat Lock Assembly	BD07	12
500 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
500 STOCKMAN	Decal, Body (ATV)	BD28	24
500 STOCKMAN	Decal, Warning (ATV)	BD29	12
500 STOCKMAN	Fender (Rear)	BD31	30
500 STOCKMAN	Console/LED Panel	CH04	12
500 STOCKMAN	Bumper (Front)	CH05	30
500 STOCKMAN	Footrest	CH06	12
500 STOCKMAN	Air Intake Duct	CH14	84
500 STOCKMAN	Seat Assembly	CH18	12
500 STOCKMAN	Seat Cover/Foam	CH19	30
500 STOCKMAN	Decal/Reflector (Any)	CH24	12
500 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
500 STOCKMAN	Driveshaft (Front)	CT04	30
500 STOCKMAN	Driveshaft (Rear)	CT05	60
500 STOCKMAN	Gearcase, Front	CT07	108
500 STOCKMAN	Universal Joint Set	CT08	108
500 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
500 STOCKMAN	Gear Shifting Lever	CT12	12
500 STOCKMAN	Gear Case (Rear)	CT15	90
500 STOCKMAN	Starter Clutch Set	CT16	150
500 STOCKMAN	V-Belt Cover/Gasket	CT18	36
500 STOCKMAN	Transmission Inner components	CT19	630
500 STOCKMAN	Shifter Detent/Spring	CT20	24
500 STOCKMAN	Shift Lever Knob	CT21	12
500 STOCKMAN	Gearcase, Front Rebuild	CT23	156
500 STOCKMAN	Shift Linkage	CT26	18
500 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
500 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
500 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
500 STOCKMAN	Brake Assembly/ Calipers	DR02	72
500 STOCKMAN	Brake Disc	DR04	42
500 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
500 STOCKMAN	Brake Hose (Hyd)	DR06	150
500 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
500 STOCKMAN	Brake Switch	DR11	12
500 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
500 STOCKMAN	Driven Pulley (Complete)	DR31	48
500 STOCKMAN	Master Cylinder Complete	DR53	54
500 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
500 STOCKMAN	Brake Pedal	DR59	24
500 STOCKMAN	Gear Case Bladder	DR64	12

500 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
500 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
500 STOCKMAN	Master Cylinder (Rear)	DR75	18
500 STOCKMAN	Brake Hose (Auxiliary)	DR86	18
500 STOCKMAN	Battery Cable	EE01	12
500 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
500 STOCKMAN	Cam Chain Adjuster	EG02	12
500 STOCKMAN	Cam Chain Guide	EG03	72
500 STOCKMAN	Cam Chain Tensioner	EG04	78
500 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
500 STOCKMAN	Cam Shaft Drive Chain	EG06	198
500 STOCKMAN	Crank Balancer Assembly	EG10	600
500 STOCKMAN	Engine Oil Strainer	EG11	30
500 STOCKMAN	Exhaust Pipe	EG12	60
500 STOCKMAN	Oil Pump Drive Gear	EG16	126
500 STOCKMAN	Oil Pump Driven Gear	EG17	132
500 STOCKMAN	Radiator Assembly	EG20	48
500 STOCKMAN	Radiator Cap	EG21	12
500 STOCKMAN	Radiator Screen	EG22	12
500 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
500 STOCKMAN	Exhaust Heat Shield	EG24	24
500 STOCKMAN	Dimmer Switch	EL02	48
500 STOCKMAN	Headlight Assembly	EL03	12
500 STOCKMAN	Ignition Coil (1)	EL05	12
500 STOCKMAN	Ignition Switch	EL06	18
500 STOCKMAN	Stator	EL07	150
500 STOCKMAN	Magneto Case	EL08	108
500 STOCKMAN	Main Wiring Harness	EL09	156
500 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
500 STOCKMAN	Spark Plug Cap Assembly	EL13	12
500 STOCKMAN	Taillight Housing	EL15	12
500 STOCKMAN	12 Volt Power Adapter	EL22	18
500 STOCKMAN	Speedometer, Digital	EL29	12
500 STOCKMAN	Tilt Sensor Switch	EL31	12
500 STOCKMAN	Speed Sensor Assembly	EL32	18
500 STOCKMAN	Actuator	EL33	24
500 STOCKMAN	Relay	EL53	12
500 STOCKMAN	Gear Shift Position Sensor	EL58	12
500 STOCKMAN	Coolant Hose	EN04	24
500 STOCKMAN	Crankcase	EN06	636
500 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
500 STOCKMAN	Cylinder(s)/Gasket	EN09	168
500 STOCKMAN	Cylinder Honing	EN10	30
500 STOCKMAN	Engine (Complete)	EN12	240
500 STOCKMAN	Engine Rubber Mount(s)	EN14	240
500 STOCKMAN	Exhaust Resonator	EN17	18
500 STOCKMAN	Fan Assembly	EN20	54
500 STOCKMAN	Head and/or Gasket(s)	EN28	180
500 STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
500 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	180
500 STOCKMAN	Ring Set(s)	EN31	126
500 STOCKMAN	Thermostat and Gasket	EN36	18
500 STOCKMAN	Valve, Intake/Exhaust	EN54	162

500 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
500 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
500 STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
500 STOCKMAN	Water Pump Complete	EN61	60
500 STOCKMAN	Gas Tank (Complete)	FU04	42
500 STOCKMAN	Fuel Line	FU07	12
500 STOCKMAN	Fuel Pump	FU09	42
500 STOCKMAN	Air Intake Silencer	FU10	18
500 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
500 STOCKMAN	Throttle Cable	FU16	12
500 STOCKMAN	ECU	FU21	12
500 STOCKMAN	Fuel Injectors	FU23	66
500 STOCKMAN	Throttle Body	FU29	60
500 STOCKMAN	Throttle Position Sensor	FU30	12
500 STOCKMAN	Water Temperature Sensor	FU31	12
500 STOCKMAN	Oxygen Sensor	FU39	12
500 STOCKMAN	Idle Speed Control Valve	FU45	66
500 STOCKMAN	Air Pressure Sensor	FU49	54
500 STOCKMAN	A-Arm (Lower)	SB01	36
500 STOCKMAN	A-Arm (Upper)	SB02	36
500 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
500 STOCKMAN	Shock Spring (Front/Rear)	SB07	18
500 STOCKMAN	Handlebar	SB09	48
500 STOCKMAN	Handlebar Grip	SB10	12
500 STOCKMAN	Steering Post	SB15	54
500 STOCKMAN	Throttle Assembly	SB18	18
500 STOCKMAN	Tie Rod End (1)	SB19	24
500 STOCKMAN	Handlebar Clamp Bracket	SB21	18
500 STOCKMAN	Steering Post Bearing	SB22	72
500 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
500 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
500 STOCKMAN	Steering Ball Joint	SS04	30
500 STOCKMAN	Tire	SS05	18
500 STOCKMAN	Stud/Hub	SS07	12
500 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
500 STOCKMAN	Arm (Rear)	SU01	18

# TRV 500 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
TRV 500 STOCKMAN	Battery	AC02	12
TRV 500 STOCKMAN	Solenoid	AC06	18
TRV 500 STOCKMAN	Starter Motor	AC11	18
TRV 500 STOCKMAN	Voltage Regulator/Rectifier	AC14	18
TRV 500 STOCKMAN	Fender (Front)	BD01	78
TRV 500 STOCKMAN	Frame	BD02	552
TRV 500 STOCKMAN	Rack (Front/Rear)	BD05	18
TRV 500 STOCKMAN	Seat Lock Assembly	BD07	12
TRV 500 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
TRV 500 STOCKMAN	Decal, Body (ATV)	BD28	24
TRV 500 STOCKMAN	Decal, Warning (ATV)	BD29	12
TRV 500 STOCKMAN	Fender (Rear)	BD31	30
TRV 500 STOCKMAN	Console/LED Panel	CH04	12
TRV 500 STOCKMAN	Bumper (Front)	CH05	30
TRV 500 STOCKMAN	Footrest	CH06	12
TRV 500 STOCKMAN	Air Intake Duct	CH14	84
TRV 500 STOCKMAN	Seat Assembly	CH18	12
TRV 500 STOCKMAN	Seat Cover/Foam	CH19	30
TRV 500 STOCKMAN	Decal/Reflector (Any)	CH24	12
TRV 500 STOCKMAN	Backrest/Rack Bracket	CH33	12
TRV 500 STOCKMAN	Backrest w/Cover	CH37	12
TRV 500 STOCKMAN	Passenger Handles	CH48	18
TRV 500 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
TRV 500 STOCKMAN	Driveshaft (Front)	CT04	30
TRV 500 STOCKMAN	Driveshaft (Rear)	CT05	60
TRV 500 STOCKMAN	Gearcase, Front	CT07	108
TRV 500 STOCKMAN	Universal Joint Set	CT08	108
TRV 500 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
TRV 500 STOCKMAN	Gear Shifting Lever	CT12	12
TRV 500 STOCKMAN	Gear Case (Rear)	CT15	90
TRV 500 STOCKMAN	Starter Clutch Set	CT16	150
TRV 500 STOCKMAN	V-Belt Cover/Gasket	CT18	36
TRV 500 STOCKMAN	Transmission Inner components	CT19	630
TRV 500 STOCKMAN	Shifter Detent/Spring	CT20	24
TRV 500 STOCKMAN	Shift Lever Knob	CT21	12
TRV 500 STOCKMAN	Gearcase, Front Rebuild	CT23	156
TRV 500 STOCKMAN	Shift Linkage	CT26	18
TRV 500 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
TRV 500 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
TRV 500 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
TRV 500 STOCKMAN	Brake Assembly/ Calipers	DR02	72
TRV 500 STOCKMAN	Brake Disc	DR04	42
TRV 500 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
TRV 500 STOCKMAN	Brake Hose (Hyd)	DR06	150
TRV 500 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
TRV 500 STOCKMAN	Brake Switch	DR11	12
TRV 500 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
TRV 500 STOCKMAN	Driven Pulley (Complete)	DR31	48
TRV 500 STOCKMAN	Master Cylinder Complete	DR53	54

TRV 500 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
TRV 500 STOCKMAN	Brake Pedal	DR59	24
TRV 500 STOCKMAN	Gear Case Bladder	DR64	12
TRV 500 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
TRV 500 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
TRV 500 STOCKMAN	Master Cylinder (Rear)	DR75	18
TRV 500 STOCKMAN	Brake Hose (Auxiliary)	DR86	30
TRV 500 STOCKMAN	Battery Cable	EE01	12
TRV 500 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
TRV 500 STOCKMAN	Cam Chain Adjuster	EG02	12
TRV 500 STOCKMAN	Cam Chain Guide	EG03	72
TRV 500 STOCKMAN	Cam Chain Tensioner	EG04	78
TRV 500 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
TRV 500 STOCKMAN	Cam Shaft Drive Chain	EG06	198
TRV 500 STOCKMAN	Crank Balancer Assembly	EG10	600
TRV 500 STOCKMAN	Engine Oil Strainer	EG11	30
TRV 500 STOCKMAN	Exhaust Pipe	EG12	60
TRV 500 STOCKMAN	Oil Pump Drive Gear	EG16	126
TRV 500 STOCKMAN	Oil Pump Driven Gear	EG17	132
TRV 500 STOCKMAN	Radiator Assembly	EG20	48
TRV 500 STOCKMAN	Radiator Cap	EG21	12
TRV 500 STOCKMAN	Radiator Screen	EG22	12
TRV 500 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
TRV 500 STOCKMAN	Exhaust Heat Shield	EG24	24
TRV 500 STOCKMAN	Dimmer Switch	EL02	48
TRV 500 STOCKMAN	Headlight Assembly	EL03	12
TRV 500 STOCKMAN	Ignition Coil (1)	EL05	12
TRV 500 STOCKMAN	Ignition Switch	EL06	18
TRV 500 STOCKMAN	Stator	EL07	150
TRV 500 STOCKMAN	Magneto Case	EL08	108
TRV 500 STOCKMAN	Main Wiring Harness	EL09	156
TRV 500 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
TRV 500 STOCKMAN	Spark Plug Cap Assembly	EL13	12
TRV 500 STOCKMAN	Taillight Housing	EL15	12
TRV 500 STOCKMAN	12 Volt Power Adapter	EL22	18
TRV 500 STOCKMAN	Speedometer, Digital	EL29	12
TRV 500 STOCKMAN	Tilt Sensor Switch	EL31	12
TRV 500 STOCKMAN	Speed Sensor Assembly	EL32	18
TRV 500 STOCKMAN	Actuator	EL33	24
TRV 500 STOCKMAN	Relay	EL53	12
TRV 500 STOCKMAN	Gear Shift Position Sensor	EL58	12
TRV 500 STOCKMAN	Coolant Hose	EN04	24
TRV 500 STOCKMAN	Crankcase	EN06	636
TRV 500 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
TRV 500 STOCKMAN	Cylinder(s)/Gasket	EN09	168
TRV 500 STOCKMAN	Cylinder Honing	EN10	30
TRV 500 STOCKMAN	Engine (Complete)	EN12	240
TRV 500 STOCKMAN	Engine Rubber Mount(s)	EN14	24
TRV 500 STOCKMAN	Exhaust Resonator	EN17	18
TRV 500 STOCKMAN	Fan Assembly	EN20	54
TRV 500 STOCKMAN	Head and/or Gasket(s)	EN28	180
TRV 500 STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
TRV 500 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	180

TRV 500 STOCKMAN	Ring Set(s)	EN31	126
TRV 500 STOCKMAN	Thermostat and Gasket	EN36	18
TRV 500 STOCKMAN	Valve, Intake/Exhaust	EN54	162
TRV 500 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
TRV 500 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
TRV 500 STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
TRV 500 STOCKMAN	Water Pump Complete	EN61	60
TRV 500 STOCKMAN	Gas Tank (Complete)	FU04	60
TRV 500 STOCKMAN	Fuel Line	FU07	12
TRV 500 STOCKMAN	Fuel Pump	FU09	42
TRV 500 STOCKMAN	Air Intake Silencer	FU10	42
TRV 500 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
TRV 500 STOCKMAN	Throttle Cable	FU16	12
TRV 500 STOCKMAN	ECU	FU21	12
TRV 500 STOCKMAN	Fuel Injectors	FU23	66
TRV 500 STOCKMAN	Throttle Body	FU29	60
TRV 500 STOCKMAN	Throttle Position Sensor	FU30	12
TRV 500 STOCKMAN	Water Temperature Sensor	FU31	18
TRV 500 STOCKMAN	Oxygen Sensor	FU39	12
TRV 500 STOCKMAN	Idle Speed Control Valve	FU45	66
TRV 500 STOCKMAN	Air Pressure Sensor	FU49	54
TRV 500 STOCKMAN	Intake Boot	FU50	24
TRV 500 STOCKMAN	A-Arm (Lower)	SB01	36
TRV 500 STOCKMAN	A-Arm (Upper)	SB02	36
TRV 500 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
TRV 500 STOCKMAN	Shock Spring (Front/Rear)	SB07	18
TRV 500 STOCKMAN	Handlebar	SB09	48
TRV 500 STOCKMAN	Handlebar Grip	SB10	12
TRV 500 STOCKMAN	Steering Post	SB15	54
TRV 500 STOCKMAN	Throttle Assembly	SB18	18
TRV 500 STOCKMAN	Tie Rod End (1)	SB19	24
TRV 500 STOCKMAN	Handlebar Clamp Bracket	SB21	18
TRV 500 STOCKMAN	Steering Post Bearing	SB22	72
TRV 500 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
TRV 500 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
TRV 500 STOCKMAN	Steering Ball Joint	SS04	30
TRV 500 STOCKMAN	Tire	SS05	18
TRV 500 STOCKMAN	Stud/Hub	SS07	12
TRV 500 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
TRV 500 STOCKMAN	Arm (Rear)	SU01	18
TRV 500 STOCKMAN	Complete Warranty Claim	WP00	5

## 500 XT STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
500 XT STOCKMAN	Battery	AC02	12
500 XT STOCKMAN	Solenoid	AC06	18
500 XT STOCKMAN	Starter Motor	AC11	18
500 XT STOCKMAN	Voltage Regulator/Rectifier	AC14	18
500 XT STOCKMAN	Fender (Front)	BD01	78
500 XT STOCKMAN	Frame	BD02	552
500 XT STOCKMAN	Rack (Front/Rear)	BD05	18
500 XT STOCKMAN	Seat Lock Assembly	BD07	12
500 XT STOCKMAN	Skid Plate (Front/Rear)	BD08	24
500 XT STOCKMAN	Decal, Body (ATV)	BD28	24
500 XT STOCKMAN	Decal, Warning (ATV)	BD29	12
500 XT STOCKMAN	Fender (Rear)	BD31	30
500 XT STOCKMAN	Console/LED Panel	CH04	12
500 XT STOCKMAN	Bumper (Front)	CH05	30
500 XT STOCKMAN	Footrest	CH06	12
500 XT STOCKMAN	Air Intake Duct	CH14	84
500 XT STOCKMAN	Seat Assembly	CH18	12
500 XT STOCKMAN	Seat Cover/Foam	CH19	30
500 XT STOCKMAN	Decal/Reflector (Any)	CH24	12
500 XT STOCKMAN	Centrifugal Clutch Assembly	CT02	120
500 XT STOCKMAN	Driveshaft (Front)	CT04	30
500 XT STOCKMAN	Driveshaft (Rear)	CT05	60
500 XT STOCKMAN	Gearcase, Front	CT07	108
500 XT STOCKMAN	Universal Joint Set	CT08	108
500 XT STOCKMAN	Gear Shifting Cam/Fork	CT11	660
500 XT STOCKMAN	Gear Shifting Lever	CT12	12
500 XT STOCKMAN	Gear Case (Rear)	CT15	90
500 XT STOCKMAN	Starter Clutch Set	CT16	150
500 XT STOCKMAN	V-Belt Cover/Gasket	CT18	36
500 XT STOCKMAN	Transmission Inner components	CT19	630
500 XT STOCKMAN	Shifter Detent/Spring	CT20	24
500 XT STOCKMAN	Shift Lever Knob	CT21	12
500 XT STOCKMAN	Gearcase, Front Rebuild	CT23	156
500 XT STOCKMAN	Shift Linkage	CT26	18
500 XT STOCKMAN	Pinion Housing Seal (Front)	CT27	120
500 XT STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
500 XT STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
500 XT STOCKMAN	Brake Assembly/ Calipers	DR02	72
500 XT STOCKMAN	Brake Disc	DR04	42
500 XT STOCKMAN	Brake Bleeding (Hyd)	DR05	60
500 XT STOCKMAN	Brake Hose (Hyd)	DR06	150
500 XT STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
500 XT STOCKMAN	Brake Switch	DR11	12
500 XT STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
500 XT STOCKMAN	Driven Pulley (Complete)	DR31	48
500 XT STOCKMAN	Master Cylinder Complete	DR53	54
500 XT STOCKMAN	Drive Clutch Movable Sheave	DR55	42
500 XT STOCKMAN	Brake Pedal	DR59	24
500 XT STOCKMAN	Gear Case Bladder	DR64	12



500 XT STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
500 XT STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
500 XT STOCKMAN	Master Cylinder (Rear)	DR75	18
500 XT STOCKMAN	Brake Hose (Auxiliary)	DR86	18
500 XT STOCKMAN	Battery Cable	EE01	12
500 XT STOCKMAN	Battery Cable,Relay to Starter	EE04	12
500 XT STOCKMAN	Cam Chain Adjuster	EG02	12
500 XT STOCKMAN	Cam Chain Guide	EG03	72
500 XT STOCKMAN	Cam Chain Tensioner	EG04	78
500 XT STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
500 XT STOCKMAN	Cam Shaft Drive Chain	EG06	198
500 XT STOCKMAN	Crank Balancer Assembly	EG10	600
500 XT STOCKMAN	Engine Oil Strainer	EG11	30
500 XT STOCKMAN	Exhaust Pipe	EG12	60
500 XT STOCKMAN	Oil Pump Drive Gear	EG16	126
500 XT STOCKMAN	Oil Pump Driven Gear	EG17	132
500 XT STOCKMAN	Radiator Assembly	EG20	48
500 XT STOCKMAN	Radiator Cap	EG21	12
500 XT STOCKMAN	Radiator Screen	EG22	12
500 XT STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
500 XT STOCKMAN	Exhaust Heat Shield	EG24	24
500 XT STOCKMAN	Dimmer Switch	EL02	48
500 XT STOCKMAN	Headlight Assembly	EL03	12
500 XT STOCKMAN	Ignition Coil (1)	EL05	12
500 XT STOCKMAN	Ignition Switch	EL06	18
500 XT STOCKMAN	Stator	EL07	150
500 XT STOCKMAN	Magneto Case	EL08	108
500 XT STOCKMAN	Main Wiring Harness	EL09	156
500 XT STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
500 XT STOCKMAN	Spark Plug Cap Assembly	EL13	12
500 XT STOCKMAN	Taillight Housing	EL15	12
500 XT STOCKMAN	12 Volt Power Adapter	EL22	18
500 XT STOCKMAN	Speedometer, Digital	EL29	12
500 XT STOCKMAN	Tilt Sensor Switch	EL31	12
500 XT STOCKMAN	Speed Sensor Assembly	EL32	18
500 XT STOCKMAN	Actuator	EL33	24
500 XT STOCKMAN	Relay	EL53	12
500 XT STOCKMAN	Gear Shift Position Sensor	EL58	12
500 XT STOCKMAN	Coolant Hose	EN04	24
500 XT STOCKMAN	Crankcase	EN06	636
500 XT STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
500 XT STOCKMAN	Cylinder(s)/Gasket	EN09	168
500 XT STOCKMAN	Cylinder Honing	EN10	30
500 XT STOCKMAN	Engine (Complete)	EN12	240
500 XT STOCKMAN	Engine Rubber Mount(s)	EN14	240
500 XT STOCKMAN	Exhaust Resonator	EN17	18
500 XT STOCKMAN	Fan Assembly	EN20	54
500 XT STOCKMAN	Head and/or Gasket(s)	EN28	180
500 XT STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
500 XT STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	180
500 XT STOCKMAN	Ring Set(s)	EN31	126
500 XT STOCKMAN	Thermostat and Gasket	EN36	18
500 XT STOCKMAN	Valve, Intake/Exhaust	EN54	162

500 XT STOCKMAN	Belt Cooling Duct (Front)	EN57	18
500 XT STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
500 XT STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
500 XT STOCKMAN	Water Pump Complete	EN61	60
500 XT STOCKMAN	Gas Tank (Complete)	FU04	42
500 XT STOCKMAN	Fuel Line	FU07	12
500 XT STOCKMAN	Fuel Pump	FU09	42
500 XT STOCKMAN	Air Intake Silencer	FU10	18
500 XT STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
500 XT STOCKMAN	Throttle Cable	FU16	12
500 XT STOCKMAN	ECU	FU21	12
500 XT STOCKMAN	Fuel Injectors	FU23	66
500 XT STOCKMAN	Throttle Body	FU29	60
500 XT STOCKMAN	Throttle Position Sensor	FU30	12
500 XT STOCKMAN	Water Temperature Sensor	FU31	12
500 XT STOCKMAN	Oxygen Sensor	FU39	12
500 XT STOCKMAN	Idle Speed Control Valve	FU45	66
500 XT STOCKMAN	Air Pressure Sensor	FU49	54
500 XT STOCKMAN	A-Arm (Lower)	SB01	36
500 XT STOCKMAN	A-Arm (Upper)	SB02	36
500 XT STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
500 XT STOCKMAN	Shock Spring (Front/Rear)	SB07	18
500 XT STOCKMAN	Handlebar	SB09	48
500 XT STOCKMAN	Handlebar Grip	SB10	12
500 XT STOCKMAN	Steering Post	SB15	54
500 XT STOCKMAN	Throttle Assembly	SB18	18
500 XT STOCKMAN	Tie Rod End (1)	SB19	24
500 XT STOCKMAN	Handlebar Clamp Bracket	SB21	18
500 XT STOCKMAN	Steering Post Bearing	SB22	72
500 XT STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
500 XT STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
500 XT STOCKMAN	Steering Ball Joint	SS04	30
500 XT STOCKMAN	Tire	SS05	18
500 XT STOCKMAN	Stud/Hub	SS07	12
500 XT STOCKMAN	Axle Seal (Front or Rear)	SS08	60
500 XT STOCKMAN	Arm (Rear)	SU01	18
500 XT STOCKMAN	Complete Warranty Claim	WP00	5

## 550 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
550 STOCKMAN	Battery	AC02	12
550 STOCKMAN	Solenoid	AC06	18
550 STOCKMAN	Starter Motor	AC11	18
550 STOCKMAN	Voltage Regulator/Rectifier	AC14	18
550 STOCKMAN	Fender (Front)	BD01	78
550 STOCKMAN	Frame	BD02	552
550 STOCKMAN	Rack (Front/Rear)	BD05	18
550 STOCKMAN	Seat Lock Assembly	BD07	12
550 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
550 STOCKMAN	Decal, Body (ATV)	BD28	24
550 STOCKMAN	Decal, Warning (ATV)	BD29	12
550 STOCKMAN	Fender (Rear)	BD31	30
550 STOCKMAN	Console/LED Panel	CH04	12
550 STOCKMAN	Bumper (Front)	CH05	30
550 STOCKMAN	Footrest	CH06	12
550 STOCKMAN	Air Intake Duct	CH14	84
550 STOCKMAN	Seat Assembly	CH18	12
550 STOCKMAN	Seat Cover/Foam	CH19	30
550 STOCKMAN	Decal/Reflector (Any)	CH24	12
550 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
550 STOCKMAN	Driveshaft (Front)	CT04	30
550 STOCKMAN	Driveshaft (Rear)	CT05	60
550 STOCKMAN	Gearcase, Front	CT07	108
550 STOCKMAN	Universal Joint Set	CT08	108
550 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
550 STOCKMAN	Gear Shifting Lever	CT12	12
550 STOCKMAN	Gear Case (Rear)	CT15	90
550 STOCKMAN	Starter Clutch Set	CT16	150
550 STOCKMAN	V-Belt Cover/Gasket	CT18	36
550 STOCKMAN	Transmission Inner components	CT19	630
550 STOCKMAN	Shifter Detent/Spring	CT20	24
550 STOCKMAN	Shift Lever Knob	CT21	12
550 STOCKMAN	Gearcase, Front Rebuild	CT23	156
550 STOCKMAN	Shift Linkage	CT26	18
550 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
550 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
550 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
550 STOCKMAN	Brake Assembly/ Calipers	DR02	72
550 STOCKMAN	Brake Disc	DR04	42
550 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
550 STOCKMAN	Brake Hose (Hyd)	DR06	150
550 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
550 STOCKMAN	Brake Switch	DR11	12
550 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
550 STOCKMAN	Driven Pulley (Complete)	DR31	48
550 STOCKMAN	Master Cylinder Complete	DR53	54
550 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
550 STOCKMAN	Brake Pedal	DR59	24
550 STOCKMAN	Gear Case Bladder	DR64	12

550 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
550 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
550 STOCKMAN	Master Cylinder (Rear)	DR75	18
550 STOCKMAN	Brake Hose (Auxiliary)	DR86	18
550 STOCKMAN	Battery Cable	EE01	12
550 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
550 STOCKMAN	Cam Chain Adjuster	EG02	12
550 STOCKMAN	Cam Chain Guide	EG03	72
550 STOCKMAN	Cam Chain Tensioner	EG04	78
550 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
550 STOCKMAN	Cam Shaft Drive Chain	EG06	198
550 STOCKMAN	Crank Balancer Assembly	EG10	600
550 STOCKMAN	Engine Oil Strainer	EG11	90
550 STOCKMAN	Exhaust Pipe	EG12	60
550 STOCKMAN	Oil Pump Drive Gear	EG16	126
550 STOCKMAN	Oil Pump Driven Gear	EG17	132
550 STOCKMAN	Radiator Assembly	EG20	48
550 STOCKMAN	Radiator Cap	EG21	12
550 STOCKMAN	Radiator Screen	EG22	12
550 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
550 STOCKMAN	Exhaust Heat Shield	EG24	24
550 STOCKMAN	Dimmer Switch	EL02	48
550 STOCKMAN	Headlight Assembly	EL03	12
550 STOCKMAN	Ignition Coil (1)	EL05	12
550 STOCKMAN	Ignition Switch	EL06	18
550 STOCKMAN	Stator	EL07	150
550 STOCKMAN	Magneto Case	EL08	108
550 STOCKMAN	Main Wiring Harness	EL09	156
550 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
550 STOCKMAN	Spark Plug Cap Assembly	EL13	12
550 STOCKMAN	Taillight Housing	EL15	12
550 STOCKMAN	12 Volt Power Adapter	EL22	18
550 STOCKMAN	Warmer Control	EL28	12
550 STOCKMAN	Speedometer, Digital	EL29	12
550 STOCKMAN	Tilt Sensor Switch	EL31	12
550 STOCKMAN	Speed Sensor Assembly	EL32	18
550 STOCKMAN	Actuator	EL33	24
550 STOCKMAN	Relay	EL53	12
550 STOCKMAN	Gear Shift Position Sensor	EL58	120
550 STOCKMAN	Coolant Hose	EN04	24
550 STOCKMAN	Crankcase	EN06	636
550 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
550 STOCKMAN	Cylinder(s)/Gasket	EN09	216
550 STOCKMAN	Cylinder Honing	EN10	30
550 STOCKMAN	Engine (Complete)	EN12	240
550 STOCKMAN	Engine Rubber Mount(s)	EN14	240
550 STOCKMAN	Exhaust Resonator	EN17	18
550 STOCKMAN	Fan Assembly	EN20	54
550 STOCKMAN	Head and/or Gasket(s)	EN28	180
550 STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
550 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	228
550 STOCKMAN	Ring Set(s)	EN31	222
550 STOCKMAN	Thermostat and Gasket	EN36	18

550 STOCKMAN	Water Pump Components	EN38	120
550 STOCKMAN	Valve, Intake/Exhaust	EN54	240
550 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
550 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
550 STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
550 STOCKMAN	Water Pump Complete	EN61	60
550 STOCKMAN	Plastic Magneto Cover	EN70	18
550 STOCKMAN	Engine Short Block	EN87	600
550 STOCKMAN	Gas Tank (Complete)	FU04	42
550 STOCKMAN	Fuel Line	FU07	12
550 STOCKMAN	Fuel Pump	FU09	42
550 STOCKMAN	Air Intake Silencer	FU10	42
550 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
550 STOCKMAN	Throttle Cable	FU16	12
550 STOCKMAN	Air Temperature Sensor	FU17	18
550 STOCKMAN	ECU	FU21	12
550 STOCKMAN	Fuel Injectors	FU23	66
550 STOCKMAN	Throttle Body	FU29	60
550 STOCKMAN	Throttle Position Sensor	FU30	12
550 STOCKMAN	Water Temperature Sensor	FU31	12
550 STOCKMAN	Idle Speed Control Valve	FU45	66
550 STOCKMAN	Air Pressure Sensor	FU49	54
550 STOCKMAN	Intake Boot	FU50	24
550 STOCKMAN	A-Arm (Lower)	SB01	36
550 STOCKMAN	A-Arm (Upper)	SB02	36
550 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
550 STOCKMAN	Shock Spring (Front/Rear)	SB07	18
550 STOCKMAN	Handlebar	SB09	48
550 STOCKMAN	Handlebar Grip	SB10	12
550 STOCKMAN	Steering Post	SB15	54
550 STOCKMAN	Throttle Assembly	SB18	18
550 STOCKMAN	Tie Rod End (1)	SB19	24
550 STOCKMAN	Handlebar Clamp Bracket	SB21	18
550 STOCKMAN	Steering Post Bearing	SB22	72
550 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
550 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
550 STOCKMAN	Steering Ball Joint	SS04	30
550 STOCKMAN	Tire	SS05	18
550 STOCKMAN	Stud/Hub	SS07	12
550 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
550 STOCKMAN	Arm (Rear)	SU01	18
550 STOCKMAN	Complete Warranty Claim	WP00	5

## 550 XT STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
550 XT STOCKMAN	Battery	AC02	12
550 XT STOCKMAN	Solenoid	AC06	18
550 XT STOCKMAN	Starter Motor	AC11	18
550 XT STOCKMAN	Voltage Regulator/Rectifier	AC14	18
550 XT STOCKMAN	Fender (Front)	BD01	78
550 XT STOCKMAN	Frame	BD02	552
550 XT STOCKMAN	Rack (Front/Rear)	BD05	18
550 XT STOCKMAN	Seat Lock Assembly	BD07	12
550 XT STOCKMAN	Skid Plate (Front/Rear)	BD08	24
550 XT STOCKMAN	Decal, Body (ATV)	BD28	24
550 XT STOCKMAN	Decal, Warning (ATV)	BD29	12
550 XT STOCKMAN	Fender (Rear)	BD31	30
550 XT STOCKMAN	Console/LED Panel	CH04	12
550 XT STOCKMAN	Bumper (Front)	CH05	30
550 XT STOCKMAN	Footrest	CH06	12
550 XT STOCKMAN	Air Intake Duct	CH14	84
550 XT STOCKMAN	Seat Assembly	CH18	12
550 XT STOCKMAN	Seat Cover/Foam	CH19	30
550 XT STOCKMAN	Decal/Reflector (Any)	CH24	12
550 XT STOCKMAN	Centrifugal Clutch Assembly	CT02	120
550 XT STOCKMAN	Driveshaft (Front)	CT04	30
550 XT STOCKMAN	Driveshaft (Rear)	CT05	60
550 XT STOCKMAN	Gearcase, Front	CT07	156
550 XT STOCKMAN	Universal Joint Set	CT08	108
550 XT STOCKMAN	Gear Shifting Cam/Fork	CT11	660
550 XT STOCKMAN	Gear Shifting Lever	CT12	12
550 XT STOCKMAN	Gear Case (Rear)	CT15	90
550 XT STOCKMAN	Starter Clutch Set	CT16	150
550 XT STOCKMAN	V-Belt Cover/Gasket	CT18	36
550 XT STOCKMAN	Transmission Inner components	CT19	630
550 XT STOCKMAN	Shifter Detent/Spring	CT20	24
550 XT STOCKMAN	Shift Lever Knob	CT21	12
550 XT STOCKMAN	Gearcase, Front Rebuild	CT23	198
550 XT STOCKMAN	Shift Linkage	CT26	18
550 XT STOCKMAN	Pinion Housing Seal (Front)	CT27	120
550 XT STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
550 XT STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
550 XT STOCKMAN	Brake Assembly/ Calipers	DR02	72
550 XT STOCKMAN	Brake Disc	DR04	42
550 XT STOCKMAN	Brake Bleeding (Hyd)	DR05	60
550 XT STOCKMAN	Brake Hose (Hyd)	DR06	150
550 XT STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
550 XT STOCKMAN	Brake Switch	DR11	12
550 XT STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
550 XT STOCKMAN	Driven Pulley (Complete)	DR31	48
550 XT STOCKMAN	Master Cylinder Complete	DR53	54
550 XT STOCKMAN	Drive Clutch Movable Sheave	DR55	42
550 XT STOCKMAN	Brake Pedal	DR59	24
550 XT STOCKMAN	Gear Case Bladder	DR64	12

550 XT STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
550 XT STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
550 XT STOCKMAN	Master Cylinder (Rear)	DR75	18
550 XT STOCKMAN	Brake Hose (Auxiliary)	DR86	18
550 XT STOCKMAN	Battery Cable	EE01	12
550 XT STOCKMAN	Battery Cable,Relay to Starter	EE04	12
550 XT STOCKMAN	Cam Chain Adjuster	EG02	12
550 XT STOCKMAN	Cam Chain Guide	EG03	72
550 XT STOCKMAN	Cam Chain Tensioner	EG04	78
550 XT STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
550 XT STOCKMAN	Cam Shaft Drive Chain	EG06	198
550 XT STOCKMAN	Crank Balancer Assembly	EG10	600
550 XT STOCKMAN	Engine Oil Strainer	EG11	90
550 XT STOCKMAN	Exhaust Pipe	EG12	60
550 XT STOCKMAN	Oil Pump Drive Gear	EG16	126
550 XT STOCKMAN	Oil Pump Driven Gear	EG17	132
550 XT STOCKMAN	Radiator Assembly	EG20	48
550 XT STOCKMAN	Radiator Cap	EG21	12
550 XT STOCKMAN	Radiator Screen	EG22	12
550 XT STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
550 XT STOCKMAN	Exhaust Heat Shield	EG24	24
550 XT STOCKMAN	Dimmer Switch	EL02	48
550 XT STOCKMAN	Headlight Assembly	EL03	12
550 XT STOCKMAN	Ignition Coil (1)	EL05	12
550 XT STOCKMAN	Ignition Switch	EL06	18
550 XT STOCKMAN	Stator	EL07	150
550 XT STOCKMAN	Magneto Case	EL08	108
550 XT STOCKMAN	Main Wiring Harness	EL09	156
550 XT STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
550 XT STOCKMAN	Spark Plug Cap Assembly	EL13	12
550 XT STOCKMAN	Taillight Housing	EL15	12
550 XT STOCKMAN	12 Volt Power Adapter	EL22	18
550 XT STOCKMAN	Speedometer, Digital	EL29	12
550 XT STOCKMAN	Tilt Sensor Switch	EL31	12
550 XT STOCKMAN	Speed Sensor Assembly	EL32	18
550 XT STOCKMAN	Actuator	EL33	24
550 XT STOCKMAN	Relay	EL53	12
550 XT STOCKMAN	Gear Shift Position Sensor	EL58	120
550 XT STOCKMAN	Electric Power Steering	EL61	54
550 XT STOCKMAN	Coolant Hose	EN04	24
550 XT STOCKMAN	Crankcase	EN06	636
550 XT STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
550 XT STOCKMAN	Cylinder(s)/Gasket	EN09	216
550 XT STOCKMAN	Cylinder Honing	EN10	30
550 XT STOCKMAN	Engine (Complete)	EN12	240
550 XT STOCKMAN	Engine Rubber Mount(s)	EN14	240
550 XT STOCKMAN	Exhaust Resonator	EN17	18
550 XT STOCKMAN	Fan Assembly	EN20	54
550 XT STOCKMAN	Head and/or Gasket(s)	EN28	180
550 XT STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
550 XT STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	228
550 XT STOCKMAN	Ring Set(s)	EN31	222
550 XT STOCKMAN	Thermostat and Gasket	EN36	18

550 XT STOCKMAN	Water Pump Components	EN38	120
550 XT STOCKMAN	Valve, Intake/Exhaust	EN54	240
550 XT STOCKMAN	Belt Cooling Duct (Front)	EN57	18
550 XT STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
550 XT STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
550 XT STOCKMAN	Water Pump Complete	EN61	60
550 XT STOCKMAN	Plastic Magneto Cover	EN70	18
550 XT STOCKMAN	Engine Short Block	EN87	600
550 XT STOCKMAN	Gas Tank (Complete)	FU04	42
550 XT STOCKMAN	Fuel Line	FU07	12
550 XT STOCKMAN	Fuel Pump	FU09	42
550 XT STOCKMAN	Air Intake Silencer	FU10	42
550 XT STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
550 XT STOCKMAN	Throttle Cable	FU16	12
550 XT STOCKMAN	Air Temperature Sensor	FU17	18
550 XT STOCKMAN	ECU	FU21	12
550 XT STOCKMAN	Fuel Injectors	FU23	66
550 XT STOCKMAN	Throttle Body	FU29	60
550 XT STOCKMAN	Throttle Position Sensor	FU30	12
550 XT STOCKMAN	Water Temperature Sensor	FU31	12
550 XT STOCKMAN	Idle Speed Control Valve	FU45	66
550 XT STOCKMAN	Air Pressure Sensor	FU49	54
550 XT STOCKMAN	Intake Boot	FU50	24
550 XT STOCKMAN	A-Arm (Lower)	SB01	36
550 XT STOCKMAN	A-Arm (Upper)	SB02	36
550 XT STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
550 XT STOCKMAN	Shock Spring (Front/Rear)	SB07	18
550 XT STOCKMAN	Handlebar	SB09	48
550 XT STOCKMAN	Handlebar Grip	SB10	12
550 XT STOCKMAN	Steering Post	SB15	24
550 XT STOCKMAN	Sway Bar Assembly	SB17	24
550 XT STOCKMAN	Throttle Assembly	SB18	18
550 XT STOCKMAN	Tie Rod End (1)	SB19	24
550 XT STOCKMAN	Handlebar Clamp Bracket	SB21	18
550 XT STOCKMAN	Steering Post Bearing	SB22	72
550 XT STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
550 XT STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
550 XT STOCKMAN	Steering Ball Joint	SS04	30
550 XT STOCKMAN	Tire	SS05	18
550 XT STOCKMAN	Stud/Hub	SS07	12
550 XT STOCKMAN	Axle Seal (Front or Rear)	SS08	60
550 XT STOCKMAN	Arm (Rear)	SU01	18



## 700 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
700 STOCKMAN	Battery	AC02	12
700 STOCKMAN	Solenoid	AC06	18
700 STOCKMAN	Starter Motor	AC11	18
700 STOCKMAN	Voltage Regulator/Rectifier	AC14	18
700 STOCKMAN	Fender (Front)	BD01	78
700 STOCKMAN	Frame	BD02	552
700 STOCKMAN	Rack (Front/Rear)	BD05	18
700 STOCKMAN	Seat Lock Assembly	BD07	12
700 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
700 STOCKMAN	Decal, Body (ATV)	BD28	24
700 STOCKMAN	Decal, Warning (ATV)	BD29	12
700 STOCKMAN	Fender (Rear)	BD31	30
700 STOCKMAN	Console/LED Panel	CH04	12
700 STOCKMAN	Bumper (Front)	CH05	30
700 STOCKMAN	Footrest	CH06	12
700 STOCKMAN	Air Intake Duct	CH14	84
700 STOCKMAN	Seat Assembly	CH18	12
700 STOCKMAN	Seat Cover/Foam	CH19	30
700 STOCKMAN	Decal/Reflector (Any)	CH24	12
700 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
700 STOCKMAN	Driveshaft (Front)	CT04	30
700 STOCKMAN	Driveshaft (Rear)	CT05	60
700 STOCKMAN	Gearcase, Front	CT07	108
700 STOCKMAN	Universal Joint Set	CT08	108
700 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
700 STOCKMAN	Gear Shifting Lever	CT12	12
700 STOCKMAN	Gear Case (Rear)	CT15	90
700 STOCKMAN	Starter Clutch Set	CT16	150
700 STOCKMAN	V-Belt Cover/Gasket	CT18	36
700 STOCKMAN	Transmission Inner components	CT19	630
700 STOCKMAN	Shifter Detent/Spring	CT20	24
700 STOCKMAN	Shift Lever Knob	CT21	12
700 STOCKMAN	Gearcase, Front Rebuild	CT23	156
700 STOCKMAN	Shift Linkage	CT26	18
700 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
700 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
700 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
700 STOCKMAN	Brake Assembly/ Calipers	DR02	72
700 STOCKMAN	Brake Disc	DR04	42
700 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
700 STOCKMAN	Brake Hose (Hyd)	DR06	150
700 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
700 STOCKMAN	Brake Switch	DR11	12
700 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
700 STOCKMAN	Driven Pulley (Complete)	DR31	48
700 STOCKMAN	Master Cylinder Complete	DR53	54
700 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
700 STOCKMAN	Brake Pedal	DR59	24
700 STOCKMAN	Gear Case Bladder	DR64	12

700 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
700 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
700 STOCKMAN	Master Cylinder (Rear)	DR75	18
700 STOCKMAN	Brake Hose (Auxiliary)	DR86	18
700 STOCKMAN	Battery Cable	EE01	12
700 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
700 STOCKMAN	Cam Chain Adjuster	EG02	12
700 STOCKMAN	Cam Chain Guide	EG03	72
700 STOCKMAN	Cam Chain Tensioner	EG04	78
700 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
700 STOCKMAN	Cam Shaft Drive Chain	EG06	198
700 STOCKMAN	Crank Balancer Assembly	EG10	600
700 STOCKMAN	Engine Oil Strainer	EG11	90
700 STOCKMAN	Exhaust Pipe	EG12	60
700 STOCKMAN	Oil Pump Drive Gear	EG16	126
700 STOCKMAN	Oil Pump Driven Gear	EG17	132
700 STOCKMAN	Radiator Assembly	EG20	48
700 STOCKMAN	Radiator Cap	EG21	12
700 STOCKMAN	Radiator Screen	EG22	12
700 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
700 STOCKMAN	Exhaust Heat Shield	EG24	24
700 STOCKMAN	Dimmer Switch	EL02	48
700 STOCKMAN	Headlight Assembly	EL03	12
700 STOCKMAN	Ignition Coil (1)	EL05	12
700 STOCKMAN	Ignition Switch	EL06	18
700 STOCKMAN	Stator	EL07	150
700 STOCKMAN	Magneto Case	EL08	108
700 STOCKMAN	Main Wiring Harness	EL09	156
700 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
700 STOCKMAN	Spark Plug Cap Assembly	EL13	12
700 STOCKMAN	Taillight Housing	EL15	12
700 STOCKMAN	12 Volt Power Adapter	EL22	18
700 STOCKMAN	Speedometer, Digital	EL29	12
700 STOCKMAN	Tilt Sensor Switch	EL31	12
700 STOCKMAN	Speed Sensor Assembly	EL32	18
700 STOCKMAN	Actuator	EL33	24
700 STOCKMAN	Relay	EL53	12
700 STOCKMAN	Gear Shift Position Sensor	EL58	120
700 STOCKMAN	Coolant Hose	EN04	24
700 STOCKMAN	Crankcase	EN06	636
700 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
700 STOCKMAN	Cylinder(s)/Gasket	EN09	216
700 STOCKMAN	Cylinder Honing	EN10	30
700 STOCKMAN	Engine (Complete)	EN12	240
700 STOCKMAN	Engine Rubber Mount(s)	EN14	240
700 STOCKMAN	Exhaust Resonator	EN17	18
700 STOCKMAN	Fan Assembly	EN20	54
700 STOCKMAN	Head and/or Gasket(s)	EN28	180
700 STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
700 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	228
700 STOCKMAN	Ring Set(s)	EN31	222
700 STOCKMAN	Thermostat and Gasket	EN36	18
700 STOCKMAN	Water Pump Components	EN38	120

700 STOCKMAN	Valve, Intake/Exhaust	EN54	240
700 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
700 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
700 STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
700 STOCKMAN	Water Pump Complete	EN61	60
700 STOCKMAN	Plastic Magneto Cover	EN70	18
700 STOCKMAN	Engine Short Block	EN87	600
700 STOCKMAN	Gas Tank (Complete)	FU04	42
700 STOCKMAN	Fuel Line	FU07	12
700 STOCKMAN	Fuel Pump	FU09	42
700 STOCKMAN	Air Intake Silencer	FU10	42
700 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
700 STOCKMAN	Throttle Cable	FU16	12
700 STOCKMAN	Air Temperature Sensor	FU17	18
700 STOCKMAN	ECU	FU21	12
700 STOCKMAN	Fuel Injectors	FU23	66
700 STOCKMAN	Throttle Body	FU29	60
700 STOCKMAN	Throttle Position Sensor	FU30	12
700 STOCKMAN	Water Temperature Sensor	FU31	12
700 STOCKMAN	Oxygen Sensor	FU39	12
700 STOCKMAN	Idle Speed Control Valve	FU45	66
700 STOCKMAN	Air Pressure Sensor	FU49	54
700 STOCKMAN	Intake Boot	FU50	24
700 STOCKMAN	A-Arm (Lower)	SB01	36
700 STOCKMAN	A-Arm (Upper)	SB02	36
700 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
700 STOCKMAN	Shock Spring (Front/Rear)	SB07	18
700 STOCKMAN	Handlebar	SB09	48
700 STOCKMAN	Handlebar Grip	SB10	12
700 STOCKMAN	Steering Post	SB15	54
700 STOCKMAN	Throttle Assembly	SB18	18
700 STOCKMAN	Tie Rod End (1)	SB19	24
700 STOCKMAN	Handlebar Clamp Bracket	SB21	18
700 STOCKMAN	Steering Post Bearing	SB22	72
700 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
700 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
700 STOCKMAN	Steering Ball Joint	SS04	30
700 STOCKMAN	Tire	SS05	18
700 STOCKMAN	Stud/Hub	SS07	12
700 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
700 STOCKMAN	Arm (Rear)	SU01	18

## 700 XT STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
700 XT STOCKMAN	Battery	AC02	12
700 XT STOCKMAN	Solenoid	AC06	18
700 XT STOCKMAN	Starter Motor	AC11	18
700 XT STOCKMAN	Voltage Regulator/Rectifier	AC14	18
700 XT STOCKMAN	Fender (Front)	BD01	78
700 XT STOCKMAN	Frame	BD02	552
700 XT STOCKMAN	Rack (Front/Rear)	BD05	18
700 XT STOCKMAN	Seat Lock Assembly	BD07	12
700 XT STOCKMAN	Skid Plate (Front/Rear)	BD08	24
700 XT STOCKMAN	Decal, Body (ATV)	BD28	24
700 XT STOCKMAN	Decal, Warning (ATV)	BD29	12
700 XT STOCKMAN	Fender (Rear)	BD31	30
700 XT STOCKMAN	Console/LED Panel	CH04	12
700 XT STOCKMAN	Bumper (Front)	CH05	30
700 XT STOCKMAN	Footrest	CH06	12
700 XT STOCKMAN	Air Intake Duct	CH14	84
700 XT STOCKMAN	Seat Assembly	CH18	12
700 XT STOCKMAN	Seat Cover/Foam	CH19	30
700 XT STOCKMAN	Decal/Reflector (Any)	CH24	12
700 XT STOCKMAN	Centrifugal Clutch Assembly	CT02	120
700 XT STOCKMAN	Driveshaft (Front)	CT04	30
700 XT STOCKMAN	Driveshaft (Rear)	CT05	60
700 XT STOCKMAN	Gearcase, Front	CT07	156
700 XT STOCKMAN	Universal Joint Set	CT08	108
700 XT STOCKMAN	Gear Shifting Cam/Fork	CT11	660
700 XT STOCKMAN	Gear Shifting Lever	CT12	12
700 XT STOCKMAN	Gear Case (Rear)	CT15	90
700 XT STOCKMAN	Starter Clutch Set	CT16	150
700 XT STOCKMAN	V-Belt Cover/Gasket	CT18	36
700 XT STOCKMAN	Transmission Inner components	CT19	630
700 XT STOCKMAN	Shifter Detent/Spring	CT20	24
700 XT STOCKMAN	Shift Lever Knob	CT21	12
700 XT STOCKMAN	Gearcase, Front Rebuild	CT23	198
700 XT STOCKMAN	Shift Linkage	CT26	18
700 XT STOCKMAN	Pinion Housing Seal (Front)	CT27	120
700 XT STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
700 XT STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
700 XT STOCKMAN	Brake Assembly/ Calipers	DR02	72
700 XT STOCKMAN	Brake Disc	DR04	42
700 XT STOCKMAN	Brake Bleeding (Hyd)	DR05	60
700 XT STOCKMAN	Brake Hose (Hyd)	DR06	150
700 XT STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
700 XT STOCKMAN	Brake Switch	DR11	12
700 XT STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
700 XT STOCKMAN	Driven Pulley (Complete)	DR31	48
700 XT STOCKMAN	Master Cylinder Complete	DR53	54
700 XT STOCKMAN	Drive Clutch Movable Sheave	DR55	42
700 XT STOCKMAN	Brake Pedal	DR59	24
700 XT STOCKMAN	Gear Case Bladder	DR64	12

700 XT STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
700 XT STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
700 XT STOCKMAN	Master Cylinder (Rear)	DR75	18
700 XT STOCKMAN	Brake Hose (Auxiliary)	DR86	18
700 XT STOCKMAN	Battery Cable	EE01	12
700 XT STOCKMAN	Battery Cable,Relay to Starter	EE04	12
700 XT STOCKMAN	Cam Chain Adjuster	EG02	12
700 XT STOCKMAN	Cam Chain Guide	EG03	72
700 XT STOCKMAN	Cam Chain Tensioner	EG04	78
700 XT STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
700 XT STOCKMAN	Cam Shaft Drive Chain	EG06	198
700 XT STOCKMAN	Crank Balancer Assembly	EG10	600
700 XT STOCKMAN	Engine Oil Strainer	EG11	90
700 XT STOCKMAN	Exhaust Pipe	EG12	60
700 XT STOCKMAN	Oil Pump Drive Gear	EG16	126
700 XT STOCKMAN	Oil Pump Driven Gear	EG17	132
700 XT STOCKMAN	Radiator Assembly	EG20	48
700 XT STOCKMAN	Radiator Cap	EG21	12
700 XT STOCKMAN	Radiator Screen	EG22	12
700 XT STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
700 XT STOCKMAN	Exhaust Heat Shield	EG24	24
700 XT STOCKMAN	Dimmer Switch	EL02	48
700 XT STOCKMAN	Headlight Assembly	EL03	12
700 XT STOCKMAN	Ignition Coil (1)	EL05	12
700 XT STOCKMAN	Ignition Switch	EL06	18
700 XT STOCKMAN	Stator	EL07	150
700 XT STOCKMAN	Magneto Case	EL08	108
700 XT STOCKMAN	Main Wiring Harness	EL09	156
700 XT STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
700 XT STOCKMAN	Spark Plug Cap Assembly	EL13	12
700 XT STOCKMAN	Taillight Housing	EL15	12
700 XT STOCKMAN	12 Volt Power Adapter	EL22	18
700 XT STOCKMAN	Speedometer, Digital	EL29	12
700 XT STOCKMAN	Tilt Sensor Switch	EL31	12
700 XT STOCKMAN	Speed Sensor Assembly	EL32	18
700 XT STOCKMAN	Actuator	EL33	24
700 XT STOCKMAN	Relay	EL53	12
700 XT STOCKMAN	Gear Shift Position Sensor	EL58	120
700 XT STOCKMAN	Electric Power Steering	EL61	54
700 XT STOCKMAN	Coolant Hose	EN04	24
700 XT STOCKMAN	Crankcase	EN06	636
700 XT STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
700 XT STOCKMAN	Cylinder(s)/Gasket	EN09	216
700 XT STOCKMAN	Cylinder Honing	EN10	30
700 XT STOCKMAN	Engine (Complete)	EN12	240
700 XT STOCKMAN	Engine Rubber Mount(s)	EN14	240
700 XT STOCKMAN	Exhaust Resonator	EN17	18
700 XT STOCKMAN	Fan Assembly	EN20	54
700 XT STOCKMAN	Head and/or Gasket(s)	EN28	180
700 XT STOCKMAN	Intake Flange/Studs/Bolts	EN29	42
700 XT STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	228
700 XT STOCKMAN	Ring Set(s)	EN31	222
700 XT STOCKMAN	Thermostat and Gasket	EN36	18

700 XT STOCKMAN	Water Pump Components	EN38	120
700 XT STOCKMAN	Valve, Intake/Exhaust	EN54	240
700 XT STOCKMAN	Belt Cooling Duct (Front)	EN57	18
700 XT STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
700 XT STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
700 XT STOCKMAN	Water Pump Complete	EN61	60
700 XT STOCKMAN	Plastic Magneto Cover	EN70	18
700 XT STOCKMAN	Engine Short Block	EN87	600
700 XT STOCKMAN	Gas Tank (Complete)	FU04	42
700 XT STOCKMAN	Fuel Line	FU07	12
700 XT STOCKMAN	Fuel Pump	FU09	42
700 XT STOCKMAN	Air Intake Silencer	FU10	42
700 XT STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
700 XT STOCKMAN	Throttle Cable	FU16	12
700 XT STOCKMAN	Air Temperature Sensor	FU17	18
700 XT STOCKMAN	ECU	FU21	12
700 XT STOCKMAN	Fuel Injectors	FU23	66
700 XT STOCKMAN	Throttle Body	FU29	60
700 XT STOCKMAN	Throttle Position Sensor	FU30	12
700 XT STOCKMAN	Water Temperature Sensor	FU31	12
700 XT STOCKMAN	Oxygen Sensor	FU39	12
700 XT STOCKMAN	Idle Speed Control Valve	FU45	66
700 XT STOCKMAN	Air Pressure Sensor	FU49	54
700 XT STOCKMAN	Intake Boot	FU50	24
700 XT STOCKMAN	A-Arm (Lower)	SB01	36
700 XT STOCKMAN	A-Arm (Upper)	SB02	36
700 XT STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
700 XT STOCKMAN	Shock Spring (Front/Rear)	SB07	18
700 XT STOCKMAN	Handlebar	SB09	48
700 XT STOCKMAN	Handlebar Grip	SB10	12
700 XT STOCKMAN	Steering Post	SB15	24
700 XT STOCKMAN	Sway Bar Assembly	SB17	24
700 XT STOCKMAN	Throttle Assembly	SB18	18
700 XT STOCKMAN	Tie Rod End (1)	SB19	24
700 XT STOCKMAN	Handlebar Clamp Bracket	SB21	18
700 XT STOCKMAN	Steering Post Bearing	SB22	72
700 XT STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
700 XT STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
700 XT STOCKMAN	Steering Ball Joint	SS04	30
700 XT STOCKMAN	Tire	SS05	18
700 XT STOCKMAN	Stud/Hub	SS07	12
700 XT STOCKMAN	Axle Seal (Front or Rear)	SS08	60
700 XT STOCKMAN	Arm (Rear)	SU01	18
700 XT STOCKMAN	Complete Warranty Claim	WP00	5

## TRV 700 XT STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
TRV 700 XT STOCKMAN	Battery	AC02	12
TRV 700 XT STOCKMAN	Solenoid	AC06	18
TRV 700 XT STOCKMAN	Starter Motor	AC11	18
TRV 700 XT STOCKMAN	Voltage Regulator/Rectifier	AC14	18
TRV 700 XT STOCKMAN	Fender (Front)	BD01	78
TRV 700 XT STOCKMAN	Frame	BD02	552
TRV 700 XT STOCKMAN	Rack (Front/Rear)	BD05	18
TRV 700 XT STOCKMAN	Seat Lock Assembly	BD07	12
TRV 700 XT STOCKMAN	Skid Plate (Front/Rear)	BD08	24
TRV 700 XT STOCKMAN	Decal, Body (ATV)	BD28	24
TRV 700 XT STOCKMAN	Decal, Warning (ATV)	BD29	12
TRV 700 XT STOCKMAN	Fender (Rear)	BD31	30
TRV 700 XT STOCKMAN	Console/LED Panel	CH04	12
TRV 700 XT STOCKMAN	Bumper (Front)	CH05	30
TRV 700 XT STOCKMAN	Footrest	CH06	12
TRV 700 XT STOCKMAN	Air Intake Duct	CH14	84
TRV 700 XT STOCKMAN	Seat Assembly	CH18	12
TRV 700 XT STOCKMAN	Seat Cover/Foam	CH19	30
TRV 700 XT STOCKMAN	Decal/Reflector (Any)	CH24	12
TRV 700 XT STOCKMAN	Backrest/Rack Bracket	CH33	12
TRV 700 XT STOCKMAN	Backrest w/Cover	CH37	12
TRV 700 XT STOCKMAN	Passenger Handles	CH48	18
TRV 700 XT STOCKMAN	Centrifugal Clutch Assembly	CT02	120
TRV 700 XT STOCKMAN	Driveshaft (Front)	CT04	30
TRV 700 XT STOCKMAN	Driveshaft (Rear)	CT05	60
TRV 700 XT STOCKMAN	Gearcase, Front	CT07	156
TRV 700 XT STOCKMAN	Universal Joint Set	CT08	108
TRV 700 XT STOCKMAN	Gear Shifting Cam/Fork	CT11	660
TRV 700 XT STOCKMAN	Gear Shifting Lever	CT12	12
TRV 700 XT STOCKMAN	Gear Case (Rear)	CT15	90
TRV 700 XT STOCKMAN	Starter Clutch Set	CT16	150
TRV 700 XT STOCKMAN	V-Belt Cover/Gasket	CT18	36
TRV 700 XT STOCKMAN	Transmission Inner components	CT19	630
TRV 700 XT STOCKMAN	Shifter Detent/Spring	CT20	24
TRV 700 XT STOCKMAN	Shift Lever Knob	CT21	12
TRV 700 XT STOCKMAN	Gearcase, Front Rebuild	CT23	198
TRV 700 XT STOCKMAN	Shift Linkage	CT26	18
TRV 700 XT STOCKMAN	Pinion Housing Seal (Front)	CT27	120
TRV 700 XT STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
TRV 700 XT STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
TRV 700 XT STOCKMAN	Brake Assembly/ Calipers	DR02	72
TRV 700 XT STOCKMAN	Brake Disc	DR04	42
TRV 700 XT STOCKMAN	Brake Bleeding (Hyd)	DR05	60
TRV 700 XT STOCKMAN	Brake Hose (Hyd)	DR06	150
TRV 700 XT STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
TRV 700 XT STOCKMAN	Brake Switch	DR11	12
TRV 700 XT STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
TRV 700 XT STOCKMAN	Driven Pulley (Complete)	DR31	48
TRV 700 XT STOCKMAN	Master Cylinder Complete	DR53	54

TRV 700 XT STOCKMAN	Drive Clutch Movable Sheave	DR55	42
TRV 700 XT STOCKMAN	Brake Pedal	DR59	24
TRV 700 XT STOCKMAN	Gear Case Bladder	DR64	12
TRV 700 XT STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
TRV 700 XT STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
TRV 700 XT STOCKMAN	Master Cylinder (Rear)	DR75	18
TRV 700 XT STOCKMAN	Brake Hose (Auxiliary)	DR86	30
TRV 700 XT STOCKMAN	Battery Cable	EE01	12
TRV 700 XT STOCKMAN	Battery Cable,Relay to Starter	EE04	12
TRV 700 XT STOCKMAN	Cam Chain Adjuster	EG02	12
TRV 700 XT STOCKMAN	Cam Chain Guide	EG03	72
TRV 700 XT STOCKMAN	Cam Chain Tensioner	EG04	78
TRV 700 XT STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
TRV 700 XT STOCKMAN	Cam Shaft Drive Chain	EG06	198
TRV 700 XT STOCKMAN	Crank Balancer Assembly	EG10	600
TRV 700 XT STOCKMAN	Engine Oil Strainer	EG11	90
TRV 700 XT STOCKMAN	Exhaust Pipe	EG12	60
TRV 700 XT STOCKMAN	Oil Pump Drive Gear	EG16	126
TRV 700 XT STOCKMAN	Oil Pump Driven Gear	EG17	132
TRV 700 XT STOCKMAN	Radiator Assembly	EG20	48
TRV 700 XT STOCKMAN	Radiator Cap	EG21	12
TRV 700 XT STOCKMAN	Radiator Screen	EG22	12
TRV 700 XT STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
TRV 700 XT STOCKMAN	Exhaust Heat Shield	EG24	24
TRV 700 XT STOCKMAN	Dimmer Switch	EL02	48
TRV 700 XT STOCKMAN	Headlight Assembly	EL03	12
TRV 700 XT STOCKMAN	Ignition Coil (1)	EL05	12
TRV 700 XT STOCKMAN	Ignition Switch	EL06	18
TRV 700 XT STOCKMAN	Stator	EL07	150
TRV 700 XT STOCKMAN	Magneto Case	EL08	108
TRV 700 XT STOCKMAN	Main Wiring Harness	EL09	156
TRV 700 XT STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
TRV 700 XT STOCKMAN	Spark Plug Cap Assembly	EL13	12
TRV 700 XT STOCKMAN	Taillight Housing	EL15	12
TRV 700 XT STOCKMAN	12 Volt Power Adapter	EL22	18
TRV 700 XT STOCKMAN	Speedometer, Digital	EL29	12
TRV 700 XT STOCKMAN	Tilt Sensor Switch	EL31	12
TRV 700 XT STOCKMAN	Speed Sensor Assembly	EL32	18
TRV 700 XT STOCKMAN	Actuator	EL33	24
TRV 700 XT STOCKMAN	Relay	EL53	12
TRV 700 XT STOCKMAN	Gear Shift Position Sensor	EL58	120
TRV 700 XT STOCKMAN	Electric Power Steering	EL61	54
TRV 700 XT STOCKMAN	Coolant Hose	EN04	24
TRV 700 XT STOCKMAN	Crankcase	EN06	636
TRV 700 XT STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
TRV 700 XT STOCKMAN	Cylinder(s)/Gasket	EN09	216
TRV 700 XT STOCKMAN	Cylinder Honing	EN10	30
TRV 700 XT STOCKMAN	Engine (Complete)	EN12	240
TRV 700 XT STOCKMAN	Engine Rubber Mount(s)	EN14	24
TRV 700 XT STOCKMAN	Exhaust Resonator	EN17	18
TRV 700 XT STOCKMAN	Fan Assembly	EN20	54
TRV 700 XT STOCKMAN	Head and/or Gasket(s)	EN28	180
TRV 700 XT STOCKMAN	Intake Flange/Studs/Bolts	EN29	42



TRV 700 XT STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	228
TRV 700 XT STOCKMAN	Ring Set(s)	EN31	222
TRV 700 XT STOCKMAN	Thermostat and Gasket	EN36	18
TRV 700 XT STOCKMAN	Water Pump Components	EN38	120
TRV 700 XT STOCKMAN	Valve, Intake/Exhaust	EN54	240
TRV 700 XT STOCKMAN	Belt Cooling Duct (Front)	EN57	18
TRV 700 XT STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
TRV 700 XT STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
TRV 700 XT STOCKMAN	Water Pump Complete	EN61	60
TRV 700 XT STOCKMAN	Plastic Magneto Cover	EN70	18
TRV 700 XT STOCKMAN	Engine Short Block	EN87	600
TRV 700 XT STOCKMAN	Gas Tank (Complete)	FU04	60
TRV 700 XT STOCKMAN	Fuel Line	FU07	12
TRV 700 XT STOCKMAN	Fuel Pump	FU09	42
TRV 700 XT STOCKMAN	Air Intake Silencer	FU10	42
TRV 700 XT STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
TRV 700 XT STOCKMAN	Throttle Cable	FU16	12
TRV 700 XT STOCKMAN	Air Temperature Sensor	FU17	18
TRV 700 XT STOCKMAN	ECU	FU21	12
TRV 700 XT STOCKMAN	Fuel Injectors	FU23	66
TRV 700 XT STOCKMAN	Throttle Body	FU29	60
TRV 700 XT STOCKMAN	Throttle Position Sensor	FU30	12
TRV 700 XT STOCKMAN	Water Temperature Sensor	FU31	18
TRV 700 XT STOCKMAN	Oxygen Sensor	FU39	12
TRV 700 XT STOCKMAN	Idle Speed Control Valve	FU45	66
TRV 700 XT STOCKMAN	Air Pressure Sensor	FU49	54
TRV 700 XT STOCKMAN	Intake Boot	FU50	24
TRV 700 XT STOCKMAN	A-Arm (Lower)	SB01	36
TRV 700 XT STOCKMAN	A-Arm (Upper)	SB02	36
TRV 700 XT STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
TRV 700 XT STOCKMAN	Shock Spring (Front/Rear)	SB07	18
TRV 700 XT STOCKMAN	Handlebar	SB09	48
TRV 700 XT STOCKMAN	Handlebar Grip	SB10	12
TRV 700 XT STOCKMAN	Steering Post	SB15	24
TRV 700 XT STOCKMAN	Sway Bar Assembly	SB17	24
TRV 700 XT STOCKMAN	Throttle Assembly	SB18	18
TRV 700 XT STOCKMAN	Tie Rod End (1)	SB19	24
TRV 700 XT STOCKMAN	Handlebar Clamp Bracket	SB21	18
TRV 700 XT STOCKMAN	Steering Post Bearing	SB22	72
TRV 700 XT STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
TRV 700 XT STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
TRV 700 XT STOCKMAN	Steering Ball Joint	SS04	30
TRV 700 XT STOCKMAN	Tire	SS05	18
TRV 700 XT STOCKMAN	Stud/Hub	SS07	12
TRV 700 XT STOCKMAN	Axle Seal (Front or Rear)	SS08	60
TRV 700 XT STOCKMAN	Arm (Rear)	SU01	18
TRV 700 XT STOCKMAN	Complete Warranty Claim	WP00	5

# DIESEL 700 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
DIESEL 700 STOCKMAN	Battery	AC02	12
DIESEL 700 STOCKMAN	Electric Start Ring Gear	AC03	126
DIESEL 700 STOCKMAN	Solenoid	AC06	18
DIESEL 700 STOCKMAN	Starter Motor	AC11	42
DIESEL 700 STOCKMAN	Alternator Assembly	AC15	30
DIESEL 700 STOCKMAN	Alternator Arm/Bracket/Belt	AC18	18
DIESEL 700 STOCKMAN	Winch Main Control Switch	AC20	24
DIESEL 700 STOCKMAN	Winch Solenoid	AC21	18
DIESEL 700 STOCKMAN	Winch Wiring Harness	AC22	60
DIESEL 700 STOCKMAN	Alternator Bracket	AC23	102
DIESEL 700 STOCKMAN	Winch	AC24	18
DIESEL 700 STOCKMAN	Fender (Front)	BD01	78
DIESEL 700 STOCKMAN	Frame	BD02	672
DIESEL 700 STOCKMAN	Rack (Front/Rear)	BD05	18
DIESEL 700 STOCKMAN	Seat Lock Assembly	BD07	12
DIESEL 700 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
DIESEL 700 STOCKMAN	Decal, Body (ATV)	BD28	24
DIESEL 700 STOCKMAN	Decal, Warning (ATV)	BD29	12
DIESEL 700 STOCKMAN	Fender (Rear)	BD31	30
DIESEL 700 STOCKMAN	Brake Pressure Switch	BE01	12
DIESEL 700 STOCKMAN	Console/LED Panel	CH04	12
DIESEL 700 STOCKMAN	Bumper (Front)	CH05	30
DIESEL 700 STOCKMAN	Footrest	CH06	12
DIESEL 700 STOCKMAN	Air Intake Duct	CH14	84
DIESEL 700 STOCKMAN	Seat Assembly	CH18	12
DIESEL 700 STOCKMAN	Seat Cover/Foam	CH19	30
DIESEL 700 STOCKMAN	Decal/Reflector (Any)	CH24	12
DIESEL 700 STOCKMAN	Driveshaft (Front)	CT04	30
DIESEL 700 STOCKMAN	Driveshaft (Rear)	CT05	60
DIESEL 700 STOCKMAN	Gearcase, Front	CT07	108
DIESEL 700 STOCKMAN	Universal Joint Set	CT08	108
DIESEL 700 STOCKMAN	Gear Shift Cable/Rod	CT09	18
DIESEL 700 STOCKMAN	Gear Shifting Cam/Fork	CT11	264
DIESEL 700 STOCKMAN	Gear Case (Rear)	CT15	90
DIESEL 700 STOCKMAN	Transmission Inner components	CT19	264
DIESEL 700 STOCKMAN	Shifter Detent/Spring	CT20	12
DIESEL 700 STOCKMAN	Gearcase, Front Rebuild	CT23	156
DIESEL 700 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
DIESEL 700 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
DIESEL 700 STOCKMAN	Transmission (Complete)	CT29	144
DIESEL 700 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	66
DIESEL 700 STOCKMAN	Brake Assembly/ Calipers	DR02	72
DIESEL 700 STOCKMAN	Brake Disc	DR04	42
DIESEL 700 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
DIESEL 700 STOCKMAN	Brake Hose (Hyd)	DR06	150
DIESEL 700 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
DIESEL 700 STOCKMAN	Brake Switch	DR11	12
DIESEL 700 STOCKMAN	Drive Clutch Stationary Sheave	DR28	78
DIESEL 700 STOCKMAN	Driven Pulley (Complete)	DR31	84

DIESEL 700 STOCKMAN	Reverse Shift Lever	DR48	36
DIESEL 700 STOCKMAN	Master Cylinder Complete	DR53	54
DIESEL 700 STOCKMAN	Drive Clutch Movable Sheave	DR55	72
DIESEL 700 STOCKMAN	Brake Pedal	DR59	24
DIESEL 700 STOCKMAN	Gear Case Bladder	DR64	12
DIESEL 700 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
DIESEL 700 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
DIESEL 700 STOCKMAN	Master Cylinder (Rear)	DR75	18
DIESEL 700 STOCKMAN	Brake Hose (Auxiliary)	DR86	30
DIESEL 700 STOCKMAN	Clutch Cover (Inner)	DR87	144
DIESEL 700 STOCKMAN	Transmission Mounting Bracket	DR88	12
DIESEL 700 STOCKMAN	Transmission Level Stick/Tube	DR89	12
DIESEL 700 STOCKMAN	Battery Cable	EE01	72
DIESEL 700 STOCKMAN	Air Cleaner Assembly	EG01	60
DIESEL 700 STOCKMAN	Cam Shaft and/or Sprocket	EG05	306
DIESEL 700 STOCKMAN	Exhaust Pipe	EG12	30
DIESEL 700 STOCKMAN	Radiator Assembly	EG20	48
DIESEL 700 STOCKMAN	Radiator Cap	EG21	12
DIESEL 700 STOCKMAN	Radiator Screen	EG22	12
DIESEL 700 STOCKMAN	Valve Rocker Arm/Shaft	EG23	108
DIESEL 700 STOCKMAN	Exhaust Heat Shield	EG24	24
DIESEL 700 STOCKMAN	Air Cleaner Mounting Bracket	EG25	60
DIESEL 700 STOCKMAN	Dimmer Switch	EL02	48
DIESEL 700 STOCKMAN	Headlight Assembly	EL03	12
DIESEL 700 STOCKMAN	Ignition Switch	EL06	18
DIESEL 700 STOCKMAN	Main Wiring Harness	EL09	156
DIESEL 700 STOCKMAN	Sending Unit (Temperature)	EL12	30
DIESEL 700 STOCKMAN	Taillight Housing	EL15	12
DIESEL 700 STOCKMAN	12 Volt Power Adapter	EL22	12
DIESEL 700 STOCKMAN	Cooling Fan Sensor Switch	EL24	48
DIESEL 700 STOCKMAN	Oil Pressure Switch	EL25	54
DIESEL 700 STOCKMAN	Speedometer, Digital	EL29	12
DIESEL 700 STOCKMAN	Speed Sensor Assembly	EL32	12
DIESEL 700 STOCKMAN	Actuator	EL33	24
DIESEL 700 STOCKMAN	Relay	EL53	12
DIESEL 700 STOCKMAN	Belt Cooling Fan	EL57	60
DIESEL 700 STOCKMAN	Gear Shift Position Sensor	EL58	150
DIESEL 700 STOCKMAN	Coolant Filler Neck	EN01	12
DIESEL 700 STOCKMAN	Coolant Hose	EN04	66
DIESEL 700 STOCKMAN	Crankcase	EN06	780
DIESEL 700 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	540
DIESEL 700 STOCKMAN	Cylinder Honing	EN10	30
DIESEL 700 STOCKMAN	Engine (Complete)	EN12	360
DIESEL 700 STOCKMAN	Engine Rubber Mount(s)	EN14	24
DIESEL 700 STOCKMAN	Exhaust Manifold	EN16	24
DIESEL 700 STOCKMAN	Exhaust Resonator	EN17	12
DIESEL 700 STOCKMAN	Fan Assembly	EN20	54
DIESEL 700 STOCKMAN	Head and/or Gasket(s)	EN28	384
DIESEL 700 STOCKMAN	Intake Flange/Studs/Bolts	EN29	48
DIESEL 700 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	510
DIESEL 700 STOCKMAN	Ring Set(s)	EN31	510
DIESEL 700 STOCKMAN	Thermostat and Gasket	EN36	30
DIESEL 700 STOCKMAN	Valves/Springs/Stems/Seals	EN45	420

DIESEL 700 STOCKMAN	Oil Pan Assembly	EN47	420
DIESEL 700 STOCKMAN	Intake Manifold/Studs/Bolts	EN49	60
DIESEL 700 STOCKMAN	Oil Level TubStroke)	EN51	12
DIESEL 700 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
DIESEL 700 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
DIESEL 700 STOCKMAN	Water Pump Complete	EN61	120
DIESEL 700 STOCKMAN	Engine Bracket (Front)	EN71	66
DIESEL 700 STOCKMAN	Belt Guard	EN73	78
DIESEL 700 STOCKMAN	Cam Drive Pulley	EN74	96
DIESEL 700 STOCKMAN	Crankshaft Pulley	EN75	30
DIESEL 700 STOCKMAN	Flange/Seal (Right Side)	EN76	96
DIESEL 700 STOCKMAN	Flywheel	EN77	96
DIESEL 700 STOCKMAN	Glow Plugs	EN78	18
DIESEL 700 STOCKMAN	Governor Flyweight Assy	EN79	108
DIESEL 700 STOCKMAN	Engine/Trans Mntg Plate (Left )	EN80	12
DIESEL 700 STOCKMAN	Suction Valve	EN81	12
DIESEL 700 STOCKMAN	Timing Belt	EN82	96
DIESEL 700 STOCKMAN	Timing Belt Drive Pulley	EN83	96
DIESEL 700 STOCKMAN	Timing Belt Idler Pulley	EN84	96
DIESEL 700 STOCKMAN	Rocker Arm Cover Gasket	EN85	84
DIESEL 700 STOCKMAN	Governor Spring/Fork Assy	EN86	270
DIESEL 700 STOCKMAN	Gas Tank (Complete)	FU04	60
DIESEL 700 STOCKMAN	Fuel Line	FU07	12
DIESEL 700 STOCKMAN	Fuel Pump	FU09	24
DIESEL 700 STOCKMAN	Air Intake Silencer	FU10	72
DIESEL 700 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	114
DIESEL 700 STOCKMAN	Throttle Cable	FU16	60
DIESEL 700 STOCKMAN	Delivery Pipe	FU19	108
DIESEL 700 STOCKMAN	Fuel Injectors	FU23	204
DIESEL 700 STOCKMAN	Fuel Level Sensor	FU44	42
DIESEL 700 STOCKMAN	Fuel Pump Push Rod	FU47	18
DIESEL 700 STOCKMAN	Fuel Solenoid	FU48	30
DIESEL 700 STOCKMAN	A-Arm (Lower)	SB01	18
DIESEL 700 STOCKMAN	A-Arm (Upper)	SB02	36
DIESEL 700 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
DIESEL 700 STOCKMAN	Shock Spring (Front/Rear)	SB07	24
DIESEL 700 STOCKMAN	Handlebar	SB09	48
DIESEL 700 STOCKMAN	Handlebar Grip	SB10	12
DIESEL 700 STOCKMAN	Steering Post	SB15	54
DIESEL 700 STOCKMAN	Throttle Assembly	SB18	18
DIESEL 700 STOCKMAN	Tie Rod End (1)	SB19	24
DIESEL 700 STOCKMAN	Handlebar Clamp Bracket	SB21	18
DIESEL 700 STOCKMAN	Steering Post Bearing	SB22	72
DIESEL 700 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
DIESEL 700 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
DIESEL 700 STOCKMAN	Steering Ball Joint	SS04	30
DIESEL 700 STOCKMAN	Tire	SS05	18
DIESEL 700 STOCKMAN	Stud/Hub	SS07	12
DIESEL 700 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
DIESEL 700 STOCKMAN	Arm (Rear)	SU01	18

## TBX 700 STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
TBX 700 STOCKMAN	Battery	AC02	12
TBX 700 STOCKMAN	Solenoid	AC06	18
TBX 700 STOCKMAN	Starter Motor	AC11	18
TBX 700 STOCKMAN	Voltage Regulator/Rectifier	AC14	18
TBX 700 STOCKMAN	Fender (Front)	BD01	78
TBX 700 STOCKMAN	Frame	BD02	552
TBX 700 STOCKMAN	Rack (Front/Rear)	BD05	18
TBX 700 STOCKMAN	Seat Lock Assembly	BD07	12
TBX 700 STOCKMAN	Skid Plate (Front/Rear)	BD08	24
TBX 700 STOCKMAN	Cargo Box	BD12	48
TBX 700 STOCKMAN	Decal, Body (ATV)	BD28	24
TBX 700 STOCKMAN	Decal, Warning (ATV)	BD29	12
TBX 700 STOCKMAN	Lift Support	BD35	12
TBX 700 STOCKMAN	Console/LED Panel	CH04	12
TBX 700 STOCKMAN	Bumper (Front)	CH05	30
TBX 700 STOCKMAN	Footrest	CH06	12
TBX 700 STOCKMAN	Air Intake Duct	CH14	84
TBX 700 STOCKMAN	Seat Assembly	CH18	12
TBX 700 STOCKMAN	Seat Cover/Foam	CH19	30
TBX 700 STOCKMAN	Decal/Reflector (Any)	CH24	12
TBX 700 STOCKMAN	Tailgate Assembly	CH31	24
TBX 700 STOCKMAN	Storage Compartment	CH46	18
TBX 700 STOCKMAN	Centrifugal Clutch Assembly	CT02	120
TBX 700 STOCKMAN	Driveshaft (Front)	CT04	30
TBX 700 STOCKMAN	Driveshaft (Rear)	CT05	60
TBX 700 STOCKMAN	Gearcase, Front	CT07	156
TBX 700 STOCKMAN	Universal Joint Set	CT08	108
TBX 700 STOCKMAN	Gear Shifting Cam/Fork	CT11	660
TBX 700 STOCKMAN	Gear Shifting Lever	CT12	12
TBX 700 STOCKMAN	Gear Case (Rear)	CT15	90
TBX 700 STOCKMAN	Starter Clutch Set	CT16	150
TBX 700 STOCKMAN	V-Belt Cover/Gasket	CT18	36
TBX 700 STOCKMAN	Transmission Inner components	CT19	630
TBX 700 STOCKMAN	Shifter Detent/Spring	CT20	24
TBX 700 STOCKMAN	Shift Lever Knob	CT21	12
TBX 700 STOCKMAN	Gearcase, Front Rebuild	CT23	198
TBX 700 STOCKMAN	Shift Linkage	CT26	18
TBX 700 STOCKMAN	Pinion Housing Seal (Front)	CT27	120
TBX 700 STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
TBX 700 STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
TBX 700 STOCKMAN	Brake Assembly/ Calipers	DR02	72
TBX 700 STOCKMAN	Brake Disc	DR04	42
TBX 700 STOCKMAN	Brake Bleeding (Hyd)	DR05	60
TBX 700 STOCKMAN	Brake Hose (Hyd)	DR06	150
TBX 700 STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
TBX 700 STOCKMAN	Brake Switch	DR11	12
TBX 700 STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
TBX 700 STOCKMAN	Driven Pulley (Complete)	DR31	48
TBX 700 STOCKMAN	Master Cylinder Complete	DR53	54

TBX 700 STOCKMAN	Drive Clutch Movable Sheave	DR55	42
TBX 700 STOCKMAN	Brake Pedal	DR59	24
TBX 700 STOCKMAN	Gear Case Bladder	DR64	12
TBX 700 STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
TBX 700 STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
TBX 700 STOCKMAN	Master Cylinder (Rear)	DR75	18
TBX 700 STOCKMAN	Brake Hose (Auxiliary)	DR86	18
TBX 700 STOCKMAN	Battery Cable	EE01	12
TBX 700 STOCKMAN	Battery Cable,Relay to Starter	EE04	12
TBX 700 STOCKMAN	Cam Chain Adjuster	EG02	12
TBX 700 STOCKMAN	Cam Chain Guide	EG03	72
TBX 700 STOCKMAN	Cam Chain Tensioner	EG04	78
TBX 700 STOCKMAN	Cam Shaft and/or Sprocket	EG05	90
TBX 700 STOCKMAN	Cam Shaft Drive Chain	EG06	198
TBX 700 STOCKMAN	Crank Balancer Assembly	EG10	600
TBX 700 STOCKMAN	Engine Oil Strainer	EG11	90
TBX 700 STOCKMAN	Exhaust Pipe	EG12	60
TBX 700 STOCKMAN	Oil Pump Drive Gear	EG16	126
TBX 700 STOCKMAN	Oil Pump Driven Gear	EG17	132
TBX 700 STOCKMAN	Radiator Assembly	EG20	48
TBX 700 STOCKMAN	Radiator Cap	EG21	12
TBX 700 STOCKMAN	Radiator Screen	EG22	12
TBX 700 STOCKMAN	Valve Rocker Arm/Shaft	EG23	78
TBX 700 STOCKMAN	Exhaust Heat Shield	EG24	24
TBX 700 STOCKMAN	Dimmer Switch	EL02	48
TBX 700 STOCKMAN	Headlight Assembly	EL03	12
TBX 700 STOCKMAN	Ignition Coil (1)	EL05	12
TBX 700 STOCKMAN	Ignition Switch	EL06	18
TBX 700 STOCKMAN	Stator	EL07	150
TBX 700 STOCKMAN	Magneto Case	EL08	108
TBX 700 STOCKMAN	Main Wiring Harness	EL09	156
TBX 700 STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	150
TBX 700 STOCKMAN	Spark Plug Cap Assembly	EL13	12
TBX 700 STOCKMAN	Taillight Housing	EL15	12
TBX 700 STOCKMAN	12 Volt Power Adapter	EL22	18
TBX 700 STOCKMAN	Speedometer, Digital	EL29	12
TBX 700 STOCKMAN	Tilt Sensor Switch	EL31	12
TBX 700 STOCKMAN	Speed Sensor Assembly	EL32	18
TBX 700 STOCKMAN	Actuator	EL33	24
TBX 700 STOCKMAN	Relay	EL53	12
TBX 700 STOCKMAN	Gear Shift Position Sensor	EL58	120
TBX 700 STOCKMAN	Electric Power Steering	EL61	54
TBX 700 STOCKMAN	Coolant Hose	EN04	24
TBX 700 STOCKMAN	Crankcase	EN06	636
TBX 700 STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
TBX 700 STOCKMAN	Cylinder(s)/Gasket	EN09	216
TBX 700 STOCKMAN	Cylinder Honing	EN10	30
TBX 700 STOCKMAN	Engine (Complete)	EN12	240
TBX 700 STOCKMAN	Engine Rubber Mount(s)	EN14	240
TBX 700 STOCKMAN	Exhaust Resonator	EN17	18
TBX 700 STOCKMAN	Fan Assembly	EN20	54
TBX 700 STOCKMAN	Head and/or Gasket(s)	EN28	180
TBX 700 STOCKMAN	Intake Flange/Studs/Bolts	EN29	42

TBX 700 STOCKMAN	Piston(s)/Pin(s)/Bearing(s)	EN30	228
TBX 700 STOCKMAN	Ring Set(s)	EN31	222
TBX 700 STOCKMAN	Thermostat and Gasket	EN36	18
TBX 700 STOCKMAN	Water Pump Components	EN38	120
TBX 700 STOCKMAN	Valve, Intake/Exhaust	EN54	240
TBX 700 STOCKMAN	Belt Cooling Duct (Front)	EN57	18
TBX 700 STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
TBX 700 STOCKMAN	Oil Pump Chain or Sprocket	EN59	174
TBX 700 STOCKMAN	Water Pump Complete	EN61	60
TBX 700 STOCKMAN	Plastic Magneto Cover	EN70	18
TBX 700 STOCKMAN	Engine Short Block	EN87	600
TBX 700 STOCKMAN	Gas Tank (Complete)	FU04	60
TBX 700 STOCKMAN	Fuel Line	FU07	12
TBX 700 STOCKMAN	Fuel Pump	FU09	42
TBX 700 STOCKMAN	Air Intake Silencer	FU10	42
TBX 700 STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	138
TBX 700 STOCKMAN	Throttle Cable	FU16	12
TBX 700 STOCKMAN	Air Temperature Sensor	FU17	18
TBX 700 STOCKMAN	ECU	FU21	12
TBX 700 STOCKMAN	Fuel Injectors	FU23	66
TBX 700 STOCKMAN	Throttle Body	FU29	60
TBX 700 STOCKMAN	Throttle Position Sensor	FU30	12
TBX 700 STOCKMAN	Water Temperature Sensor	FU31	12
TBX 700 STOCKMAN	Oxygen Sensor	FU39	12
TBX 700 STOCKMAN	Idle Speed Control Valve	FU45	66
TBX 700 STOCKMAN	Air Pressure Sensor	FU49	54
TBX 700 STOCKMAN	Intake Boot	FU50	24
TBX 700 STOCKMAN	A-Arm (Lower)	SB01	36
TBX 700 STOCKMAN	A-Arm (Upper)	SB02	36
TBX 700 STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
TBX 700 STOCKMAN	Shock Spring (Front/Rear)	SB07	18
TBX 700 STOCKMAN	Handlebar	SB09	48
TBX 700 STOCKMAN	Handlebar Grip	SB10	12
TBX 700 STOCKMAN	Steering Post	SB15	24
TBX 700 STOCKMAN	Throttle Assembly	SB18	18
TBX 700 STOCKMAN	Tie Rod End (1)	SB19	24
TBX 700 STOCKMAN	Handlebar Clamp Bracket	SB21	18
TBX 700 STOCKMAN	Steering Post Bearing	SB22	72
TBX 700 STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
TBX 700 STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
TBX 700 STOCKMAN	Steering Ball Joint	SS04	30
TBX 700 STOCKMAN	Tire	SS05	18
TBX 700 STOCKMAN	Stud/Hub	SS07	12
TBX 700 STOCKMAN	Axle Seal (Front or Rear)	SS08	60
TBX 700 STOCKMAN	Arm (Rear)	SU01	18

# MUDPRO 700

Model	Activity Code Description	Activity Code	Qty In Min
MUDPRO 700	Battery	AC02	12
MUDPRO 700	Solenoid	AC06	18
MUDPRO 700	Starter Motor	AC11	18
MUDPRO 700	Voltage Regulator/Rectifier	AC14	18
MUDPRO 700	Winch Main Control Switch	AC20	24
MUDPRO 700	Winch Solenoid	AC21	18
MUDPRO 700	Winch Wiring Harness	AC22	60
MUDPRO 700	Winch	AC24	18
MUDPRO 700	Fender (Front)	BD01	78
MUDPRO 700	Frame	BD02	552
MUDPRO 700	Rack (Front/Rear)	BD05	18
MUDPRO 700	Seat Lock Assembly	BD07	12
MUDPRO 700	Skid Plate (Front/Rear)	BD08	24
MUDPRO 700	Decal, Body (ATV)	BD28	24
MUDPRO 700	Decal, Warning (ATV)	BD29	12
MUDPRO 700	Fender (Rear)	BD31	30
MUDPRO 700	Console/LED Panel	CH04	12
MUDPRO 700	Bumper (Front)	CH05	30
MUDPRO 700	Footrest	CH06	12
MUDPRO 700	Air Intake Duct	CH14	84
MUDPRO 700	Seat Assembly	CH18	12
MUDPRO 700	Seat Cover/Foam	CH19	30
MUDPRO 700	Decal/Reflector (Any)	CH24	12
MUDPRO 700	Centrifugal Clutch Assembly	CT02	120
MUDPRO 700	Driveshaft (Front)	CT04	30
MUDPRO 700	Driveshaft (Rear)	CT05	60
MUDPRO 700	Gearcase, Front	CT07	156
MUDPRO 700	Universal Joint Set	CT08	108
MUDPRO 700	Gear Shifting Cam/Fork	CT11	660
MUDPRO 700	Gear Shifting Lever	CT12	12
MUDPRO 700	Gear Case (Rear)	CT15	90
MUDPRO 700	Starter Clutch Set	CT16	150
MUDPRO 700	V-Belt Cover/Gasket	CT18	36
MUDPRO 700	Transmission Inner components	CT19	630
MUDPRO 700	Shifter Detent/Spring	CT20	24
MUDPRO 700	Shift Lever Knob	CT21	12
MUDPRO 700	Gearcase, Front Rebuild	CT23	198
MUDPRO 700	Shift Linkage	CT26	18
MUDPRO 700	Pinion Housing Seal (Front)	CT27	120
MUDPRO 700	Pinion Housing Seal (Rear)	CT28	102
MUDPRO 700	Clutch Cover/Gasket/Seal	DR01	78
MUDPRO 700	Brake Assembly/ Calipers	DR02	72
MUDPRO 700	Brake Disc	DR04	42
MUDPRO 700	Brake Bleeding (Hyd)	DR05	60
MUDPRO 700	Brake Hose (Hyd)	DR06	150
MUDPRO 700	Brake Lever (Hyd)/Lock	DR08	12
MUDPRO 700	Brake Switch	DR11	12
MUDPRO 700	Drive Clutch Stationary Sheave	DR28	42
MUDPRO 700	Driven Pulley (Complete)	DR31	48



MUDPRO 700	Master Cylinder Complete	DR53	54
MUDPRO 700	Drive Clutch Movable Sheave	DR55	42
MUDPRO 700	Brake Pedal	DR59	24
MUDPRO 700	Gear Case Bladder	DR64	12
MUDPRO 700	Gear Case, Rear (Rebuild)	DR65	150
MUDPRO 700	Master Cylinder Reservoir (Rear)	DR74	18
MUDPRO 700	Master Cylinder (Rear)	DR75	18
MUDPRO 700	Brake Hose (Auxiliary)	DR86	18
MUDPRO 700	Battery Cable	EE01	12
MUDPRO 700	Battery Cable,Relay to Starter	EE04	12
MUDPRO 700	Cam Chain Adjuster	EG02	12
MUDPRO 700	Cam Chain Guide	EG03	72
MUDPRO 700	Cam Chain Tensioner	EG04	78
MUDPRO 700	Cam Shaft and/or Sprocket	EG05	90
MUDPRO 700	Cam Shaft Drive Chain	EG06	198
MUDPRO 700	Crank Balancer Assembly	EG10	600
MUDPRO 700	Engine Oil Strainer	EG11	90
MUDPRO 700	Exhaust Pipe	EG12	60
MUDPRO 700	Oil Pump Drive Gear	EG16	126
MUDPRO 700	Oil Pump Driven Gear	EG17	132
MUDPRO 700	Radiator Assembly	EG20	48
MUDPRO 700	Radiator Cap	EG21	12
MUDPRO 700	Radiator Screen	EG22	12
MUDPRO 700	Valve Rocker Arm/Shaft	EG23	78
MUDPRO 700	Exhaust Heat Shield	EG24	24
MUDPRO 700	Dimmer Switch	EL02	48
MUDPRO 700	Headlight Assembly	EL03	12
MUDPRO 700	Ignition Coil (1)	EL05	12
MUDPRO 700	Ignition Switch	EL06	18
MUDPRO 700	Stator	EL07	150
MUDPRO 700	Magneto Case	EL08	108
MUDPRO 700	Main Wiring Harness	EL09	156
MUDPRO 700	Rotor Assembly/Starter Clutch Set	EL10	150
MUDPRO 700	Spark Plug Cap Assembly	EL13	12
MUDPRO 700	Taillight Housing	EL15	12
MUDPRO 700	12 Volt Power Adapter	EL22	18
MUDPRO 700	Speedometer, Digital	EL29	12
MUDPRO 700	Tilt Sensor Switch	EL31	12
MUDPRO 700	Speed Sensor Assembly	EL32	18
MUDPRO 700	Actuator	EL33	24
MUDPRO 700	Relay	EL53	12
MUDPRO 700	Gear Shift Position Sensor	EL58	120
MUDPRO 700	Electric Power Steering	EL61	54
MUDPRO 700	Coolant Hose	EN04	24
MUDPRO 700	Crankcase	EN06	636
MUDPRO 700	Crankshaft/Bearing(s)/Seals/Clean	EN07	660
MUDPRO 700	Cylinder(s)/Gasket	EN09	216
MUDPRO 700	Cylinder Honing	EN10	30
MUDPRO 700	Engine (Complete)	EN12	240
MUDPRO 700	Engine Rubber Mount(s)	EN14	240
MUDPRO 700	Exhaust Resonator	EN17	18
MUDPRO 700	Fan Assembly	EN20	54
MUDPRO 700	Head and/or Gasket(s)	EN28	180

MUDPRO 700	Intake Flange/Studs/Bolts	EN29	42
MUDPRO 700	Piston(s)/Pin(s)/Bearing(s)	EN30	228
MUDPRO 700	Ring Set(s)	EN31	222
MUDPRO 700	Thermostat and Gasket	EN36	18
MUDPRO 700	Water Pump Components	EN38	120
MUDPRO 700	Valve, Intake/Exhaust	EN54	240
MUDPRO 700	Belt Cooling Duct (Front)	EN57	18
MUDPRO 700	Belt Cooling Duct (Rear)	EN58	36
MUDPRO 700	Oil Pump Chain or Sprocket	EN59	174
MUDPRO 700	Water Pump Complete	EN61	60
MUDPRO 700	Plastic Magneto Cover	EN70	18
MUDPRO 700	Engine Short Block	EN87	600
MUDPRO 700	Gas Tank (Complete)	FU04	42
MUDPRO 700	Fuel Line	FU07	12
MUDPRO 700	Fuel Pump	FU09	42
MUDPRO 700	Air Intake Silencer	FU10	42
MUDPRO 700	Oil Pump/GaskRings (Complete)	FU12	138
MUDPRO 700	Throttle Cable	FU16	12
MUDPRO 700	Air Temperature Sensor	FU17	18
MUDPRO 700	ECU	FU21	12
MUDPRO 700	Fuel Injectors	FU23	66
MUDPRO 700	Throttle Body	FU29	60
MUDPRO 700	Throttle Position Sensor	FU30	12
MUDPRO 700	Water Temperature Sensor	FU31	12
MUDPRO 700	Oxygen Sensor	FU39	12
MUDPRO 700	Idle Speed Control Valve	FU45	66
MUDPRO 700	Air Pressure Sensor	FU49	54
MUDPRO 700	Intake Boot	FU50	24
MUDPRO 700	A-Arm (Lower)	SB01	36
MUDPRO 700	A-Arm (Upper)	SB02	36
MUDPRO 700	Shock Absorber (Front/Rear)	SB06	18
MUDPRO 700	Shock Spring (Front/Rear)	SB07	18
MUDPRO 700	Handlebar	SB09	48
MUDPRO 700	Handlebar Grip	SB10	12
MUDPRO 700	Steering Post	SB15	24
MUDPRO 700	Throttle Assembly	SB18	18
MUDPRO 700	Tie Rod End (1)	SB19	24
MUDPRO 700	Handlebar Clamp Bracket	SB21	18
MUDPRO 700	Steering Post Bearing	SB22	72
MUDPRO 700	Axle Shaft (1) (Front or Rear)	SS02	48
MUDPRO 700	Hub Bearing (1) (Front)/Knuckle	SS03	60
MUDPRO 700	Steering Ball Joint	SS04	30
MUDPRO 700	Tire	SS05	18
MUDPRO 700	Stud/Hub	SS07	12
MUDPRO 700	Axle Seal (Front or Rear)	SS08	60
MUDPRO 700	Arm (Rear)	SU01	18
MUDPRO 700	Complete Warranty Claim	WP00	5

# 1000 XT STOCKMAN

Model	Activity Code Description	Activity Code	Qty In Min
1000 XT STOCKMAN	Battery	AC02	12
1000 XT STOCKMAN	Solenoid	AC06	18
1000 XT STOCKMAN	Starter Motor	AC11	24
1000 XT STOCKMAN	Voltage Regulator/Rectifier	AC14	18
1000 XT STOCKMAN	Fender (Front)	BD01	78
1000 XT STOCKMAN	Frame	BD02	594
1000 XT STOCKMAN	Rack (Front/Rear)	BD05	18
1000 XT STOCKMAN	Seat Lock Assembly	BD07	12
1000 XT STOCKMAN	Skid Plate (Front/Rear)	BD08	24
1000 XT STOCKMAN	Decal, Body (ATV)	BD28	24
1000 XT STOCKMAN	Decal, Warning (ATV)	BD29	12
1000 XT STOCKMAN	Fender (Rear)	BD31	30
1000 XT STOCKMAN	Console/LED Panel	CH04	12
1000 XT STOCKMAN	Bumper (Front)	CH05	30
1000 XT STOCKMAN	Footrest	CH06	12
1000 XT STOCKMAN	Seat Assembly	CH18	12
1000 XT STOCKMAN	Seat Cover/Foam	CH19	30
1000 XT STOCKMAN	Decal/Reflector (Any)	CH24	12
1000 XT STOCKMAN	Centrifugal Clutch Assembly	CT02	120
1000 XT STOCKMAN	Driveshaft (Front)	CT04	120
1000 XT STOCKMAN	Driveshaft (Rear)	CT05	24
1000 XT STOCKMAN	Gearcase, Front	CT07	156
1000 XT STOCKMAN	Gear Shifting Cam/Fork	CT11	828
1000 XT STOCKMAN	Gear Shifting Lever	CT12	12
1000 XT STOCKMAN	Gear Case (Rear)	CT15	90
1000 XT STOCKMAN	Starter Idler Gear	CT17	30
1000 XT STOCKMAN	V-Belt Cover/Gasket	CT18	36
1000 XT STOCKMAN	Transmission Inner components	CT19	828
1000 XT STOCKMAN	Shifter Detent/Spring	CT20	24
1000 XT STOCKMAN	Shift Lever Knob	CT21	12
1000 XT STOCKMAN	Gearcase, Front Rebuild	CT23	198
1000 XT STOCKMAN	Shift Linkage	CT26	18
1000 XT STOCKMAN	Pinion Housing Seal (Front)	CT27	120
1000 XT STOCKMAN	Pinion Housing Seal (Rear)	CT28	102
1000 XT STOCKMAN	U-Joint (Front)	CT30	120
1000 XT STOCKMAN	U-Joint (Rear)	CT31	48
1000 XT STOCKMAN	Gearcase(Rear)Clutch Cartridge	CT32	102
1000 XT STOCKMAN	Clutch Cover/Gasket/Seal	DR01	78
1000 XT STOCKMAN	Brake Assembly/ Calipers	DR02	72
1000 XT STOCKMAN	Brake Disc	DR04	42
1000 XT STOCKMAN	Brake Bleeding (Hyd)	DR05	60
1000 XT STOCKMAN	Brake Hose (Hyd)	DR06	150
1000 XT STOCKMAN	Brake Lever (Hyd)/Lock	DR08	12
1000 XT STOCKMAN	Brake Switch	DR11	12
1000 XT STOCKMAN	Drive Clutch Stationary Sheave	DR28	42
1000 XT STOCKMAN	Driven Pulley (Complete)	DR31	48
1000 XT STOCKMAN	Master Cylinder Complete	DR53	54
1000 XT STOCKMAN	Drive Clutch Movable Sheave	DR55	42
1000 XT STOCKMAN	Brake Pedal	DR59	24

1000 XT STOCKMAN	Gear Case Bladder	DR64	12
1000 XT STOCKMAN	Gear Case, Rear (Rebuild)	DR65	150
1000 XT STOCKMAN	Master Cylinder Reservoir (Rear)	DR74	18
1000 XT STOCKMAN	Master Cylinder (Rear)	DR75	18
1000 XT STOCKMAN	Brake Hose (Auxiliary)	DR86	30
1000 XT STOCKMAN	Battery Cable	EE01	12
1000 XT STOCKMAN	Battery Cable,Relay to Starter	EE04	12
1000 XT STOCKMAN	Cam Chain Adjuster	EG02	12
1000 XT STOCKMAN	Cam Chain Guide	EG03	372
1000 XT STOCKMAN	Cam Chain Tensioner	EG04	444
1000 XT STOCKMAN	Cam Shaft Drive Chain	EG06	444
1000 XT STOCKMAN	Engine Oil Strainer	EG11	90
1000 XT STOCKMAN	Exhaust Pipe	EG12	42
1000 XT STOCKMAN	Oil Cooler	EG14	60
1000 XT STOCKMAN	Oil Pump Drive Gear	EG16	810
1000 XT STOCKMAN	Oil Pump Driven Gear	EG17	810
1000 XT STOCKMAN	Output/Input Hose	EG18	12
1000 XT STOCKMAN	Radiator Assembly	EG20	48
1000 XT STOCKMAN	Radiator Cap	EG21	12
1000 XT STOCKMAN	Radiator Screen	EG22	12
1000 XT STOCKMAN	Valve Rocker Arm/Shaft	EG23	372
1000 XT STOCKMAN	Exhaust Heat Shield	EG24	24
1000 XT STOCKMAN	Crankcase, Lower	EG30	348
1000 XT STOCKMAN	Dimmer Switch	EL02	48
1000 XT STOCKMAN	Headlight Assembly	EL03	12
1000 XT STOCKMAN	Ignition Coil (1)	EL05	30
1000 XT STOCKMAN	Ignition Switch	EL06	18
1000 XT STOCKMAN	Stator	EL07	54
1000 XT STOCKMAN	Magneto Case	EL08	54
1000 XT STOCKMAN	Main Wiring Harness	EL09	156
1000 XT STOCKMAN	Rotor Assembly/Starter Clutch Set	EL10	78
1000 XT STOCKMAN	Spark Plug Cap Assembly	EL13	12
1000 XT STOCKMAN	Taillight Housing	EL15	12
1000 XT STOCKMAN	12 Volt Power Adapter	EL22	18
1000 XT STOCKMAN	Speedometer, Digital	EL29	12
1000 XT STOCKMAN	Tilt Sensor Switch	EL31	12
1000 XT STOCKMAN	Speed Sensor Assembly	EL32	18
1000 XT STOCKMAN	Actuator	EL33	24
1000 XT STOCKMAN	Relay	EL53	12
1000 XT STOCKMAN	Gear Shift Position Sensor	EL58	12
1000 XT STOCKMAN	Electric Power Steering	EL61	54
1000 XT STOCKMAN	Coolant Hose	EN04	24
1000 XT STOCKMAN	Crankcase	EN06	846
1000 XT STOCKMAN	Crankshaft/Bearing(s)/Seals/Clean	EN07	804
1000 XT STOCKMAN	Cylinder Honing	EN10	30
1000 XT STOCKMAN	Engine (Complete)	EN12	288
1000 XT STOCKMAN	Engine Rubber Mount(s)	EN14	288
1000 XT STOCKMAN	Exhaust Resonator	EN17	18
1000 XT STOCKMAN	Fan Assembly	EN20	54
1000 XT STOCKMAN	Intake Flange/Studs/Bolts	EN29	78
1000 XT STOCKMAN	Thermostat and Gasket	EN36	18
1000 XT STOCKMAN	Valve, Intake/Exhaust	EN54	432
1000 XT STOCKMAN	Belt Cooling Duct (Front)	EN57	18

1000 XT STOCKMAN	Belt Cooling Duct (Rear)	EN58	36
1000 XT STOCKMAN	Water Pump Complete	EN61	48
1000 XT STOCKMAN	Engine Short Block	EN87	732
1000 XT STOCKMAN	Camshaft/Sprocket (Front or Rear)	EN88	324
1000 XT STOCKMAN	Camshaft/Sprocket (Front and Rear)	EN89	354
1000 XT STOCKMAN	Head W/Valves (gskt) Front or Rear	EN90	336
1000 XT STOCKMAN	Head W/Valves(gskt)Front and Rear	EN91	372
1000 XT STOCKMAN	Cylinder (Front or Rear)	EN92	354
1000 XT STOCKMAN	Cylinder (Front and Rear)	EN93	390
1000 XT STOCKMAN	Rings (Front or Rear)	EN94	366
1000 XT STOCKMAN	Rings (Front and Rear)	EN95	402
1000 XT STOCKMAN	Piston (Front or Rear)	EN96	372
1000 XT STOCKMAN	Piston (Front and Rear)	EN97	408
1000 XT STOCKMAN	Gas Tank (Complete)	FU04	60
1000 XT STOCKMAN	Fuel Line	FU07	12
1000 XT STOCKMAN	Fuel Pump	FU09	42
1000 XT STOCKMAN	Air Intake Silencer	FU10	60
1000 XT STOCKMAN	Oil Pump/GaskRings (Complete)	FU12	816
1000 XT STOCKMAN	Throttle Cable	FU16	12
1000 XT STOCKMAN	Air Temperature Sensor	FU17	12
1000 XT STOCKMAN	ECU	FU21	12
1000 XT STOCKMAN	Fuel Injectors	FU23	66
1000 XT STOCKMAN	Throttle Body	FU29	72
1000 XT STOCKMAN	Throttle Position Sensor	FU30	66
1000 XT STOCKMAN	Water Temperature Sensor	FU31	18
1000 XT STOCKMAN	Idle Speed Control Valve	FU45	66
1000 XT STOCKMAN	Air Pressure Sensor	FU49	66
1000 XT STOCKMAN	Oil Filler Case	GM03	24
1000 XT STOCKMAN	A-Arm (Lower)	SB01	36
1000 XT STOCKMAN	A-Arm (Upper)	SB02	36
1000 XT STOCKMAN	Shock Absorber (Front/Rear)	SB06	18
1000 XT STOCKMAN	Shock Spring (Front/Rear)	SB07	18
1000 XT STOCKMAN	Handlebar	SB09	48
1000 XT STOCKMAN	Handlebar Grip	SB10	12
1000 XT STOCKMAN	Steering Post	SB15	24
1000 XT STOCKMAN	Sway Bar Assembly	SB17	24
1000 XT STOCKMAN	Throttle Assembly	SB18	18
1000 XT STOCKMAN	Tie Rod End (1)	SB19	24
1000 XT STOCKMAN	Handlebar Clamp Bracket	SB21	18
1000 XT STOCKMAN	Steering Post Bearing	SB22	72
1000 XT STOCKMAN	Axle Shaft (1) (Front or Rear)	SS02	48
1000 XT STOCKMAN	Hub Bearing (1) (Front)/Knuckle	SS03	60
1000 XT STOCKMAN	Steering Ball Joint	SS04	30
1000 XT STOCKMAN	Tire	SS05	18
1000 XT STOCKMAN	Stud/Hub	SS07	12
1000 XT STOCKMAN	Axle Seal (Front or Rear)	SS08	60
1000 XT STOCKMAN	Arm (Rear)	SU01	18
1000 XT STOCKMAN	Complete Warranty Claim	WP00	5

# MUDPRO 1000

Model	Activity Code Description	Activity Code	Qty In Min
MUDPRO 1000	Battery	AC02	12
MUDPRO 1000	Solenoid	AC06	18
MUDPRO 1000	Starter Motor	AC11	24
MUDPRO 1000	Voltage Regulator/Rectifier	AC14	18
MUDPRO 1000	Winch Main Control Switch	AC20	24
MUDPRO 1000	Winch Solenoid	AC21	18
MUDPRO 1000	Winch Wiring Harness	AC22	60
MUDPRO 1000	Winch	AC24	18
MUDPRO 1000	Fender (Front)	BD01	78
MUDPRO 1000	Frame	BD02	594
MUDPRO 1000	Rack (Front/Rear)	BD05	18
MUDPRO 1000	Seat Lock Assembly	BD07	12
MUDPRO 1000	Skid Plate (Front/Rear)	BD08	24
MUDPRO 1000	Decal, Body (ATV)	BD28	24
MUDPRO 1000	Decal, Warning (ATV)	BD29	12
MUDPRO 1000	Fender (Rear)	BD31	30
MUDPRO 1000	Console/LED Panel	CH04	12
MUDPRO 1000	Bumper (Front)	CH05	30
MUDPRO 1000	Footrest	CH06	12
MUDPRO 1000	Seat Assembly	CH18	12
MUDPRO 1000	Seat Cover/Foam	CH19	30
MUDPRO 1000	Decal/Reflector (Any)	CH24	12
MUDPRO 1000	Centrifugal Clutch Assembly	CT02	120
MUDPRO 1000	Driveshaft (Front)	CT04	120
MUDPRO 1000	Driveshaft (Rear)	CT05	24
MUDPRO 1000	Gearcase, Front	CT07	156
MUDPRO 1000	Gear Shifting Cam/Fork	CT11	828
MUDPRO 1000	Gear Shifting Lever	CT12	12
MUDPRO 1000	Gear Case (Rear)	CT15	90
MUDPRO 1000	Starter Idler Gear	CT17	30
MUDPRO 1000	V-Belt Cover/Gasket	CT18	36
MUDPRO 1000	Transmission Inner components	CT19	828
MUDPRO 1000	Shifter Detent/Spring	CT20	24
MUDPRO 1000	Shift Lever Knob	CT21	12
MUDPRO 1000	Gearcase, Front Rebuild	CT23	198
MUDPRO 1000	Shift Linkage	CT26	18
MUDPRO 1000	Pinion Housing Seal (Front)	CT27	120
MUDPRO 1000	Pinion Housing Seal (Rear)	CT28	102
MUDPRO 1000	U-Joint (Front)	CT30	120
MUDPRO 1000	U-Joint (Rear)	CT31	48
MUDPRO 1000	Gearcase(Rear)Clutch Cartridge	CT32	102
MUDPRO 1000	Clutch Cover/Gasket/Seal	DR01	78
MUDPRO 1000	Brake Assembly/ Calipers	DR02	72
MUDPRO 1000	Brake Disc	DR04	42
MUDPRO 1000	Brake Bleeding (Hyd)	DR05	60
MUDPRO 1000	Brake Hose (Hyd)	DR06	150
MUDPRO 1000	Brake Lever (Hyd)/Lock	DR08	12
MUDPRO 1000	Brake Switch	DR11	12
MUDPRO 1000	Drive Clutch Stationary Sheave	DR28	42

MUDPRO 1000	Driven Pulley (Complete)	DR31	48
MUDPRO 1000	Master Cylinder Complete	DR53	54
MUDPRO 1000	Drive Clutch Movable Sheave	DR55	42
MUDPRO 1000	Brake Pedal	DR59	24
MUDPRO 1000	Gear Case Bladder	DR64	12
MUDPRO 1000	Gear Case, Rear (Rebuild)	DR65	150
MUDPRO 1000	Master Cylinder Reservoir (Rear)	DR74	18
MUDPRO 1000	Master Cylinder (Rear)	DR75	18
MUDPRO 1000	Brake Hose (Auxiliary)	DR86	30
MUDPRO 1000	Battery Cable	EE01	12
MUDPRO 1000	Battery Cable,Relay to Starter	EE04	12
MUDPRO 1000	Cam Chain Adjuster	EG02	12
MUDPRO 1000	Cam Chain Guide	EG03	372
MUDPRO 1000	Cam Chain Tensioner	EG04	444
MUDPRO 1000	Cam Shaft Drive Chain	EG06	444
MUDPRO 1000	Engine Oil Strainer	EG11	90
MUDPRO 1000	Exhaust Pipe	EG12	42
MUDPRO 1000	Oil Cooler	EG14	60
MUDPRO 1000	Oil Pump Drive Gear	EG16	810
MUDPRO 1000	Oil Pump Driven Gear	EG17	810
MUDPRO 1000	Output/Input Hose	EG18	12
MUDPRO 1000	Radiator Assembly	EG20	48
MUDPRO 1000	Radiator Cap	EG21	12
MUDPRO 1000	Radiator Screen	EG22	12
MUDPRO 1000	Valve Rocker Arm/Shaft	EG23	372
MUDPRO 1000	Exhaust Heat Shield	EG24	24
MUDPRO 1000	Crankcase, Lower	EG30	348
MUDPRO 1000	Dimmer Switch	EL02	48
MUDPRO 1000	Headlight Assembly	EL03	12
MUDPRO 1000	Ignition Coil (1)	EL05	30
MUDPRO 1000	Ignition Switch	EL06	18
MUDPRO 1000	Stator	EL07	54
MUDPRO 1000	Magneto Case	EL08	54
MUDPRO 1000	Main Wiring Harness	EL09	156
MUDPRO 1000	Rotor Assembly/Starter Clutch Set	EL10	78
MUDPRO 1000	Spark Plug Cap Assembly	EL13	12
MUDPRO 1000	Taillight Housing	EL15	12
MUDPRO 1000	12 Volt Power Adapter	EL22	18
MUDPRO 1000	Speedometer, Digital	EL29	12
MUDPRO 1000	Tilt Sensor Switch	EL31	12
MUDPRO 1000	Speed Sensor Assembly	EL32	18
MUDPRO 1000	Actuator	EL33	24
MUDPRO 1000	Relay	EL53	12
MUDPRO 1000	Gear Shift Position Sensor	EL58	12
MUDPRO 1000	Electric Power Steering	EL61	54
MUDPRO 1000	Coolant Hose	EN04	24
MUDPRO 1000	Crankcase	EN06	846
MUDPRO 1000	Crankshaft/Bearing(s)/Seals/Clean	EN07	804
MUDPRO 1000	Cylinder Honing	EN10	30
MUDPRO 1000	Engine (Complete)	EN12	288
MUDPRO 1000	Engine Rubber Mount(s)	EN14	288
MUDPRO 1000	Exhaust Resonator	EN17	18
MUDPRO 1000	Fan Assembly	EN20	54

MUDPRO 1000	Intake Flange/Studs/Bolts	EN29	78
MUDPRO 1000	Thermostat and Gasket	EN36	18
MUDPRO 1000	Valve, Intake/Exhaust	EN54	432
MUDPRO 1000	Belt Cooling Duct (Front)	EN57	18
MUDPRO 1000	Belt Cooling Duct (Rear)	EN58	36
MUDPRO 1000	Water Pump Complete	EN61	48
MUDPRO 1000	Engine Short Block	EN87	732
MUDPRO 1000	Camshaft/Sprocket (Front or Rear)	EN88	324
MUDPRO 1000	Camshaft/Sprocket (Front and Rear)	EN89	354
MUDPRO 1000	Head W/Valves (gskt) Front or Rear	EN90	336
MUDPRO 1000	Head W/Valves(gskt)Front and Rear	EN91	372
MUDPRO 1000	Cylinder (Front or Rear)	EN92	354
MUDPRO 1000	Cylinder (Front and Rear)	EN93	390
MUDPRO 1000	Rings (Front or Rear)	EN94	366
MUDPRO 1000	Rings (Front and Rear)	EN95	402
MUDPRO 1000	Piston (Front or Rear)	EN96	372
MUDPRO 1000	Piston (Front and Rear)	EN97	408
MUDPRO 1000	Gas Tank (Complete)	FU04	60
MUDPRO 1000	Fuel Line	FU07	12
MUDPRO 1000	Fuel Pump	FU09	42
MUDPRO 1000	Air Intake Silencer	FU10	60
MUDPRO 1000	Oil Pump/GaskRings (Complete)	FU12	816
MUDPRO 1000	Throttle Cable	FU16	12
MUDPRO 1000	Air Temperature Sensor	FU17	12
MUDPRO 1000	ECU	FU21	12
MUDPRO 1000	Fuel Injectors	FU23	66
MUDPRO 1000	Throttle Body	FU29	72
MUDPRO 1000	Throttle Position Sensor	FU30	66
MUDPRO 1000	Water Temperature Sensor	FU31	18
MUDPRO 1000	Idle Speed Control Valve	FU45	66
MUDPRO 1000	Air Pressure Sensor	FU49	66
MUDPRO 1000	Oil Filler Case	GM03	24
MUDPRO 1000	A-Arm (Lower)	SB01	36
MUDPRO 1000	A-Arm (Upper)	SB02	36
MUDPRO 1000	Shock Absorber (Front/Rear)	SB06	18
MUDPRO 1000	Shock Spring (Front/Rear)	SB07	18
MUDPRO 1000	Handlebar	SB09	48
MUDPRO 1000	Handlebar Grip	SB10	12
MUDPRO 1000	Steering Post	SB15	24
MUDPRO 1000	Throttle Assembly	SB18	18
MUDPRO 1000	Tie Rod End (1)	SB19	24
MUDPRO 1000	Handlebar Clamp Bracket	SB21	18
MUDPRO 1000	Steering Post Bearing	SB22	72
MUDPRO 1000	Axle Shaft (1) (Front or Rear)	SS02	48
MUDPRO 1000	Hub Bearing (1) (Front)/Knuckle	SS03	60
MUDPRO 1000	Steering Ball Joint	SS04	30
MUDPRO 1000	Tire	SS05	18
MUDPRO 1000	Stud/Hub	SS07	12
MUDPRO 1000	Axle Seal (Front or Rear)	SS08	60
MUDPRO 1000	Arm (Rear)	SU01	18
MUDPRO 1000	Complete Warranty Claim	WP00	5