

Prowler 500 HDX

Model	Activity Code Description	Activity Code	Qty In Min
PROWLER 500 HDX	12 Volt Power Adapter	EL22	12
PROWLER 500 HDX	A-Arm (Lower)	SB01	36
PROWLER 500 HDX	A-Arm (Upper)	SB02	36
PROWLER 500 HDX	Accelerator Assy	CH58	12
PROWLER 500 HDX	Actuator	EL33	18
PROWLER 500 HDX	Air Intake Duct	CH14	18
PROWLER 500 HDX	Air Intake Silencer	FU10	24
PROWLER 500 HDX	Air Pressure Sensor	FU49	18
PROWLER 500 HDX	Air Temperature Sensor	FU17	12
PROWLER 500 HDX	Arm, Suspension (Rear)	SU01	18
PROWLER 500 HDX	Axle Seal (Front or Rear)	SS08	60
PROWLER 500 HDX	Axle Shaft (1) (Front or Rear)	SS02	48
PROWLER 500 HDX	Battery	AC02	12
PROWLER 500 HDX	Battery Cable	EE01	24
PROWLER 500 HDX	Battery Cable,Relay to Starter	EE04	24
PROWLER 500 HDX	Battery Holder Assembly	EE02	12
PROWLER 500 HDX	Belly Panel	CH60	12
PROWLER 500 HDX	Belly Panel Side	CH61	12
PROWLER 500 HDX	Belt Cooling Duct (Front)	EN57	30
PROWLER 500 HDX	Belt Cooling Duct (Rear)	EN58	18
PROWLER 500 HDX	Brake Assy/Caliper (Rear)	DR82	48
PROWLER 500 HDX	Brake Assy/Calipers (Front)	DR85	72
PROWLER 500 HDX	Brake Bleeding (Hyd)	DR05	60
PROWLER 500 HDX	Brake Disc	DR04	48
PROWLER 500 HDX	Brake Disc (Rear)	DR81	36
PROWLER 500 HDX	Brake Hose (Hyd)	DR06	48
PROWLER 500 HDX	Brake Pedal	DR59	24
PROWLER 500 HDX	Brake Return Spring	DR10	12
PROWLER 500 HDX	Brake Switch	DR11	12
PROWLER 500 HDX	Bumper (Front)	CH05	12
PROWLER 500 HDX	Cam Chain Adjuster	EG02	18
PROWLER 500 HDX	Cam Chain Guide	EG03	126
PROWLER 500 HDX	Cam Chain Tensioner	EG04	102
PROWLER 500 HDX	Cam Shaft and/or Sprocket	EG05	96
PROWLER 500 HDX	Cam Shaft Drive Chain	EG06	348
PROWLER 500 HDX	Canopy Support	CH52	12
PROWLER 500 HDX	Canopy Tube (Front)	CH53	18
PROWLER 500 HDX	Canopy Tube (Rear)	CH54	30
PROWLER 500 HDX	Cargo Box Latch	BD32	12
PROWLER 500 HDX	Centrifugal Clutch Assembly	CT02	144
PROWLER 500 HDX	Clutch Cover/Gasket/Seal	DR01	114
PROWLER 500 HDX	Console/LED Panel	CH04	54
PROWLER 500 HDX	Coolant Tube (Left or Right)	EN05	24
PROWLER 500 HDX	Crank Balancer Assembly	EG10	522
PROWLER 500 HDX	Crankcase	EN06	552
PROWLER 500 HDX	Crankshaft/Bearing(s)/Seals/Clean	EN07	522
PROWLER 500 HDX	Cylinder Honing	EN10	30
PROWLER 500 HDX	Cylinder(s)/Gasket	EN09	222

PROWLER 500 HDX	Decal, Warning (ATV)	BD29	12
PROWLER 500 HDX	Decal/Reflector (Any)	CH24	12
PROWLER 500 HDX	Differential, Front	CT07	90
PROWLER 500 HDX	Differential, Front Rebuild	CT23	132
PROWLER 500 HDX	Drive Clutch Movable Sheave	DR55	72
PROWLER 500 HDX	Drive Clutch Stationary Sheave	DR28	72
PROWLER 500 HDX	Driven Pulley (Complete)	DR31	84
PROWLER 500 HDX	Driveshaft (Front)	CT04	48
PROWLER 500 HDX	Driveshaft (Rear)	CT05	12
PROWLER 500 HDX	ECU	FU21	12
PROWLER 500 HDX	Engine (Complete)	EN12	132
PROWLER 500 HDX	Engine Bracket (Left or Right)	EG34	120
PROWLER 500 HDX	Engine Oil Strainer	EG11	30
PROWLER 500 HDX	Engine Rubber Mount(s)	EN14	120
PROWLER 500 HDX	Exhaust Pipe	EG12	24
PROWLER 500 HDX	Exhaust Seal	EN69	18
PROWLER 500 HDX	Exhaust Valve Plate/Cover/Gasket	EN39	12
PROWLER 500 HDX	Expansion Chamber	EN19	12
PROWLER 500 HDX	Fan Assembly	EN20	24
PROWLER 500 HDX	Fender (L or R)	BD14	12
PROWLER 500 HDX	Floor	CH55	18
PROWLER 500 HDX	Frame	BD02	1,020
PROWLER 500 HDX	Front Bumper Bracket	CH51	24
PROWLER 500 HDX	Fuel Injectors	FU23	18
PROWLER 500 HDX	Fuel Line	FU07	18
PROWLER 500 HDX	Fuel Line Clamp	FU34	12
PROWLER 500 HDX	Fuel Pump	FU09	24
PROWLER 500 HDX	Fuel Rail	FU51	18
PROWLER 500 HDX	Fuse Holder Cover	EL23	12
PROWLER 500 HDX	Gas Tank (Complete)	FU04	36
PROWLER 500 HDX	Gear Case (Rear)	CT15	96
PROWLER 500 HDX	Gear Case Bladder	DR64	12
PROWLER 500 HDX	Gear Case, Rear (Rebuild)	DR65	156
PROWLER 500 HDX	Gear Shift Cable/Rod	CT09	48
PROWLER 500 HDX	Gear Shift Position Sensor	EL58	12
PROWLER 500 HDX	Gear Shifting Lever	CT12	18
PROWLER 500 HDX	Gear Shifting Shaft/Return Spring	CT13	24
PROWLER 500 HDX	Head and/or Gasket(s)	EN28	186
PROWLER 500 HDX	Headlight Assembly	EL03	12
PROWLER 500 HDX	Headlight Switch	BD20	12
PROWLER 500 HDX	Headrest Pad Assembly	CH73	12
PROWLER 500 HDX	Heat Shield	CH59	12
PROWLER 500 HDX	Hood Bracket	CH56	12
PROWLER 500 HDX	Hood Decals	CH10	12
PROWLER 500 HDX	Hood Latch	CH15	12
PROWLER 500 HDX	Hood w/Decals	CH11	60
PROWLER 500 HDX	Hub Bearing (1) (Front)/Knuckle	SS03	60
PROWLER 500 HDX	Idle Speed Control Valve	FU45	18
PROWLER 500 HDX	Ignition Coil (1)	EL05	18
PROWLER 500 HDX	Ignition Switch	EL06	12
PROWLER 500 HDX	Intake Boot	FU50	18
PROWLER 500 HDX	Lift Support	BD35	12

PROWLER 500 HDX	Magneto Case	EL08	108
PROWLER 500 HDX	Main Wiring Harness	EL09	90
PROWLER 500 HDX	Master Cylinder Complete	DR53	48
PROWLER 500 HDX	Oil Pump Drive Gear	EG16	120
PROWLER 500 HDX	Oil Pump Driven Gear	EG17	120
PROWLER 500 HDX	Oil Pump/GaskRings (Complete)	FU12	132
PROWLER 500 HDX	Oxygen Sensor	FU39	12
PROWLER 500 HDX	Pinion Housing Seal (Front)	CT27	96
PROWLER 500 HDX	Pinion Housing Seal (Rear)	CT28	72
PROWLER 500 HDX	Piston(s)/Pin(s)/Bearing(s)	EN30	234
PROWLER 500 HDX	Plastic Magneto Cover	EN70	24
PROWLER 500 HDX	Rack and Pinion Assembly	SB38	42
PROWLER 500 HDX	Radiator Assembly	EG20	60
PROWLER 500 HDX	Radiator Cap	EG21	12
PROWLER 500 HDX	Radiator Screen	EG22	12
PROWLER 500 HDX	Relay	EL53	12
PROWLER 500 HDX	Reverse Override Switch	EL60	12
PROWLER 500 HDX	Ring Set(s)	EN31	228
PROWLER 500 HDX	Rotor Assembly/Starter Clutch Set	EL10	150
PROWLER 500 HDX	Seat Assembly	CH18	12
PROWLER 500 HDX	Seat Base	CH28	12
PROWLER 500 HDX	Seat Belt	CH57	12
PROWLER 500 HDX	Shift Lever Knob	CT21	12
PROWLER 500 HDX	Shock Absorber (Front/Rear)	SB06	18
PROWLER 500 HDX	Shock Spring (Front/Rear)	SB07	18
PROWLER 500 HDX	Side Restraint (1)	BD38	12
PROWLER 500 HDX	Solenoid	AC06	12
PROWLER 500 HDX	Spark Plug Cap Assembly	EL13	12
PROWLER 500 HDX	Speed Sensor Assembly	EL32	24
PROWLER 500 HDX	Speedometer, Digital	EL29	12
PROWLER 500 HDX	Starter Idler Gear	CT17	108
PROWLER 500 HDX	Starter Motor	AC11	24
PROWLER 500 HDX	Stator	EL07	108
PROWLER 500 HDX	Steering Ball Joint	SS04	30
PROWLER 500 HDX	Steering Shaft (Lower)	SB39	12
PROWLER 500 HDX	Steering Support Bracket	CH77	120
PROWLER 500 HDX	Steering Tie Rod	SB16	48
PROWLER 500 HDX	Steering Wheel	SB33	12
PROWLER 500 HDX	Steering Wheel Shaft	SB40	18
PROWLER 500 HDX	Stud/Hub	SS07	12
PROWLER 500 HDX	Sway Bar Assembly	SB17	18
PROWLER 500 HDX	Switch 2WD/4WD	BD33	12
PROWLER 500 HDX	Tailgate Assembly	CH31	12
PROWLER 500 HDX	Tailgate Cable	BD34	12
PROWLER 500 HDX	Tailgate Latch Rod (1 or 2)	BD18	12
PROWLER 500 HDX	Tailgate Striker Plate (1 or 2)	BD16	12
PROWLER 500 HDX	Taillight Housing	EL15	12
PROWLER 500 HDX	Thermostat and Gasket	EN36	12
PROWLER 500 HDX	Throttle Body	FU29	24
PROWLER 500 HDX	Throttle Cable	FU16	30
PROWLER 500 HDX	Throttle Position Sensor	FU30	18
PROWLER 500 HDX	Tie Rod End (1)	SB19	24

PROWLER 500 HDX	Tilt Sensor Switch	EL31	18
PROWLER 500 HDX	Tire	SS05	18
PROWLER 500 HDX	Transmission Inner components	CT19	582
PROWLER 500 HDX	U-Joint (Rear)	CT31	48
PROWLER 500 HDX	Upper Rearm	SU33	18
PROWLER 500 HDX	Valve Rocker Arm/Shaft	EG23	78
PROWLER 500 HDX	Valve, Intake/Exhaust	EN54	246
PROWLER 500 HDX	V-Belt Cover/Gasket	CT18	60
PROWLER 500 HDX	Voltage Regulator/Rectifier	AC14	18
PROWLER 500 HDX	Water Pump Complete	EN61	60
PROWLER 500 HDX	Water Pump Components	EN38	72
PROWLER 500 HDX	Water Temperature Sensor	FU31	18

Prowler 550 XT

Model	Activity Code Description	Activity Code	Qty In Min
Prowler 550 XT	Gearcase, Front	CT07	90
Prowler 550 XT	Gearcase, Front Rebuild	CT23	132
Prowler 550 XT	Rack and Pinion Assembly	SB38	42
Prowler 550 XT	Complete Warranty Claim	WP00	5
Prowler 550 XT	Fuel Pump	FU09	18
Prowler 550 XT	Headlight Assembly	EL03	12
Prowler 550 XT	Water Pump Complete	EN61	24
Prowler 550 XT	Parking Brake Lever	BD37	12
Prowler 550 XT	Side Restraint (1)	BD38	12
Prowler 550 XT	Intake Boot	FU50	18
Prowler 550 XT	Clutch Cover/Gasket/Seal	DR01	72
Prowler 550 XT	Bumper (Front)	CH05	12
Prowler 550 XT	Pinion Housing Seal (Rear)	CT28	72
Prowler 550 XT	Gear Case Bladder	DR64	12
Prowler 550 XT	Brake Assy/Caliper (Rear)	DR82	48
Prowler 550 XT	Tilt Sensor Switch	EL31	12
Prowler 550 XT	Shock Absorber (Front/Rear)	SB06	18
Prowler 550 XT	Brake Assy/Calipers (Front)	DR85	72
Prowler 550 XT	Shock Spring (Front/Rear)	SB07	18
Prowler 550 XT	Steering Shaft (Lower)	SB39	12
Prowler 550 XT	Battery Cable,Relay to Starter	EE04	12
Prowler 550 XT	Driveshaft (Front)	CT04	24
Prowler 550 XT	Driveshaft (Rear)	CT05	48
Prowler 550 XT	Cargo Box Latch	BD32	12
Prowler 550 XT	Actuator	EL33	18
Prowler 550 XT	Gear Case (Rear)	CT15	96
Prowler 550 XT	Lift Support	BD35	12
Prowler 550 XT	Pinion Housing Seal (Front)	CT27	96
Prowler 550 XT	Accelerator Assy	CH58	12
Prowler 550 XT	Gear Shifting Lever	CT12	12
Prowler 550 XT	Gear Shifting Shaft/Return Spring	CT13	12
Prowler 550 XT	Gear Case, Rear (Rebuild)	DR65	156
Prowler 550 XT	Plastic Magneto Cover	EN70	12
Prowler 550 XT	Oil Pump/Gasket/O-Rings (Complete)	FU12	132
Prowler 550 XT	Steering Support Bracket	CH77	120
Prowler 550 XT	Reverse Override Switch	EL60	12
Prowler 550 XT	Gear Shift Position Sensor	EL58	114
Prowler 550 XT	Air Pressure Sensor	FU49	18
Prowler 550 XT	Engine Short Block	EN87	504
Prowler 550 XT	Headrest Pad Assembly	CH73	12
Prowler 550 XT	Brake Return Spring	DR10	12
Prowler 550 XT	Cargo Box	BD12	72
Prowler 550 XT	Fender (L or R)	BD14	12
Prowler 550 XT	Tailgate Striker Plate (1 or 2)	BD16	12
Prowler 550 XT	Tailgate Latch Rod (1 or 2)	BD18	12
Prowler 550 XT	Headlight Switch	BD20	12
Prowler 550 XT	Speed Sensor Assembly	EL32	12
Prowler 550 XT	Centrifugal Clutch Assembly	CT02	120

Prowler 550 XT	Gear Shift Cable/Rod	CT09	24
Prowler 550 XT	Starter Idler Gear	CT17	108
Prowler 550 XT	V-Belt Cover/Gasket	CT18	24
Prowler 550 XT	Shift Lever Knob	CT21	12
Prowler 550 XT	Cam Chain Adjuster	EG02	12
Prowler 550 XT	Cam Chain Guide	EG03	126
Prowler 550 XT	Cam Chain Tensioner	EG04	102
Prowler 550 XT	Cam Shaft and/or Sprocket	EG05	96
Prowler 550 XT	Cam Shaft Drive Chain	EG06	348
Prowler 550 XT	Crank Balancer Assembly	EG10	522
Prowler 550 XT	Engine Oil Strainer	EG11	30
Prowler 550 XT	Exhaust Pipe	EG12	12
Prowler 550 XT	Oil Pump Drive Gear	EG16	120
Prowler 550 XT	Oil Pump Driven Gear	EG17	120
Prowler 550 XT	Radiator Assembly	EG20	60
Prowler 550 XT	Radiator Cap	EG21	12
Prowler 550 XT	Radiator Screen	EG22	12
Prowler 550 XT	Valve Rocker Arm/Shaft	EG23	78
Prowler 550 XT	Battery Cable	EE01	12
Prowler 550 XT	Battery Holder Assembly	EE02	12
Prowler 550 XT	Axle Shaft (1) (Front or Rear)	SS02	48
Prowler 550 XT	Hub Bearing (1) (Front)/Knuckle	SS03	60
Prowler 550 XT	Steering Ball Joint	SS04	30
Prowler 550 XT	Tire	SS05	18
Prowler 550 XT	Stud/Hub	SS07	12
Prowler 550 XT	Shift Bracket	BD23	18
Prowler 550 XT	Shifter Plate	BD24	18
Prowler 550 XT	BD29- Decal, Warning (ATV)	BD29	12
Prowler 550 XT	Fuel Line Clamp	FU34	12
Prowler 550 XT	A-Arm (Lower)	SB01	36
Prowler 550 XT	A-Arm (Upper)	SB02	36
Prowler 550 XT	Steering Tie Rod	SB16	48
Prowler 550 XT	Sway Bar Assembly	SB17	18
Prowler 550 XT	Tie Rod End (1)	SB19	24
Prowler 550 XT	Steering Wheel	SB33	12
Prowler 550 XT	Arm (Rear)	SU01	18
Prowler 550 XT	Front Differential Lock Control	DR77	12
Prowler 550 XT	Frame	BD02	1020
Prowler 550 XT	12 Volt Power Adapter	EL22	12
Prowler 550 XT	Fuse Holder Cover	EL23	12
Prowler 550 XT	Speedometer, Digital	EL29	12
Prowler 550 XT	Crankshaft/Bearing(s)/Seals/Clean	EN07	522
Prowler 550 XT	Cylinder(s)/Gasket	EN09	222
Prowler 550 XT	Cylinder Honing	EN10	30
Prowler 550 XT	Engine (Complete)	EN12	132
Prowler 550 XT	Engine Rubber Mount(s)	EN14	36
Prowler 550 XT	Expansion Chamber	EN19	12
Prowler 550 XT	Fan Assembly	EN20	24
Prowler 550 XT	Head and/or Gasket(s)	EN28	186
Prowler 550 XT	Piston(s)/Pin(s)/Bearing(s)	EN30	234
Prowler 550 XT	Ring Set(s)	EN31	228
Prowler 550 XT	Thermostat and Gasket	EN36	12

Prowler 550 XT	Exhaust Valve Plate/Cover/Gasket	EN39	12
Prowler 550 XT	Valve, Intake/Exhaust	EN54	246
Prowler 550 XT	Gas Tank (Complete)	FU04	36
Prowler 550 XT	Fuel Line	FU07	12
Prowler 550 XT	Air Intake Silencer	FU10	24
Prowler 550 XT	Throttle Cable	FU16	12
Prowler 550 XT	Air Temperature Sensor	FU17	12
Prowler 550 XT	ECU	FU21	12
Prowler 550 XT	Fuel Injectors	FU23	18
Prowler 550 XT	Throttle Body	FU29	24
Prowler 550 XT	Throttle Position Sensor	FU30	18
Prowler 550 XT	Water Temperature Sensor	FU31	12
Prowler 550 XT	Drive Clutch Stationary Sheave	DR28	36
Prowler 550 XT	Driven Pulley (Complete)	DR31	66
Prowler 550 XT	Master Cylinder Complete	DR53	48
Prowler 550 XT	Brake Pedal	DR59	24
Prowler 550 XT	Ignition Coil (1)	EL05	12
Prowler 550 XT	Ignition Switch	EL06	12
Prowler 550 XT	Stator	EL07	108
Prowler 550 XT	Magneto Case	EL08	108
Prowler 550 XT	Main Wiring Harness	EL09	90
Prowler 550 XT	Rotor Assembly/Starter Clutch Set	EL10	150
Prowler 550 XT	Spark Plug Cap Assembly	EL13	12
Prowler 550 XT	Battery	AC02	12
Prowler 550 XT	Solenoid	AC06	12
Prowler 550 XT	Starter Motor	AC11	12
Prowler 550 XT	Voltage Regulator/Rectifier	AC14	12
Prowler 550 XT	Storage Compartment	CH46	12
Prowler 550 XT	Console/LED Panel	CH04	54
Prowler 550 XT	Hood Decals	CH10	36
Prowler 550 XT	Hood Latch	CH15	12
Prowler 550 XT	Seat Assembly	CH18	12
Prowler 550 XT	Seat Base	CH28	12
Prowler 550 XT	Tailgate Assembly	CH31	24
Prowler 550 XT	Brake Disc	DR04	42
Prowler 550 XT	Brake Bleeding (Hyd)	DR05	60
Prowler 550 XT	Brake Hose (Hyd)	DR06	48
Prowler 550 XT	Brake Switch	DR11	12
Prowler 550 XT	Axle Seal (Front or Rear)	SS08	60
Prowler 550 XT	Steering Wheel Shaft	SB40	18
Prowler 550 XT	Upper Rear A-arm	SU33	18
Prowler 550 XT	Seat Belt	CH57	12
Prowler 550 XT	Shift Mount	CT25	18
Prowler 550 XT	Parking Brake Cable	DR84	24
Prowler 550 XT	Parking Brake Assy	DR83	12
Prowler 550 XT	Switch 2WD/4WD	BD33	12
Prowler 550 XT	Exhaust Seal	EN69	12
Prowler 550 XT	Heat Shield	CH59	12
Prowler 550 XT	Belly Panel	CH60	12
Prowler 550 XT	Belly Panel Side	CH61	12
Prowler 550 XT	Canopy Support	CH52	12
Prowler 550 XT	Floor	CH55	18

Prowler 550 XT	Tailgate Cable	BD34	12
Prowler 550 XT	Idle Speed Control Valve	FU45	18
Prowler 550 XT	Canopy Tube (Front)	CH53	18
Prowler 550 XT	Canopy Tube (Rear)	CH54	30
Prowler 550 XT	Parking Brake Switch	EL52	18
Prowler 550 XT	Parking Brake Indicator Light	EL51	12
Prowler 550 XT	Brake Disc (Rear)	DR81	36
Prowler 550 XT	Relay	EL53	12
Prowler 550 XT	Drive Clutch Movable Sheave	DR55	30
Prowler 550 XT	Hood w/Decals	CH11	60
Prowler 550 XT	Air Intake Duct	CH14	12
Prowler 550 XT	Decal/Reflector (Any)	CH24	12
Prowler 550 XT	Transmission Inner components	CT19	582
Prowler 550 XT	Front Bumper Bracket	CH51	24
Prowler 550 XT	Hood Bracket	CH56	12
Prowler 550 XT	Taillight Housing	EL15	12
Prowler 550 XT	Crankcase	EN06	552

Prowler 1000 XTZ

Model	Activity Code Description	Activity Code	Qty In Min
Prowler 1000 XTZ	Gearcase, Front	CT07	90
Prowler 1000 XTZ	Gearcase, Front Rebuild	CT23	132
Prowler 1000 XTZ	Rack and Pinion Assembly	SB38	144
Prowler 1000 XTZ	Complete Warranty Claim	WP00	5
Prowler 1000 XTZ	Fuel Pump	FU09	18
Prowler 1000 XTZ	Headlight Assembly	EL03	12
Prowler 1000 XTZ	Water Pump Complete	EN61	42
Prowler 1000 XTZ	Gearcase(Rear)Clutch Cartridge	CT32	72
Prowler 1000 XTZ	Parking Brake Lever	BD37	12
Prowler 1000 XTZ	Side Restraint (1)	BD38	12
Prowler 1000 XTZ	Electric Power Steering	EL61	96
Prowler 1000 XTZ	Clutch Cover/Gasket/Seal	DR01	102
Prowler 1000 XTZ	Bumper (Front)	CH05	12
Prowler 1000 XTZ	Pinion Housing Seal (Rear)	CT28	72
Prowler 1000 XTZ	U-Joint (Front)	CT30	54
Prowler 1000 XTZ	U-Joint (Rear)	CT31	78
Prowler 1000 XTZ	Gear Case Bladder	DR64	12
Prowler 1000 XTZ	Tilt Sensor Switch	EL31	12
Prowler 1000 XTZ	Shock Absorber (Front/Rear)	SB06	18
Prowler 1000 XTZ	Shock Spring (Front/Rear)	SB07	18
Prowler 1000 XTZ	Steering Shaft (Lower)	SB39	48
Prowler 1000 XTZ	Battery Cable,Relay to Starter	EE04	12
Prowler 1000 XTZ	Driveshaft (Front)	CT04	24
Prowler 1000 XTZ	Driveshaft (Rear)	CT05	48
Prowler 1000 XTZ	Cargo Box Latch	BD32	12
Prowler 1000 XTZ	Actuator	EL33	18
Prowler 1000 XTZ	Gear Case (Rear)	CT15	96
Prowler 1000 XTZ	Lift Support	BD35	12
Prowler 1000 XTZ	Pinion Housing Seal (Front)	CT27	96
Prowler 1000 XTZ	Piston (Front and Rear)	EN97	210
Prowler 1000 XTZ	Piston (Front or Rear)	EN96	174
Prowler 1000 XTZ	Parking Brake Disc	DR91	60
Prowler 1000 XTZ	Crankcase, Lower	EG30	258
Prowler 1000 XTZ	Accelerator Assy	CH58	12
Prowler 1000 XTZ	Gear Shifting Lever	CT12	12
Prowler 1000 XTZ	Gear Shifting Shaft/Return Spring	CT13	12
Prowler 1000 XTZ	Gear Case, Rear (Rebuild)	DR65	156
Prowler 1000 XTZ	Oil Pump/Gasket/O-Rings (Complete)	FU12	726
Prowler 1000 XTZ	Steering Support Bracket	CH77	120
Prowler 1000 XTZ	Reverse Override Switch	EL60	12
Prowler 1000 XTZ	Gear Shift Position Sensor	EL58	42
Prowler 1000 XTZ	Camshaft/Sprocket (Front or Rear)	EN88	126
Prowler 1000 XTZ	Camshaft/Sprocket (Front and Rear)	EN89	162
Prowler 1000 XTZ	Head W/Valves (gskt) Front or Rear	EN90	180
Prowler 1000 XTZ	Head W/Valves(gskt)Front and Rear	EN91	216
Prowler 1000 XTZ	Cylinder (Front or Rear)	EN92	162
Prowler 1000 XTZ	Cylinder (Front and Rear)	EN93	198
Prowler 1000 XTZ	Rings (Front or Rear)	EN94	168

Prowler 1000 XTZ	Rings (Front and Rear)	EN95	204
Prowler 1000 XTZ	Air Pressure Sensor	FU49	18
Prowler 1000 XTZ	Engine Short Block	EN87	642
Prowler 1000 XTZ	Headrest Pad Assembly	CH73	12
Prowler 1000 XTZ	Brake Return Spring	DR10	12
Prowler 1000 XTZ	Oil Filler Case	GM03	30
Prowler 1000 XTZ	Cargo Box	BD12	72
Prowler 1000 XTZ	Fender (L or R)	BD14	12
Prowler 1000 XTZ	Tailgate Striker Plate (1 or 2)	BD16	12
Prowler 1000 XTZ	Tailgate Latch Rod (1 or 2)	BD18	12
Prowler 1000 XTZ	Headlight Switch	BD20	12
Prowler 1000 XTZ	Speed Sensor Assembly	EL32	12
Prowler 1000 XTZ	Centrifugal Clutch Assembly	CT02	144
Prowler 1000 XTZ	Gear Shift Cable/Rod	CT09	24
Prowler 1000 XTZ	Gear Shifting Cam/Fork	CT11	738
Prowler 1000 XTZ	Starter Idler Gear	CT17	30
Prowler 1000 XTZ	V-Belt Cover/Gasket	CT18	48
Prowler 1000 XTZ	Shift Lever Knob	CT21	12
Prowler 1000 XTZ	Cam Chain Adjuster	EG02	12
Prowler 1000 XTZ	Cam Chain Guide	EG03	216
Prowler 1000 XTZ	Cam Chain Tensioner	EG04	252
Prowler 1000 XTZ	Cam Shaft Drive Chain	EG06	252
Prowler 1000 XTZ	Engine Oil Strainer	EG11	30
Prowler 1000 XTZ	Exhaust Pipe	EG12	30
Prowler 1000 XTZ	Oil Cooler	EG14	12
Prowler 1000 XTZ	Oil Pump Drive Gear	EG16	720
Prowler 1000 XTZ	Oil Pump Driven Gear	EG17	720
Prowler 1000 XTZ	Output/Input Hose	EG18	30
Prowler 1000 XTZ	Radiator Assembly	EG20	60
Prowler 1000 XTZ	Radiator Cap	EG21	12
Prowler 1000 XTZ	Radiator Screen	EG22	12
Prowler 1000 XTZ	Valve Rocker Arm/Shaft	EG23	180
Prowler 1000 XTZ	Battery Cable	EE01	12
Prowler 1000 XTZ	Battery Holder Assembly	EE02	12
Prowler 1000 XTZ	Axle Shaft (1) (Front or Rear)	SS02	48
Prowler 1000 XTZ	Hub Bearing (1) (Front)/Knuckle	SS03	60
Prowler 1000 XTZ	Steering Ball Joint	SS04	30
Prowler 1000 XTZ	Tire	SS05	18
Prowler 1000 XTZ	Stud/Hub	SS07	12
Prowler 1000 XTZ	Shifter Plate	BD24	18
Prowler 1000 XTZ	Decal, Warning (ATV)	BD29	12
Prowler 1000 XTZ	Fuel Line Clamp	FU34	12
Prowler 1000 XTZ	A-Arm (Lower)	SB01	36
Prowler 1000 XTZ	A-Arm (Upper)	SB02	36
Prowler 1000 XTZ	Steering Tie Rod	SB16	162
Prowler 1000 XTZ	Sway Bar Assembly	SB17	18
Prowler 1000 XTZ	Tie Rod End (1)	SB19	24
Prowler 1000 XTZ	Steering Wheel	SB33	12
Prowler 1000 XTZ	Arm (Rear)	SU01	18
Prowler 1000 XTZ	Front Differential Lock Control	DR77	12
Prowler 1000 XTZ	Frame	BD02	1086
Prowler 1000 XTZ	12 Volt Power Adapter	EL22	12

Prowler 1000 XTZ	Fuse Holder Cover	EL23	12
Prowler 1000 XTZ	Speedometer, Digital	EL29	12
Prowler 1000 XTZ	Crankshaft/Bearing(s)/Seals/Clean	EN07	714
Prowler 1000 XTZ	Engine (Complete)	EN12	198
Prowler 1000 XTZ	Engine Rubber Mount(s)	EN14	198
Prowler 1000 XTZ	Expansion Chamber	EN19	18
Prowler 1000 XTZ	Fan Assembly	EN20	24
Prowler 1000 XTZ	Thermostat and Gasket	EN36	24
Prowler 1000 XTZ	Water Pump Components	EN38	54
Prowler 1000 XTZ	Valve, Intake/Exhaust	EN54	276
Prowler 1000 XTZ	Gas Tank (Complete)	FU04	36
Prowler 1000 XTZ	Fuel Line	FU07	12
Prowler 1000 XTZ	Air Intake Silencer	FU10	24
Prowler 1000 XTZ	Throttle Cable	FU16	36
Prowler 1000 XTZ	Air Temperature Sensor	FU17	12
Prowler 1000 XTZ	ECU	FU21	12
Prowler 1000 XTZ	Fuel Injectors	FU23	30
Prowler 1000 XTZ	Throttle Body	FU29	48
Prowler 1000 XTZ	Throttle Position Sensor	FU30	24
Prowler 1000 XTZ	Water Temperature Sensor	FU31	18
Prowler 1000 XTZ	Drive Clutch Stationary Sheave	DR28	60
Prowler 1000 XTZ	Driven Pulley (Complete)	DR31	72
Prowler 1000 XTZ	Master Cylinder Complete	DR53	48
Prowler 1000 XTZ	Brake Pedal	DR59	24
Prowler 1000 XTZ	Ignition Coil (1)	EL05	12
Prowler 1000 XTZ	Ignition Switch	EL06	12
Prowler 1000 XTZ	Stator	EL07	54
Prowler 1000 XTZ	Magneto Case	EL08	54
Prowler 1000 XTZ	Main Wiring Harness	EL09	120
Prowler 1000 XTZ	Rotor Assembly/Starter Clutch Set	EL10	78
Prowler 1000 XTZ	Spark Plug Cap Assembly	EL13	12
Prowler 1000 XTZ	Battery	AC02	12
Prowler 1000 XTZ	Solenoid	AC06	12
Prowler 1000 XTZ	Starter Motor	AC11	12
Prowler 1000 XTZ	Voltage Regulator/Rectifier	AC14	12
Prowler 1000 XTZ	Storage Compartment	CH46	12
Prowler 1000 XTZ	Console/LED Panel	CH04	54
Prowler 1000 XTZ	Hood Decals	CH10	36
Prowler 1000 XTZ	Hood Latch	CH15	12
Prowler 1000 XTZ	Seat Assembly	CH18	12
Prowler 1000 XTZ	Seat Base	CH28	12
Prowler 1000 XTZ	Tailgate Assembly	CH31	24
Prowler 1000 XTZ	Brake Assembly/ Calipers	DR02	72
Prowler 1000 XTZ	Brake Disc	DR04	42
Prowler 1000 XTZ	Brake Bleeding (Hyd)	DR05	60
Prowler 1000 XTZ	Brake Hose (Hyd)	DR06	48
Prowler 1000 XTZ	Brake Switch	DR11	12
Prowler 1000 XTZ	Axle Seal (Front or Rear)	SS08	60
Prowler 1000 XTZ	Steering Wheel Shaft	SB40	18
Prowler 1000 XTZ	Upper Rear A-arm	SU33	18
Prowler 1000 XTZ	Seat Belt	CH57	12
Prowler 1000 XTZ	Shift Mount	CT25	18

Prowler 1000 XTZ	Parking Brake Cable	DR84	48
Prowler 1000 XTZ	Parking Brake Assy	DR83	60
Prowler 1000 XTZ	Switch 2WD/4WD	BD33	12
Prowler 1000 XTZ	Exhaust Seal	EN69	30
Prowler 1000 XTZ	Heat Shield	CH59	12
Prowler 1000 XTZ	Belly Panel	CH60	12
Prowler 1000 XTZ	Belly Panel Side	CH61	12
Prowler 1000 XTZ	Canopy Support	CH52	12
Prowler 1000 XTZ	Floor	CH55	18
Prowler 1000 XTZ	Tailgate Cable	BD34	12
Prowler 1000 XTZ	Idle Speed Control Valve	FU45	18
Prowler 1000 XTZ	Canopy Tube (Front)	CH53	18
Prowler 1000 XTZ	Canopy Tube (Rear)	CH54	30
Prowler 1000 XTZ	Parking Brake Switch	EL52	18
Prowler 1000 XTZ	Parking Brake Indicator Light	EL51	12
Prowler 1000 XTZ	Relay	EL53	12
Prowler 1000 XTZ	Drive Clutch Movable Sheave	DR55	60
Prowler 1000 XTZ	Hood w/Decals	CH11	60
Prowler 1000 XTZ	Air Intake Duct	CH14	12
Prowler 1000 XTZ	Decal/Reflector (Any)	CH24	12
Prowler 1000 XTZ	Transmission Inner components	CT19	738
Prowler 1000 XTZ	Front Bumper Bracket	CH51	24
Prowler 1000 XTZ	Hood Bracket	CH56	12
Prowler 1000 XTZ	Taillight Housing	EL15	12
Prowler 1000 XTZ	Crankcase	EN06	756

Prowler 700 HDX

Model	Activity Code Description	Activity Code	Qty In Min
Prowler 700 HDX	Gearcase, Front	CT07	90
Prowler 700 HDX	Gearcase, Front Rebuild	CT23	132
Prowler 700 HDX	Rack and Pinion Assembly	SB38	144
Prowler 700 HDX	Complete Warranty Claim	WP00	5
Prowler 700 HDX	Fuel Pump	FU09	24
Prowler 700 HDX	Headlight Assembly	EL03	12
Prowler 700 HDX	Cargo Box Side(1)	BD39	18
Prowler 700 HDX	Water Pump Complete	EN61	36
Prowler 700 HDX	Side Restraint (1)	BD38	12
Prowler 700 HDX	Electric Power Steering	EL61	96
Prowler 700 HDX	Intake Boot	FU50	18
Prowler 700 HDX	Clutch Cover/Gasket/Seal	DR01	114
Prowler 700 HDX	Bumper (Front)	CH05	12
Prowler 700 HDX	Pinion Housing Seal (Rear)	CT28	72
Prowler 700 HDX	U-Joint (Rear)	CT31	48
Prowler 700 HDX	Gear Case Bladder	DR64	12
Prowler 700 HDX	Tilt Sensor Switch	EL31	18
Prowler 700 HDX	Shock Absorber (Front/Rear)	SB06	18
Prowler 700 HDX	Shock Spring (Front/Rear)	SB07	18
Prowler 700 HDX	Steering Shaft (Lower)	SB39	48
Prowler 700 HDX	Battery Cable,Relay to Starter	EE04	24
Prowler 700 HDX	Belt Cooling Duct (Front)	EN57	30
Prowler 700 HDX	Belt Cooling Duct (Rear)	EN58	18
Prowler 700 HDX	Driveshaft (Front)	CT04	48
Prowler 700 HDX	Driveshaft (Rear)	CT05	12
Prowler 700 HDX	Cargo Box Latch	BD32	12
Prowler 700 HDX	Actuator	EL33	18
Prowler 700 HDX	Gear Case (Rear)	CT15	96
Prowler 700 HDX	Lift Support	BD35	12
Prowler 700 HDX	Pinion Housing Seal (Front)	CT27	96
Prowler 700 HDX	Tilt Steering	SB43	42
Prowler 700 HDX	Accelerator Assy	CH58	12
Prowler 700 HDX	Gear Shifting Lever	CT12	18
Prowler 700 HDX	Gear Shifting Shaft/Return Spring	CT13	24
Prowler 700 HDX	Gear Case, Rear (Rebuild)	DR65	156
Prowler 700 HDX	Plastic Magneto Cover	EN70	24
Prowler 700 HDX	Oil Pump/Gasket/O-Rings (Complete)	FU12	132
Prowler 700 HDX	Steering Support Bracket	CH77	120
Prowler 700 HDX	Reverse Override Switch	EL60	12
Prowler 700 HDX	Gear Shift Position Sensor	EL58	126
Prowler 700 HDX	Air Pressure Sensor	FU49	18
Prowler 700 HDX	Engine Short Block	EN87	504
Prowler 700 HDX	Headrest Pad Assembly	CH73	12
Prowler 700 HDX	Brake Return Spring	DR10	12
Prowler 700 HDX	Fender (L or R)	BD14	12
Prowler 700 HDX	Tailgate Striker Plate (1 or 2)	BD16	12
Prowler 700 HDX	Tailgate Latch Rod (1 or 2)	BD18	12
Prowler 700 HDX	Headlight Switch	BD20	12

Prowler 700 HDX	Speed Sensor Assembly	EL32	24
Prowler 700 HDX	Centrifugal Clutch Assembly	CT02	144
Prowler 700 HDX	Gear Shift Cable/Rod	CT09	48
Prowler 700 HDX	Starter Idler Gear	CT17	108
Prowler 700 HDX	V-Belt Cover/Gasket	CT18	60
Prowler 700 HDX	Shift Lever Knob	CT21	12
Prowler 700 HDX	Cam Chain Adjuster	EG02	18
Prowler 700 HDX	Cam Chain Guide	EG03	126
Prowler 700 HDX	Cam Chain Tensioner	EG04	102
Prowler 700 HDX	Cam Shaft and/or Sprocket	EG05	96
Prowler 700 HDX	Cam Shaft Drive Chain	EG06	348
Prowler 700 HDX	Crank Balancer Assembly	EG10	522
Prowler 700 HDX	Engine Oil Strainer	EG11	30
Prowler 700 HDX	Exhaust Pipe	EG12	24
Prowler 700 HDX	Oil Pump Drive Gear	EG16	120
Prowler 700 HDX	Oil Pump Driven Gear	EG17	120
Prowler 700 HDX	Radiator Assembly	EG20	60
Prowler 700 HDX	Radiator Cap	EG21	12
Prowler 700 HDX	Radiator Screen	EG22	12
Prowler 700 HDX	Valve Rocker Arm/Shaft	EG23	78
Prowler 700 HDX	Battery Cable	EE01	24
Prowler 700 HDX	Battery Holder Assembly	EE02	12
Prowler 700 HDX	Axle Shaft (1) (Front or Rear)	SS02	48
Prowler 700 HDX	Hub Bearing (1) (Front)/Knuckle	SS03	60
Prowler 700 HDX	Steering Ball Joint	SS04	30
Prowler 700 HDX	Tire	SS05	18
Prowler 700 HDX	Stud/Hub	SS07	12
Prowler 700 HDX	Decal, Warning (ATV)	BD29	12
Prowler 700 HDX	Fuel Line Clamp	FU34	12
Prowler 700 HDX	Oxygen Sensor	FU39	12
Prowler 700 HDX	A-Arm (Lower)	SB01	36
Prowler 700 HDX	A-Arm (Upper)	SB02	36
Prowler 700 HDX	Steering Tie Rod	SB16	162
Prowler 700 HDX	Sway Bar Assembly	SB17	18
Prowler 700 HDX	Tie Rod End (1)	SB19	24
Prowler 700 HDX	Steering Wheel	SB33	12
Prowler 700 HDX	Arm (Rear)	SU01	18
Prowler 700 HDX	Shock Rebuild	SU28	90
Prowler 700 HDX	Frame	BD02	1020
Prowler 700 HDX	12 Volt Power Adapter	EL22	12
Prowler 700 HDX	Fuse Holder Cover	EL23	12
Prowler 700 HDX	Speedometer, Digital	EL29	12
Prowler 700 HDX	Crankshaft/Bearing(s)/Seals/Clean	EN07	522
Prowler 700 HDX	Cylinder(s)/Gasket	EN09	222
Prowler 700 HDX	Cylinder Honing	EN10	30
Prowler 700 HDX	Engine (Complete)	EN12	132
Prowler 700 HDX	Engine Rubber Mount(s)	EN14	36
Prowler 700 HDX	Expansion Chamber	EN19	12
Prowler 700 HDX	Fan Assembly	EN20	24
Prowler 700 HDX	Head and/or Gasket(s)	EN28	186
Prowler 700 HDX	Piston(s)/Pin(s)/Bearing(s)	EN30	234
Prowler 700 HDX	Ring Set(s)	EN31	228

Prowler 700 HDX	Thermostat and Gasket	EN36	12
Prowler 700 HDX	Exhaust Valve Plate/Cover/Gasket	EN39	12
Prowler 700 HDX	Valve, Intake/Exhaust	EN54	246
Prowler 700 HDX	Gas Tank (Complete)	FU04	36
Prowler 700 HDX	Fuel Line	FU07	18
Prowler 700 HDX	Air Intake Silencer	FU10	24
Prowler 700 HDX	Throttle Cable	FU16	30
Prowler 700 HDX	Air Temperature Sensor	FU17	12
Prowler 700 HDX	ECU	FU21	12
Prowler 700 HDX	Fuel Injectors	FU23	18
Prowler 700 HDX	Throttle Body	FU29	24
Prowler 700 HDX	Throttle Position Sensor	FU30	18
Prowler 700 HDX	Water Temperature Sensor	FU31	18
Prowler 700 HDX	Drive Clutch Stationary Sheave	DR28	72
Prowler 700 HDX	Driven Pulley (Complete)	DR31	84
Prowler 700 HDX	Master Cylinder Complete	DR53	48
Prowler 700 HDX	Brake Pedal	DR59	24
Prowler 700 HDX	Ignition Coil (1)	EL05	18
Prowler 700 HDX	Ignition Switch	EL06	12
Prowler 700 HDX	Stator	EL07	108
Prowler 700 HDX	Magneto Case	EL08	108
Prowler 700 HDX	Main Wiring Harness	EL09	90
Prowler 700 HDX	Rotor Assembly/Starter Clutch Set	EL10	147
Prowler 700 HDX	Spark Plug Cap Assembly	EL13	12
Prowler 700 HDX	Battery	AC02	12
Prowler 700 HDX	Solenoid	AC06	12
Prowler 700 HDX	Starter Motor	AC11	24
Prowler 700 HDX	Voltage Regulator/Rectifier	AC14	18
Prowler 700 HDX	Storage Compartment	CH46	12
Prowler 700 HDX	Console/LED Panel	CH04	54
Prowler 700 HDX	Hood Decals	CH10	36
Prowler 700 HDX	Hood Latch	CH15	12
Prowler 700 HDX	Seat Assembly	CH18	12
Prowler 700 HDX	Seat Base	CH28	12
Prowler 700 HDX	Tailgate Assembly	CH31	12
Prowler 700 HDX	Brake Assembly/ Calipers	DR02	72
Prowler 700 HDX	Brake Disc	DR04	48
Prowler 700 HDX	Brake Bleeding (Hyd)	DR05	60
Prowler 700 HDX	Brake Hose (Hyd)	DR06	48
Prowler 700 HDX	Brake Switch	DR11	12
Prowler 700 HDX	Axle Seal (Front or Rear)	SS08	60
Prowler 700 HDX	Upper Rear A-arm	SU33	18
Prowler 700 HDX	Seat Belt	CH57	12
Prowler 700 HDX	Switch 2WD/4WD	BD33	12
Prowler 700 HDX	Exhaust Seal	EN69	18
Prowler 700 HDX	Heat Shield	CH59	12
Prowler 700 HDX	Belly Panel	CH60	12
Prowler 700 HDX	Belly Panel Side	CH61	12
Prowler 700 HDX	Canopy Support	CH52	12
Prowler 700 HDX	Floor	CH55	18
Prowler 700 HDX	Tailgate Cable	BD34	12
Prowler 700 HDX	Idle Speed Control Valve	FU45	18

Prowler 700 HDX	Canopy Tube (Front)	CH53	18
Prowler 700 HDX	Canopy Tube (Rear)	CH54	30
Prowler 700 HDX	Relay	EL53	12
Prowler 700 HDX	Drive Clutch Movable Sheave	DR55	72
Prowler 700 HDX	Hood w/Decals	CH11	60
Prowler 700 HDX	Air Intake Duct	CH14	18
Prowler 700 HDX	Decal/Reflector (Any)	CH24	12
Prowler 700 HDX	Transmission Inner components	CT19	582
Prowler 700 HDX	Front Bumper Bracket	CH51	24
Prowler 700 HDX	Hood Bracket	CH56	12
Prowler 700 HDX	Taillight Housing	EL15	12
Prowler 700 HDX	Crankcase	EN06	552

Wildcat

Model	Activity Code Description	Activity Code	Qty In Min
Wildcat	Gearcase, Front	CT07	156
Wildcat	Gearcase, Front Rebuild	CT23	204
Wildcat	Door Latch	BD42	12
Wildcat	Door Frame	BD40	18
Wildcat	Door Hinge	BD41	12
Wildcat	Door W/Decals	BD43	18
Wildcat	Rack and Pinion Assembly	SB38	228
Wildcat	Seat Latch	CH47	12
Wildcat	Complete Warranty Claim	WP00	5
Wildcat	Drive Clutch IdlerSleeve	DR92	102
Wildcat	Fuel Pump	FU09	42
Wildcat	Headlight Assembly	EL03	12
Wildcat	Water Pump Complete	EN61	78
Wildcat	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat	Side Restraint (1)	BD38	12
Wildcat	Electric Power Steering	EL61	42
Wildcat	Intake Boot	FU50	42
Wildcat	Clutch Cover/Gasket/Seal	DR01	108
Wildcat	Pinion Housing Seal (Rear)	CT28	120
Wildcat	Gear Case Bladder	DR64	12
Wildcat	Clutch Cover (Inner)	DR87	90
Wildcat	Tilt Sensor Switch	EL31	24
Wildcat	Shock Absorber (Front/Rear)	SB06	18
Wildcat	Shock Spring (Front/Rear)	SB07	18
Wildcat	Battery Cable,Relay to Starter	EE04	24
Wildcat	Driveshaft (Front)	CT04	60
Wildcat	Driveshaft (Rear)	CT05	120
Wildcat	Actuator	EL33	12
Wildcat	Gear Case (Rear)	CT15	108
Wildcat	Lift Support	BD35	12
Wildcat	Pinion Housing Seal (Front)	CT27	168
Wildcat	Piston (Front and Rear)	EN97	378
Wildcat	Piston (Front or Rear)	EN96	342
Wildcat	Crankcase, Lower	EG30	390
Wildcat	Steering Shaft	SB34	78
Wildcat	Accelerator Assy	CH58	12
Wildcat	Gear Shifting Lever	CT12	24
Wildcat	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat	Gear Case, Rear (Rebuild)	DR65	168
Wildcat	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat	Driveshaft Isolator	CT34	36
Wildcat	Driveshaft (Center)	CT33	42
Wildcat	Suspension Link (Lower)	SU35	18
Wildcat	Suspension Link (Upper)	SU36	18
Wildcat	Trailing Arm (Lower)	SU37	30
Wildcat	Trailing Arm (Upper)	SU38	36
Wildcat	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat	Trailing Arm Mount Assy (Upper)	SU40	36

Wildcat	Glove Box Cover	BD44	12
Wildcat	Glove Box Latch	BD45	12
Wildcat	Reverse Override Switch	EL60	12
Wildcat	Gear Shift Position Sensor	EL58	18
Wildcat	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat	Cylinder (Front or Rear)	EN92	288
Wildcat	Cylinder (Front and Rear)	EN93	324
Wildcat	Rings (Front or Rear)	EN94	336
Wildcat	Rings (Front and Rear)	EN95	372
Wildcat	Air Pressure Sensor	FU49	42
Wildcat	Engine Short Block	EN87	780
Wildcat	Brake Return Spring	DR10	12
Wildcat	Oil Filler Case	GM03	12
Wildcat	Muffler Cover (All)	GM09	24
Wildcat	Skid Plate (Front/Rear)	BD08	12
Wildcat	Cargo Box	BD12	30
Wildcat	Fender (L or R)	BD14	12
Wildcat	Headlight Switch	BD20	12
Wildcat	Brake Pressure Switch	BE01	12
Wildcat	Speed Sensor Assembly	EL32	12
Wildcat	Gear Shift Cable/Rod	CT09	48
Wildcat	Gear Shifting Cam/Fork	CT11	876
Wildcat	Starter Idler Gear	CT17	48
Wildcat	V-Belt Cover/Gasket	CT18	48
Wildcat	Shift Lever Knob	CT21	12
Wildcat	Cam Chain Adjuster	EG02	36
Wildcat	Cam Chain Guide	EG03	306
Wildcat	Cam Chain Tensioner	EG04	492
Wildcat	Cam Shaft Drive Chain	EG06	492
Wildcat	Engine Oil Strainer	EG11	30
Wildcat	Exhaust Pipe	EG12	36
Wildcat	Oil Cooler	EG14	30
Wildcat	Oil Pump Drive Gear	EG16	852
Wildcat	Oil Pump Driven Gear	EG17	852
Wildcat	Output/Input Hose	EG18	42
Wildcat	Radiator Assembly	EG20	42
Wildcat	Radiator Cap	EG21	12
Wildcat	Radiator Screen	EG22	24
Wildcat	Valve Rocker Arm/Shaft	EG23	270
Wildcat	Battery Cable	EE01	12
Wildcat	Battery Holder Assembly	EE02	12
Wildcat	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat	Steering Ball Joint	SS04	66
Wildcat	Tire	SS05	18
Wildcat	Shifter Plate	BD24	18
Wildcat	Decal, Warning (ATV)	BD29	12
Wildcat	A-Arm (Lower)	SB01	54
Wildcat	A-Arm (Upper)	SB02	24

Wildcat	Steering Tie Rod	SB16	36
Wildcat	Sway Bar Assembly	SB17	30
Wildcat	Tie Rod End (1)	SB19	24
Wildcat	Steering Wheel	SB33	12
Wildcat	Shock Rebuild	SU28	90
Wildcat	Frame	BD02	1080
Wildcat	12 Volt Power Adapter	EL22	12
Wildcat	Fuse Holder Cover	EL23	12
Wildcat	Speedometer, Digital	EL29	18
Wildcat	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat	Engine (Complete)	EN12	330
Wildcat	Engine Rubber Mount(s)	EN14	270
Wildcat	Expansion Chamber	EN19	24
Wildcat	Fan Assembly	EN20	30
Wildcat	Thermostat and Gasket	EN36	12
Wildcat	Intake Manifold/Studs/Bolts	EN49	84
Wildcat	Coolant Tank	EN53	30
Wildcat	Valve, Intake/Exhaust	EN54	294
Wildcat	Gas Tank (Complete)	FU04	60
Wildcat	Fuel Line	FU07	36
Wildcat	Air Intake Silencer	FU10	48
Wildcat	Throttle Cable	FU16	84
Wildcat	ECU	FU21	12
Wildcat	Fuel Injectors	FU23	36
Wildcat	Throttle Body	FU29	54
Wildcat	Throttle Position Sensor	FU30	54
Wildcat	Water Temperature Sensor	FU31	12
Wildcat	Drive Clutch Spring	DR27	66
Wildcat	Driven Pulley (Complete)	DR31	60
Wildcat	Driven Pulley Fixed Face	DR32	60
Wildcat	Driven Pulley Moveable Sheave	DR33	66
Wildcat	Driven Pulley Spring	DR34	66
Wildcat	Driven Pulley Torque Bracket	DR35	66
Wildcat	Master Cylinder Complete	DR53	18
Wildcat	Brake Pedal	DR59	12
Wildcat	Ignition Coil (1)	EL05	36
Wildcat	Ignition Switch	EL06	12
Wildcat	Stator	EL07	54
Wildcat	Magneto Case	EL08	54
Wildcat	Main Wiring Harness	EL09	150
Wildcat	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat	Spark Plug Cap Assembly	EL13	24
Wildcat	Battery	AC02	12
Wildcat	Solenoid	AC06	18
Wildcat	Starter Motor	AC11	30
Wildcat	Voltage Regulator/Rectifier	AC14	12
Wildcat	Storage Compartment	CH46	24
Wildcat	Console/LED Panel	CH04	54
Wildcat	Hood Decals	CH10	12
Wildcat	Seat Assembly	CH18	12
Wildcat	Seat Base	CH28	12
Wildcat	Brake Assembly/ Calipers	DR02	72

Wildcat	Brake Disc	DR04	42
Wildcat	Brake Hose (Hyd)	DR06	90
Wildcat	Passenger Handles	CH48	12
Wildcat	Axle Seal (Front or Rear)	SS08	48
Wildcat	Seat Belt	CH57	18
Wildcat	Switch 2WD/4WD	BD33	12
Wildcat	Exhaust Seal	EN69	36
Wildcat	Heat Shield	CH59	54
Wildcat	Belly Panel	CH60	12
Wildcat	Belly Panel Side	CH61	18
Wildcat	Floor	CH55	60
Wildcat	Idle Speed Control Valve	FU45	36
Wildcat	Canopy Tube (Front)	CH53	18
Wildcat	Canopy Tube (Rear)	CH54	36
Wildcat	Relay	EL53	12
Wildcat	Hood w/Decals	CH11	18
Wildcat	Air Intake Duct	CH14	42
Wildcat	Decal/Reflector (Any)	CH24	12
Wildcat	Transmission Inner components	CT19	876
Wildcat	Taillight Housing	EL15	12
Wildcat	Crankcase	EN06	894
Wildcat	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78

Wildcat 4

Model	Activity Code Description	Activity Code	Qty In Min
Wildcat 4	Gearcase, Front	CT07	210
Wildcat 4	Gearcase, Front Rebuild	CT23	258
Wildcat 4	Door Latch	BD42	12
Wildcat 4	Door Frame	BD40	18
Wildcat 4	Door Hinge	BD41	12
Wildcat 4	Door W/Decals	BD43	18
Wildcat 4	Rack and Pinion Assembly	SB38	282
Wildcat 4	Seat Latch	CH47	12
Wildcat 4	Complete Warranty Claim	WP00	5
Wildcat 4	Drive Clutch IdlerSleeve	DR92	102
Wildcat 4	Fuel Pump	FU09	42
Wildcat 4	Headlight Assembly	EL03	12
Wildcat 4	Water Pump Complete	EN61	78
Wildcat 4	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat 4	Side Restraint (1)	BD38	12
Wildcat 4	Electric Power Steering	EL61	42
Wildcat 4	Intake Boot	FU50	42
Wildcat 4	Clutch Cover/Gasket/Seal	DR01	108
Wildcat 4	Pinion Housing Seal (Rear)	CT28	120
Wildcat 4	Gear Case Bladder	DR64	12
Wildcat 4	Clutch Cover (Inner)	DR87	90
Wildcat 4	Tilt Sensor Switch	EL31	24
Wildcat 4	Shock Absorber (Front/Rear)	SB06	18
Wildcat 4	Shock Spring (Front/Rear)	SB07	18
Wildcat 4	Battery Cable,Relay to Starter	EE04	42
Wildcat 4	Driveshaft (Front)	CT04	114
Wildcat 4	Driveshaft (Rear)	CT05	120
Wildcat 4	Actuator	EL33	12
Wildcat 4	Gear Case (Rear)	CT15	108
Wildcat 4	Lift Support	BD35	12
Wildcat 4	Pinion Housing Seal (Front)	CT27	222
Wildcat 4	Piston (Front and Rear)	EN97	378
Wildcat 4	Piston (Front or Rear)	EN96	342
Wildcat 4	Crankcase, Lower	EG30	390
Wildcat 4	Steering Shaft	SB34	78
Wildcat 4	Accelerator Assy	CH58	12
Wildcat 4	Gear Shifting Lever	CT12	24
Wildcat 4	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat 4	Gear Case, Rear (Rebuild)	DR65	168
Wildcat 4	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat 4	Driveshaft Isolator	CT34	54
Wildcat 4	Driveshaft (Center)	CT33	90
Wildcat 4	Suspension Link (Lower)	SU35	18
Wildcat 4	Suspension Link (Upper)	SU36	18
Wildcat 4	Trailing Arm (Lower)	SU37	30
Wildcat 4	Trailing Arm (Upper)	SU38	36
Wildcat 4	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat 4	Trailing Arm Mount Assy (Upper)	SU40	36

Wildcat 4	Glove Box Cover	BD44	12
Wildcat 4	Glove Box Latch	BD45	12
Wildcat 4	Reverse Override Switch	EL60	12
Wildcat 4	Gear Shift Position Sensor	EL58	18
Wildcat 4	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat 4	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat 4	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat 4	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat 4	Cylinder (Front or Rear)	EN92	288
Wildcat 4	Cylinder (Front and Rear)	EN93	324
Wildcat 4	Rings (Front or Rear)	EN94	336
Wildcat 4	Rings (Front and Rear)	EN95	372
Wildcat 4	Air Pressure Sensor	FU49	42
Wildcat 4	Engine Short Block	EN87	780
Wildcat 4	Brake Return Spring	DR10	12
Wildcat 4	Oil Filler Case	GM03	12
Wildcat 4	Muffler Cover (All)	GM09	24
Wildcat 4	Skid Plate (Front/Rear)	BD08	12
Wildcat 4	Cargo Box	BD12	30
Wildcat 4	Fender (L or R)	BD14	12
Wildcat 4	Headlight Switch	BD20	12
Wildcat 4	Brake Pressure Switch	BE01	12
Wildcat 4	Speed Sensor Assembly	EL32	12
Wildcat 4	Gear Shift Cable/Rod	CT09	84
Wildcat 4	Gear Shifting Cam/Fork	CT11	876
Wildcat 4	Starter Idler Gear	CT17	48
Wildcat 4	V-Belt Cover/Gasket	CT18	48
Wildcat 4	Shift Lever Knob	CT21	12
Wildcat 4	Cam Chain Adjuster	EG02	36
Wildcat 4	Cam Chain Guide	EG03	306
Wildcat 4	Cam Chain Tensioner	EG04	492
Wildcat 4	Cam Shaft Drive Chain	EG06	492
Wildcat 4	Engine Oil Strainer	EG11	30
Wildcat 4	Exhaust Pipe	EG12	36
Wildcat 4	Oil Cooler	EG14	30
Wildcat 4	Oil Pump Drive Gear	EG16	852
Wildcat 4	Oil Pump Driven Gear	EG17	852
Wildcat 4	Output/Input Hose	EG18	78
Wildcat 4	Radiator Assembly	EG20	42
Wildcat 4	Radiator Cap	EG21	12
Wildcat 4	Radiator Screen	EG22	24
Wildcat 4	Valve Rocker Arm/Shaft	EG23	270
Wildcat 4	Battery Cable	EE01	30
Wildcat 4	Battery Holder Assembly	EE02	12
Wildcat 4	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat 4	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat 4	Steering Ball Joint	SS04	66
Wildcat 4	Tire	SS05	18
Wildcat 4	Shifter Plate	BD24	18
Wildcat 4	Decal, Warning (ATV)	BD29	12
Wildcat 4	A-Arm (Lower)	SB01	54
Wildcat 4	A-Arm (Upper)	SB02	24

Wildcat 4	Steering Tie Rod	SB16	36
Wildcat 4	Sway Bar Assembly	SB17	30
Wildcat 4	Tie Rod End (1)	SB19	24
Wildcat 4	Steering Wheel	SB33	12
Wildcat 4	Shock Rebuild	SU28	90
Wildcat 4	Frame	BD02	1140
Wildcat 4	12 Volt Power Adapter	EL22	12
Wildcat 4	Fuse Holder Cover	EL23	12
Wildcat 4	Speedometer, Digital	EL29	18
Wildcat 4	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat 4	Engine (Complete)	EN12	330
Wildcat 4	Engine Rubber Mount(s)	EN14	270
Wildcat 4	Expansion Chamber	EN19	24
Wildcat 4	Fan Assembly	EN20	30
Wildcat 4	Thermostat and Gasket	EN36	12
Wildcat 4	Intake Manifold/Studs/Bolts	EN49	84
Wildcat 4	Coolant Tank	EN53	30
Wildcat 4	Valve, Intake/Exhaust	EN54	294
Wildcat 4	Gas Tank (Complete)	FU04	60
Wildcat 4	Fuel Line	FU07	36
Wildcat 4	Air Intake Silencer	FU10	48
Wildcat 4	Throttle Cable	FU16	120
Wildcat 4	ECU	FU21	12
Wildcat 4	Fuel Injectors	FU23	36
Wildcat 4	Throttle Body	FU29	54
Wildcat 4	Throttle Position Sensor	FU30	54
Wildcat 4	Water Temperature Sensor	FU31	12
Wildcat 4	Drive Clutch Spring	DR27	66
Wildcat 4	Driven Pulley (Complete)	DR31	60
Wildcat 4	Driven Pulley Fixed Face	DR32	60
Wildcat 4	Driven Pulley Moveable Sheave	DR33	66
Wildcat 4	Driven Pulley Spring	DR34	66
Wildcat 4	Driven Pulley Torque Bracket	DR35	66
Wildcat 4	Master Cylinder Complete	DR53	18
Wildcat 4	Brake Pedal	DR59	12
Wildcat 4	Ignition Coil (1)	EL05	72
Wildcat 4	Ignition Switch	EL06	12
Wildcat 4	Stator	EL07	54
Wildcat 4	Magneto Case	EL08	54
Wildcat 4	Main Wiring Harness	EL09	186
Wildcat 4	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat 4	Spark Plug Cap Assembly	EL13	24
Wildcat 4	Battery	AC02	12
Wildcat 4	Solenoid	AC06	18
Wildcat 4	Starter Motor	AC11	30
Wildcat 4	Voltage Regulator/Rectifier	AC14	12
Wildcat 4	Storage Compartment	CH46	24
Wildcat 4	Console/LED Panel	CH04	54
Wildcat 4	Hood Decals	CH10	12
Wildcat 4	Seat Assembly	CH18	12
Wildcat 4	Seat Base	CH28	12
Wildcat 4	Brake Assembly/ Calipers	DR02	72

Wildcat 4	Brake Disc	DR04	42
Wildcat 4	Brake Hose (Hyd)	DR06	120
Wildcat 4	Passenger Handles	CH48	12
Wildcat 4	Axle Seal (Front or Rear)	SS08	48
Wildcat 4	Seat Belt	CH57	18
Wildcat 4	Switch 2WD/4WD	BD33	12
Wildcat 4	Exhaust Seal	EN69	36
Wildcat 4	Heat Shield	CH59	54
Wildcat 4	Belly Panel	CH60	18
Wildcat 4	Belly Panel Side	CH61	18
Wildcat 4	Floor	CH55	60
Wildcat 4	Idle Speed Control Valve	FU45	36
Wildcat 4	Canopy Tube (Front)	CH53	18
Wildcat 4	Canopy Tube (Rear)	CH54	36
Wildcat 4	Relay	EL53	12
Wildcat 4	Hood w/Decals	CH11	18
Wildcat 4	Air Intake Duct	CH14	42
Wildcat 4	Decal/Reflector (Any)	CH24	12
Wildcat 4	Transmission Inner components	CT19	876
Wildcat 4	Taillight Housing	EL15	12
Wildcat 4	Crankcase	EN06	894
Wildcat 4	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78

Wildcat Limited

Model	Activity Code Description	Activity Code	Qty In Min
Wildcat Limited	Gearcase, Front	CT07	156
Wildcat Limited	Gearcase, Front Rebuild	CT23	204
Wildcat Limited	Door Latch	BD42	12
Wildcat Limited	Door Frame	BD40	18
Wildcat Limited	Door Hinge	BD41	12
Wildcat Limited	Door W/Decals	BD43	18
Wildcat Limited	Rack and Pinion Assembly	SB38	228
Wildcat Limited	Seat Latch	CH47	12
Wildcat Limited	Complete Warranty Claim	WP00	5
Wildcat Limited	Drive Clutch IdlerSleeve	DR92	102
Wildcat Limited	Fuel Pump	FU09	42
Wildcat Limited	Headlight Assembly	EL03	12
Wildcat Limited	Water Pump Complete	EN61	78
Wildcat Limited	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat Limited	Side Restraint (1)	BD38	12
Wildcat Limited	Electric Power Steering	EL61	42
Wildcat Limited	Intake Boot	FU50	42
Wildcat Limited	Clutch Cover/Gasket/Seal	DR01	108
Wildcat Limited	Bumper (Front)	CH05	12
Wildcat Limited	Bumper (Rear)	CH17	12
Wildcat Limited	Pinion Housing Seal (Rear)	CT28	120
Wildcat Limited	Gear Case Bladder	DR64	12
Wildcat Limited	Clutch Cover (Inner)	DR87	90
Wildcat Limited	Tilt Sensor Switch	EL31	24
Wildcat Limited	Shock Absorber (Front/Rear)	SB06	18
Wildcat Limited	Shock Spring (Front/Rear)	SB07	18
Wildcat Limited	Battery Cable,Relay to Starter	EE04	24
Wildcat Limited	Driveshaft (Front)	CT04	60
Wildcat Limited	Driveshaft (Rear)	CT05	120
Wildcat Limited	Actuator	EL33	12
Wildcat Limited	Gear Case (Rear)	CT15	108
Wildcat Limited	Lift Support	BD35	12
Wildcat Limited	Pinion Housing Seal (Front)	CT27	168
Wildcat Limited	Piston (Front and Rear)	EN97	378
Wildcat Limited	Piston (Front or Rear)	EN96	342
Wildcat Limited	Crankcase, Lower	EG30	390
Wildcat Limited	Steering Shaft	SB34	78
Wildcat Limited	Accelerator Assy	CH58	12
Wildcat Limited	Gear Shifting Lever	CT12	24
Wildcat Limited	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat Limited	Gear Case, Rear (Rebuild)	DR65	168
Wildcat Limited	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat Limited	Driveshaft Isolator	CT34	36
Wildcat Limited	Driveshaft (Center)	CT33	42
Wildcat Limited	Suspension Link (Lower)	SU35	18
Wildcat Limited	Suspension Link (Upper)	SU36	18
Wildcat Limited	Trailing Arm (Lower)	SU37	30
Wildcat Limited	Trailing Arm (Upper)	SU38	36

Wildcat Limited	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat Limited	Trailing Arm Mount Assy (Upper)	SU40	36
Wildcat Limited	Glove Box Cover	BD44	12
Wildcat Limited	Glove Box Latch	BD45	12
Wildcat Limited	Reverse Override Switch	EL60	12
Wildcat Limited	Gear Shift Position Sensor	EL58	18
Wildcat Limited	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat Limited	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat Limited	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat Limited	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat Limited	Cylinder (Front or Rear)	EN92	288
Wildcat Limited	Cylinder (Front and Rear)	EN93	324
Wildcat Limited	Rings (Front or Rear)	EN94	336
Wildcat Limited	Rings (Front and Rear)	EN95	372
Wildcat Limited	Air Pressure Sensor	FU49	42
Wildcat Limited	Engine Short Block	EN87	780
Wildcat Limited	Brake Return Spring	DR10	12
Wildcat Limited	Oil Filler Case	GM03	12
Wildcat Limited	Muffler Cover (All)	GM09	24
Wildcat Limited	Skid Plate (Front/Rear)	BD08	12
Wildcat Limited	Cargo Box	BD12	30
Wildcat Limited	Fender (L or R)	BD14	12
Wildcat Limited	Headlight Switch	BD20	12
Wildcat Limited	Brake Pressure Switch	BE01	12
Wildcat Limited	Speed Sensor Assembly	EL32	12
Wildcat Limited	Gear Shift Cable/Rod	CT09	48
Wildcat Limited	Gear Shifting Cam/Fork	CT11	876
Wildcat Limited	Starter Idler Gear	CT17	48
Wildcat Limited	V-Belt Cover/Gasket	CT18	48
Wildcat Limited	Shift Lever Knob	CT21	12
Wildcat Limited	Cam Chain Adjuster	EG02	36
Wildcat Limited	Cam Chain Guide	EG03	306
Wildcat Limited	Cam Chain Tensioner	EG04	492
Wildcat Limited	Cam Shaft Drive Chain	EG06	492
Wildcat Limited	Engine Oil Strainer	EG11	30
Wildcat Limited	Exhaust Pipe	EG12	36
Wildcat Limited	Oil Cooler	EG14	30
Wildcat Limited	Oil Pump Drive Gear	EG16	852
Wildcat Limited	Oil Pump Driven Gear	EG17	852
Wildcat Limited	Output/Input Hose	EG18	42
Wildcat Limited	Radiator Assembly	EG20	42
Wildcat Limited	Radiator Cap	EG21	12
Wildcat Limited	Radiator Screen	EG22	24
Wildcat Limited	Valve Rocker Arm/Shaft	EG23	270
Wildcat Limited	Battery Cable	EE01	12
Wildcat Limited	Battery Holder Assembly	EE02	12
Wildcat Limited	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat Limited	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat Limited	Steering Ball Joint	SS04	66
Wildcat Limited	Tire	SS05	18
Wildcat Limited	Shifter Plate	BD24	18
Wildcat Limited	Decal, Warning (ATV)	BD29	12

Wildcat Limited	A-Arm (Lower)	SB01	54
Wildcat Limited	A-Arm (Upper)	SB02	24
Wildcat Limited	Steering Tie Rod	SB16	36
Wildcat Limited	Sway Bar Assembly	SB17	30
Wildcat Limited	Tie Rod End (1)	SB19	24
Wildcat Limited	Steering Wheel	SB33	12
Wildcat Limited	Shock Rebuild	SU28	90
Wildcat Limited	Frame	BD02	1080
Wildcat Limited	12 Volt Power Adapter	EL22	12
Wildcat Limited	Fuse Holder Cover	EL23	12
Wildcat Limited	Speedometer, Digital	EL29	18
Wildcat Limited	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat Limited	Engine (Complete)	EN12	330
Wildcat Limited	Engine Rubber Mount(s)	EN14	270
Wildcat Limited	Expansion Chamber	EN19	24
Wildcat Limited	Fan Assembly	EN20	30
Wildcat Limited	Thermostat and Gasket	EN36	12
Wildcat Limited	Intake Manifold/Studs/Bolts	EN49	84
Wildcat Limited	Coolant Tank	EN53	30
Wildcat Limited	Valve, Intake/Exhaust	EN54	294
Wildcat Limited	Gas Tank (Complete)	FU04	60
Wildcat Limited	Fuel Line	FU07	36
Wildcat Limited	Air Intake Silencer	FU10	48
Wildcat Limited	Throttle Cable	FU16	84
Wildcat Limited	ECU	FU21	12
Wildcat Limited	Fuel Injectors	FU23	36
Wildcat Limited	Throttle Body	FU29	54
Wildcat Limited	Throttle Position Sensor	FU30	54
Wildcat Limited	Water Temperature Sensor	FU31	12
Wildcat Limited	Drive Clutch Spring	DR27	66
Wildcat Limited	Driven Pulley (Complete)	DR31	60
Wildcat Limited	Driven Pulley Fixed Face	DR32	60
Wildcat Limited	Driven Pulley Moveable Sheave	DR33	66
Wildcat Limited	Driven Pulley Spring	DR34	66
Wildcat Limited	Driven Pulley Torque Bracket	DR35	66
Wildcat Limited	Master Cylinder Complete	DR53	18
Wildcat Limited	Brake Pedal	DR59	12
Wildcat Limited	Ignition Coil (1)	EL05	36
Wildcat Limited	Ignition Switch	EL06	12
Wildcat Limited	Stator	EL07	54
Wildcat Limited	Magneto Case	EL08	54
Wildcat Limited	Main Wiring Harness	EL09	150
Wildcat Limited	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat Limited	Spark Plug Cap Assembly	EL13	24
Wildcat Limited	Battery	AC02	12
Wildcat Limited	Solenoid	AC06	18
Wildcat Limited	Starter Motor	AC11	30
Wildcat Limited	Voltage Regulator/Rectifier	AC14	12
Wildcat Limited	Storage Compartment	CH46	24
Wildcat Limited	Console/LED Panel	CH04	54
Wildcat Limited	Hood Decals	CH10	12
Wildcat Limited	Seat Assembly	CH18	12

Wildcat Limited	Seat Base	CH28	12
Wildcat Limited	Brake Assembly/ Calipers	DR02	72
Wildcat Limited	Brake Disc	DR04	42
Wildcat Limited	Brake Hose (Hyd)	DR06	90
Wildcat Limited	Passenger Handles	CH48	12
Wildcat Limited	Axle Seal (Front or Rear)	SS08	48
Wildcat Limited	Seat Belt	CH57	18
Wildcat Limited	Switch 2WD/4WD	BD33	12
Wildcat Limited	Exhaust Seal	EN69	36
Wildcat Limited	Heat Shield	CH59	54
Wildcat Limited	Belly Panel	CH60	12
Wildcat Limited	Belly Panel Side	CH61	18
Wildcat Limited	Floor	CH55	60
Wildcat Limited	Idle Speed Control Valve	FU45	36
Wildcat Limited	Canopy Tube (Front)	CH53	18
Wildcat Limited	Canopy Tube (Rear)	CH54	36
Wildcat Limited	Relay	EL53	12
Wildcat Limited	Hood w/Decals	CH11	18
Wildcat Limited	Air Intake Duct	CH14	42
Wildcat Limited	Decal/Reflector (Any)	CH24	12
Wildcat Limited	Transmission Inner components	CT19	876
Wildcat Limited	Taillight Housing	EL15	12
Wildcat Limited	Crankcase	EN06	894
Wildcat Limited	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78

Wildcat 4 X

Model	Activity Code Description	Activity Code	Qty In Min
Wildcat 4 X	Gearcase, Front	CT07	210
Wildcat 4 X	Gearcase, Front Rebuild	CT23	258
Wildcat 4 X	Door Latch	BD42	12
Wildcat 4 X	Door Frame	BD40	18
Wildcat 4 X	Door Hinge	BD41	12
Wildcat 4 X	Door W/Decals	BD43	18
Wildcat 4 X	Rack and Pinion Assembly	SB38	282
Wildcat 4 X	Seat Latch	CH47	12
Wildcat 4 X	Complete Warranty Claim	WP00	5
Wildcat 4 X	Drive Clutch IdlerSleeve	DR92	102
Wildcat 4 X	Fuel Pump	FU09	42
Wildcat 4 X	Headlight Assembly	EL03	12
Wildcat 4 X	Water Pump Complete	EN61	78
Wildcat 4 X	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat 4 X	Side Restraint (1)	BD38	12
Wildcat 4 X	Electric Power Steering	EL61	42
Wildcat 4 X	Intake Boot	FU50	42
Wildcat 4 X	Clutch Cover/Gasket/Seal	DR01	108
Wildcat 4 X	Pinion Housing Seal (Rear)	CT28	120
Wildcat 4 X	Gear Case Bladder	DR64	12
Wildcat 4 X	Clutch Cover (Inner)	DR87	90
Wildcat 4 X	Tilt Sensor Switch	EL31	24
Wildcat 4 X	Shock Absorber (Front/Rear)	SB06	18
Wildcat 4 X	Shock Spring (Front/Rear)	SB07	18
Wildcat 4 X	Battery Cable,Relay to Starter	EE04	42
Wildcat 4 X	Driveshaft (Front)	CT04	114
Wildcat 4 X	Driveshaft (Rear)	CT05	120
Wildcat 4 X	Actuator	EL33	12
Wildcat 4 X	Gear Case (Rear)	CT15	108
Wildcat 4 X	Lift Support	BD35	12
Wildcat 4 X	Pinion Housing Seal (Front)	CT27	222
Wildcat 4 X	Piston (Front and Rear)	EN97	378
Wildcat 4 X	Piston (Front or Rear)	EN96	342
Wildcat 4 X	Crankcase, Lower	EG30	390
Wildcat 4 X	Steering Shaft	SB34	78
Wildcat 4 X	Accelerator Assy	CH58	12
Wildcat 4 X	Gear Shifting Lever	CT12	24
Wildcat 4 X	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat 4 X	Gear Case, Rear (Rebuild)	DR65	168
Wildcat 4 X	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat 4 X	Driveshaft Isolator	CT34	54
Wildcat 4 X	Driveshaft (Center)	CT33	90
Wildcat 4 X	Suspension Link (Lower)	SU35	18
Wildcat 4 X	Suspension Link (Upper)	SU36	18
Wildcat 4 X	Trailing Arm (Lower)	SU37	30
Wildcat 4 X	Trailing Arm (Upper)	SU38	36
Wildcat 4 X	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat 4 X	Trailing Arm Mount Assy (Upper)	SU40	36

Wildcat 4 X	Glove Box Cover	BD44	12
Wildcat 4 X	Glove Box Latch	BD45	12
Wildcat 4 X	Reverse Override Switch	EL60	12
Wildcat 4 X	Gear Shift Position Sensor	EL58	18
Wildcat 4 X	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat 4 X	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat 4 X	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat 4 X	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat 4 X	Cylinder (Front or Rear)	EN92	288
Wildcat 4 X	Cylinder (Front and Rear)	EN93	324
Wildcat 4 X	Rings (Front or Rear)	EN94	336
Wildcat 4 X	Rings (Front and Rear)	EN95	372
Wildcat 4 X	Air Pressure Sensor	FU49	42
Wildcat 4 X	Engine Short Block	EN87	780
Wildcat 4 X	Brake Return Spring	DR10	12
Wildcat 4 X	Oil Filler Case	GM03	12
Wildcat 4 X	Muffler Cover (All)	GM09	24
Wildcat 4 X	Skid Plate (Front/Rear)	BD08	12
Wildcat 4 X	Cargo Box	BD12	30
Wildcat 4 X	Fender (L or R)	BD14	12
Wildcat 4 X	Headlight Switch	BD20	12
Wildcat 4 X	Brake Pressure Switch	BE01	12
Wildcat 4 X	Speed Sensor Assembly	EL32	12
Wildcat 4 X	Gear Shift Cable/Rod	CT09	84
Wildcat 4 X	Gear Shifting Cam/Fork	CT11	876
Wildcat 4 X	Starter Idler Gear	CT17	48
Wildcat 4 X	V-Belt Cover/Gasket	CT18	48
Wildcat 4 X	Shift Lever Knob	CT21	12
Wildcat 4 X	Cam Chain Adjuster	EG02	36
Wildcat 4 X	Cam Chain Guide	EG03	306
Wildcat 4 X	Cam Chain Tensioner	EG04	492
Wildcat 4 X	Cam Shaft Drive Chain	EG06	492
Wildcat 4 X	Engine Oil Strainer	EG11	30
Wildcat 4 X	Exhaust Pipe	EG12	36
Wildcat 4 X	Oil Cooler	EG14	30
Wildcat 4 X	Oil Pump Drive Gear	EG16	852
Wildcat 4 X	Oil Pump Driven Gear	EG17	852
Wildcat 4 X	Output/Input Hose	EG18	78
Wildcat 4 X	Radiator Assembly	EG20	42
Wildcat 4 X	Radiator Cap	EG21	12
Wildcat 4 X	Radiator Screen	EG22	24
Wildcat 4 X	Valve Rocker Arm/Shaft	EG23	270
Wildcat 4 X	Battery Cable	EE01	30
Wildcat 4 X	Battery Holder Assembly	EE02	12
Wildcat 4 X	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat 4 X	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat 4 X	Steering Ball Joint	SS04	66
Wildcat 4 X	Tire	SS05	18
Wildcat 4 X	Shifter Plate	BD24	18
Wildcat 4 X	Decal, Warning (ATV)	BD29	12
Wildcat 4 X	A-Arm (Lower)	SB01	54
Wildcat 4 X	A-Arm (Upper)	SB02	24

Wildcat 4 X	Steering Tie Rod	SB16	36
Wildcat 4 X	Sway Bar Assembly	SB17	30
Wildcat 4 X	Tie Rod End (1)	SB19	24
Wildcat 4 X	Steering Wheel	SB33	12
Wildcat 4 X	Shock Rebuild	SU28	90
Wildcat 4 X	Frame	BD02	1140
Wildcat 4 X	12 Volt Power Adapter	EL22	12
Wildcat 4 X	Fuse Holder Cover	EL23	12
Wildcat 4 X	Speedometer, Digital	EL29	18
Wildcat 4 X	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat 4 X	Engine (Complete)	EN12	330
Wildcat 4 X	Engine Rubber Mount(s)	EN14	270
Wildcat 4 X	Expansion Chamber	EN19	24
Wildcat 4 X	Fan Assembly	EN20	30
Wildcat 4 X	Thermostat and Gasket	EN36	12
Wildcat 4 X	Intake Manifold/Studs/Bolts	EN49	84
Wildcat 4 X	Coolant Tank	EN53	30
Wildcat 4 X	Valve, Intake/Exhaust	EN54	294
Wildcat 4 X	Gas Tank (Complete)	FU04	60
Wildcat 4 X	Fuel Line	FU07	36
Wildcat 4 X	Air Intake Silencer	FU10	48
Wildcat 4 X	Throttle Cable	FU16	120
Wildcat 4 X	ECU	FU21	12
Wildcat 4 X	Fuel Injectors	FU23	36
Wildcat 4 X	Throttle Body	FU29	54
Wildcat 4 X	Throttle Position Sensor	FU30	54
Wildcat 4 X	Water Temperature Sensor	FU31	12
Wildcat 4 X	Drive Clutch Spring	DR27	66
Wildcat 4 X	Driven Pulley (Complete)	DR31	60
Wildcat 4 X	Driven Pulley Fixed Face	DR32	60
Wildcat 4 X	Driven Pulley Moveable Sheave	DR33	66
Wildcat 4 X	Driven Pulley Spring	DR34	66
Wildcat 4 X	Driven Pulley Torque Bracket	DR35	66
Wildcat 4 X	Master Cylinder Complete	DR53	18
Wildcat 4 X	Brake Pedal	DR59	12
Wildcat 4 X	Ignition Coil (1)	EL05	72
Wildcat 4 X	Ignition Switch	EL06	12
Wildcat 4 X	Stator	EL07	54
Wildcat 4 X	Magneto Case	EL08	54
Wildcat 4 X	Main Wiring Harness	EL09	186
Wildcat 4 X	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat 4 X	Spark Plug Cap Assembly	EL13	24
Wildcat 4 X	Battery	AC02	12
Wildcat 4 X	Solenoid	AC06	18
Wildcat 4 X	Starter Motor	AC11	30
Wildcat 4 X	Voltage Regulator/Rectifier	AC14	12
Wildcat 4 X	Storage Compartment	CH46	24
Wildcat 4 X	Console/LED Panel	CH04	54
Wildcat 4 X	Hood Decals	CH10	12
Wildcat 4 X	Seat Assembly	CH18	12
Wildcat 4 X	Seat Base	CH28	12
Wildcat 4 X	Brake Assembly/ Calipers	DR02	72

Wildcat 4 X	Brake Disc	DR04	42
Wildcat 4 X	Brake Hose (Hyd)	DR06	120
Wildcat 4 X	Passenger Handles	CH48	12
Wildcat 4 X	Axle Seal (Front or Rear)	SS08	48
Wildcat 4 X	Seat Belt	CH57	18
Wildcat 4 X	Switch 2WD/4WD	BD33	12
Wildcat 4 X	Exhaust Seal	EN69	36
Wildcat 4 X	Heat Shield	CH59	54
Wildcat 4 X	Belly Panel	CH60	18
Wildcat 4 X	Belly Panel Side	CH61	18
Wildcat 4 X	Floor	CH55	60
Wildcat 4 X	Idle Speed Control Valve	FU45	36
Wildcat 4 X	Canopy Tube (Front)	CH53	18
Wildcat 4 X	Canopy Tube (Rear)	CH54	36
Wildcat 4 X	Relay	EL53	12
Wildcat 4 X	Hood w/Decals	CH11	18
Wildcat 4 X	Air Intake Duct	CH14	42
Wildcat 4 X	Decal/Reflector (Any)	CH24	12
Wildcat 4 X	Transmission Inner components	CT19	876
Wildcat 4 X	Taillight Housing	EL15	12
Wildcat 4 X	Crankcase	EN06	894
Wildcat 4 X	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78
Wildcat 4 X	Gearcase, Front	CT07	210
Wildcat 4 X	Gearcase, Front Rebuild	CT23	258
Wildcat 4 X	Door Latch	BD42	12
Wildcat 4 X	Door Frame	BD40	18
Wildcat 4 X	Door Hinge	BD41	12
Wildcat 4 X	Door W/Decals	BD43	18
Wildcat 4 X	Rack and Pinion Assembly	SB38	282
Wildcat 4 X	Seat Latch	CH47	12
Wildcat 4 X	Complete Warranty Claim	WP00	5
Wildcat 4 X	Drive Clutch IdlerSleeve	DR92	102
Wildcat 4 X	Fuel Pump	FU09	42
Wildcat 4 X	Headlight Assembly	EL03	12
Wildcat 4 X	Water Pump Complete	EN61	78
Wildcat 4 X	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat 4 X	Side Restraint (1)	BD38	12
Wildcat 4 X	Electric Power Steering	EL61	42
Wildcat 4 X	Intake Boot	FU50	42
Wildcat 4 X	Clutch Cover/Gasket/Seal	DR01	108
Wildcat 4 X	Pinion Housing Seal (Rear)	CT28	120
Wildcat 4 X	Gear Case Bladder	DR64	12
Wildcat 4 X	Clutch Cover (Inner)	DR87	90
Wildcat 4 X	Tilt Sensor Switch	EL31	24
Wildcat 4 X	Shock Absorber (Front/Rear)	SB06	18
Wildcat 4 X	Shock Spring (Front/Rear)	SB07	18
Wildcat 4 X	Battery Cable,Relay to Starter	EE04	42
Wildcat 4 X	Driveshaft (Front)	CT04	114
Wildcat 4 X	Driveshaft (Rear)	CT05	120
Wildcat 4 X	Actuator	EL33	12
Wildcat 4 X	Gear Case (Rear)	CT15	108
Wildcat 4 X	Lift Support	BD35	12

Wildcat 4 X	Pinion Housing Seal (Front)	CT27	222
Wildcat 4 X	Piston (Front and Rear)	EN97	378
Wildcat 4 X	Piston (Front or Rear)	EN96	342
Wildcat 4 X	Crankcase, Lower	EG30	390
Wildcat 4 X	Steering Shaft	SB34	78
Wildcat 4 X	Accelerator Assy	CH58	12
Wildcat 4 X	Gear Shifting Lever	CT12	24
Wildcat 4 X	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat 4 X	Gear Case, Rear (Rebuild)	DR65	168
Wildcat 4 X	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat 4 X	Driveshaft Isolator	CT34	54
Wildcat 4 X	Driveshaft (Center)	CT33	90
Wildcat 4 X	Suspension Link (Lower)	SU35	18
Wildcat 4 X	Suspension Link (Upper)	SU36	18
Wildcat 4 X	Trailing Arm (Lower)	SU37	30
Wildcat 4 X	Trailing Arm (Upper)	SU38	36
Wildcat 4 X	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat 4 X	Trailing Arm Mount Assy (Upper)	SU40	36
Wildcat 4 X	Glove Box Cover	BD44	12
Wildcat 4 X	Glove Box Latch	BD45	12
Wildcat 4 X	Reverse Override Switch	EL60	12
Wildcat 4 X	Gear Shift Position Sensor	EL58	18
Wildcat 4 X	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat 4 X	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat 4 X	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat 4 X	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat 4 X	Cylinder (Front or Rear)	EN92	288
Wildcat 4 X	Cylinder (Front and Rear)	EN93	324
Wildcat 4 X	Rings (Front or Rear)	EN94	336
Wildcat 4 X	Rings (Front and Rear)	EN95	372
Wildcat 4 X	Air Pressure Sensor	FU49	42
Wildcat 4 X	Engine Short Block	EN87	780
Wildcat 4 X	Brake Return Spring	DR10	12
Wildcat 4 X	Oil Filler Case	GM03	12
Wildcat 4 X	Muffler Cover (All)	GM09	24
Wildcat 4 X	Skid Plate (Front/Rear)	BD08	12
Wildcat 4 X	Cargo Box	BD12	30
Wildcat 4 X	Fender (L or R)	BD14	12
Wildcat 4 X	Headlight Switch	BD20	12
Wildcat 4 X	Brake Pressure Switch	BE01	12
Wildcat 4 X	Speed Sensor Assembly	EL32	12
Wildcat 4 X	Gear Shift Cable/Rod	CT09	84
Wildcat 4 X	Gear Shifting Cam/Fork	CT11	876
Wildcat 4 X	Starter Idler Gear	CT17	48
Wildcat 4 X	V-Belt Cover/Gasket	CT18	48
Wildcat 4 X	Shift Lever Knob	CT21	12
Wildcat 4 X	Cam Chain Adjuster	EG02	36
Wildcat 4 X	Cam Chain Guide	EG03	306
Wildcat 4 X	EG04- Cam Chain Tensioner	EG04	492
Wildcat 4 X	Cam Shaft Drive Chain	EG06	492
Wildcat 4 X	Engine Oil Strainer	EG11	30
Wildcat 4 X	Exhaust Pipe	EG12	36

Wildcat 4 X	Oil Cooler	EG14	30
Wildcat 4 X	Oil Pump Drive Gear	EG16	852
Wildcat 4 X	Oil Pump Driven Gear	EG17	852
Wildcat 4 X	Output/Input Hose	EG18	78
Wildcat 4 X	Radiator Assembly	EG20	42
Wildcat 4 X	Radiator Cap	EG21	12
Wildcat 4 X	Radiator Screen	EG22	24
Wildcat 4 X	Valve Rocker Arm/Shaft	EG23	270
Wildcat 4 X	Battery Cable	EE01	30
Wildcat 4 X	Battery Holder Assembly	EE02	12
Wildcat 4 X	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat 4 X	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat 4 X	Steering Ball Joint	SS04	66
Wildcat 4 X	Tire	SS05	18
Wildcat 4 X	Shifter Plate	BD24	18
Wildcat 4 X	Decal, Warning (ATV)	BD29	12
Wildcat 4 X	A-Arm (Lower)	SB01	54
Wildcat 4 X	A-Arm (Upper)	SB02	24
Wildcat 4 X	Steering Tie Rod	SB16	36
Wildcat 4 X	Sway Bar Assembly	SB17	30
Wildcat 4 X	Tie Rod End (1)	SB19	24
Wildcat 4 X	Steering Wheel	SB33	12
Wildcat 4 X	Shock Rebuild	SU28	90
Wildcat 4 X	Frame	BD02	1140
Wildcat 4 X	12 Volt Power Adapter	EL22	12
Wildcat 4 X	Fuse Holder Cover	EL23	12
Wildcat 4 X	Speedometer, Digital	EL29	18
Wildcat 4 X	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat 4 X	Engine (Complete)	EN12	330
Wildcat 4 X	Engine Rubber Mount(s)	EN14	270
Wildcat 4 X	Expansion Chamber	EN19	24
Wildcat 4 X	Fan Assembly	EN20	30
Wildcat 4 X	Thermostat and Gasket	EN36	12
Wildcat 4 X	Intake Manifold/Studs/Bolts	EN49	84
Wildcat 4 X	Coolant Tank	EN53	30
Wildcat 4 X	Valve, Intake/Exhaust	EN54	294
Wildcat 4 X	Gas Tank (Complete)	FU04	60
Wildcat 4 X	Fuel Line	FU07	36
Wildcat 4 X	Air Intake Silencer	FU10	48
Wildcat 4 X	Throttle Cable	FU16	120
Wildcat 4 X	ECU	FU21	12
Wildcat 4 X	Fuel Injectors	FU23	36
Wildcat 4 X	Throttle Body	FU29	54
Wildcat 4 X	Throttle Position Sensor	FU30	54
Wildcat 4 X	Water Temperature Sensor	FU31	12
Wildcat 4 X	Drive Clutch Spring	DR27	66
Wildcat 4 X	Driven Pulley (Complete)	DR31	60
Wildcat 4 X	Driven Pulley Fixed Face	DR32	60
Wildcat 4 X	Driven Pulley Moveable Sheave	DR33	66
Wildcat 4 X	Driven Pulley Spring	DR34	66
Wildcat 4 X	Driven Pulley Torque Bracket	DR35	66
Wildcat 4 X	Master Cylinder Complete	DR53	18

Wildcat 4 X	Brake Pedal	DR59	12
Wildcat 4 X	Ignition Coil (1)	EL05	72
Wildcat 4 X	Ignition Switch	EL06	12
Wildcat 4 X	Stator	EL07	54
Wildcat 4 X	Magneto Case	EL08	54
Wildcat 4 X	Main Wiring Harness	EL09	186
Wildcat 4 X	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat 4 X	Spark Plug Cap Assembly	EL13	24
Wildcat 4 X	Battery	AC02	12
Wildcat 4 X	Solenoid	AC06	18
Wildcat 4 X	Starter Motor	AC11	30
Wildcat 4 X	Voltage Regulator/Rectifier	AC14	12
Wildcat 4 X	Storage Compartment	CH46	24
Wildcat 4 X	Console/LED Panel	CH04	54
Wildcat 4 X	Hood Decals	CH10	12
Wildcat 4 X	Seat Assembly	CH18	12
Wildcat 4 X	Seat Base	CH28	12
Wildcat 4 X	Brake Assembly/ Calipers	DR02	72
Wildcat 4 X	Brake Disc	DR04	42
Wildcat 4 X	Brake Hose (Hyd)	DR06	120
Wildcat 4 X	Passenger Handles	CH48	12
Wildcat 4 X	Axle Seal (Front or Rear)	SS08	48
Wildcat 4 X	Seat Belt	CH57	18
Wildcat 4 X	Switch 2WD/4WD	BD33	12
Wildcat 4 X	Exhaust Seal	EN69	36
Wildcat 4 X	Heat Shield	CH59	54
Wildcat 4 X	Belly Panel	CH60	18
Wildcat 4 X	Belly Panel Side	CH61	18
Wildcat 4 X	Floor	CH55	60
Wildcat 4 X	Idle Speed Control Valve	FU45	36
Wildcat 4 X	Canopy Tube (Front)	CH53	18
Wildcat 4 X	Canopy Tube (Rear)	CH54	36
Wildcat 4 X	Relay	EL53	12
Wildcat 4 X	Hood w/Decals	CH11	18
Wildcat 4 X	Air Intake Duct	CH14	42
Wildcat 4 X	Decal/Reflector (Any)	CH24	12
Wildcat 4 X	Transmission Inner components	CT19	876
Wildcat 4 X	Taillight Housing	EL15	12
Wildcat 4 X	Crankcase	EN06	894
Wildcat 4 X	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78

Wildcat X

Model	Activity Code Description	Activity Code	Qty In Min
Wildcat X	Gearcase, Front	CT07	156
Wildcat X	Gearcase, Front Rebuild	CT23	204
Wildcat X	Door Latch	BD42	12
Wildcat X	Door Frame	BD40	18
Wildcat X	Door Hinge	BD41	12
Wildcat X	Door W/Decals	BD43	18
Wildcat X	Rack and Pinion Assembly	SB38	228
Wildcat X	Seat Latch	CH47	12
Wildcat X	Complete Warranty Claim	WP00	5
Wildcat X	Drive Clutch IdlerSleeve	DR92	102
Wildcat X	Fuel Pump	FU09	42
Wildcat X	Headlight Assembly	EL03	12
Wildcat X	Water Pump Complete	EN61	78
Wildcat X	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat X	Side Restraint (1)	BD38	12
Wildcat X	Electric Power Steering	EL61	42
Wildcat X	Intake Boot	FU50	42
Wildcat X	Clutch Cover/Gasket/Seal	DR01	108
Wildcat X	Pinion Housing Seal (Rear)	CT28	120
Wildcat X	Gear Case Bladder	DR64	12
Wildcat X	Clutch Cover (Inner)	DR87	90
Wildcat X	Tilt Sensor Switch	EL31	24
Wildcat X	Shock Absorber (Front/Rear)	SB06	18
Wildcat X	Shock Spring (Front/Rear)	SB07	18
Wildcat X	Battery Cable,Relay to Starter	EE04	24
Wildcat X	Driveshaft (Front)	CT04	60
Wildcat X	Driveshaft (Rear)	CT05	120
Wildcat X	Actuator	EL33	12
Wildcat X	Gear Case (Rear)	CT15	108
Wildcat X	Lift Support	BD35	12
Wildcat X	Pinion Housing Seal (Front)	CT27	168
Wildcat X	Piston (Front and Rear)	EN97	378
Wildcat X	Piston (Front or Rear)	EN96	342
Wildcat X	Crankcase, Lower	EG30	390
Wildcat X	Steering Shaft	SB34	78
Wildcat X	Accelerator Assy	CH58	12
Wildcat X	Gear Shifting Lever	CT12	24
Wildcat X	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat X	DR65- Gear Case, Rear (Rebuild)	DR65	168
Wildcat X	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat X	Driveshaft Isolator	CT34	36
Wildcat X	Driveshaft (Center)	CT33	42
Wildcat X	Suspension Link (Lower)	SU35	18
Wildcat X	Suspension Link (Upper)	SU36	18
Wildcat X	Trailing Arm (Lower)	SU37	30
Wildcat X	Trailing Arm (Upper)	SU38	36
Wildcat X	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat X	Trailing Arm Mount Assy (Upper)	SU40	36

Wildcat X	Glove Box Cover	BD44	12
Wildcat X	Glove Box Latch	BD45	12
Wildcat X	Reverse Override Switch	EL60	12
Wildcat X	Gear Shift Position Sensor	EL58	18
Wildcat X	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat X	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat X	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat X	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat X	Cylinder (Front or Rear)	EN92	288
Wildcat X	Cylinder (Front and Rear)	EN93	324
Wildcat X	Rings (Front or Rear)	EN94	336
Wildcat X	Rings (Front and Rear)	EN95	372
Wildcat X	Air Pressure Sensor	FU49	42
Wildcat X	Engine Short Block	EN87	780
Wildcat X	Brake Return Spring	DR10	12
Wildcat X	Oil Filler Case	GM03	12
Wildcat X	Muffler Cover (All)	GM09	24
Wildcat X	Skid Plate (Front/Rear)	BD08	12
Wildcat X	Cargo Box	BD12	30
Wildcat X	Fender (L or R)	BD14	12
Wildcat X	Headlight Switch	BD20	12
Wildcat X	Brake Pressure Switch	BE01	12
Wildcat X	EL32- Speed Sensor Assembly	EL32	12
Wildcat X	Gear Shift Cable/Rod	CT09	48
Wildcat X	Gear Shifting Cam/Fork	CT11	876
Wildcat X	Starter Idler Gear	CT17	48
Wildcat X	V-Belt Cover/Gasket	CT18	48
Wildcat X	Shift Lever Knob	CT21	12
Wildcat X	Cam Chain Adjuster	EG02	36
Wildcat X	Cam Chain Guide	EG03	306
Wildcat X	Cam Chain Tensioner	EG04	492
Wildcat X	Cam Shaft Drive Chain	EG06	492
Wildcat X	Engine Oil Strainer	EG11	30
Wildcat X	Exhaust Pipe	EG12	36
Wildcat X	Oil Cooler	EG14	30
Wildcat X	Oil Pump Drive Gear	EG16	852
Wildcat X	Oil Pump Driven Gear	EG17	852
Wildcat X	Output/Input Hose	EG18	42
Wildcat X	Radiator Assembly	EG20	42
Wildcat X	EG21- Radiator Cap	EG21	12
Wildcat X	Radiator Screen	EG22	24
Wildcat X	Valve Rocker Arm/Shaft	EG23	270
Wildcat X	Battery Cable	EE01	12
Wildcat X	Battery Holder Assembly	EE02	12
Wildcat X	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat X	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat X	Steering Ball Joint	SS04	66
Wildcat X	Tire	SS05	18
Wildcat X	Shifter Plate	BD24	18
Wildcat X	Decal, Warning (ATV)	BD29	12
Wildcat X	A-Arm (Lower)	SB01	54
Wildcat X	A-Arm (Upper)	SB02	24

Wildcat X	Steering Tie Rod	SB16	36
Wildcat X	Sway Bar Assembly	SB17	30
Wildcat X	Tie Rod End (1)	SB19	24
Wildcat X	Steering Wheel	SB33	12
Wildcat X	Shock Rebuild	SU28	90
Wildcat X	Frame	BD02	1080
Wildcat X	12 Volt Power Adapter	EL22	12
Wildcat X	Fuse Holder Cover	EL23	12
Wildcat X	Speedometer, Digital	EL29	18
Wildcat X	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat X	Engine (Complete)	EN12	330
Wildcat X	Engine Rubber Mount(s)	EN14	270
Wildcat X	Expansion Chamber	EN19	24
Wildcat X	Fan Assembly	EN20	30
Wildcat X	Thermostat and Gasket	EN36	12
Wildcat X	Intake Manifold/Studs/Bolts	EN49	84
Wildcat X	Coolant Tank	EN53	30
Wildcat X	Valve, Intake/Exhaust	EN54	294
Wildcat X	Gas Tank (Complete)	FU04	60
Wildcat X	Fuel Line	FU07	36
Wildcat X	Air Intake Silencer	FU10	48
Wildcat X	Throttle Cable	FU16	84
Wildcat X	ECU	FU21	12
Wildcat X	Fuel Injectors	FU23	36
Wildcat X	Throttle Body	FU29	54
Wildcat X	Throttle Position Sensor	FU30	54
Wildcat X	Water Temperature Sensor	FU31	12
Wildcat X	Drive Clutch Spring	DR27	66
Wildcat X	Driven Pulley (Complete)	DR31	60
Wildcat X	Driven Pulley Fixed Face	DR32	60
Wildcat X	Driven Pulley Moveable Sheave	DR33	66
Wildcat X	Driven Pulley Spring	DR34	66
Wildcat X	Driven Pulley Torque Bracket	DR35	66
Wildcat X	Master Cylinder Complete	DR53	18
Wildcat X	Brake Pedal	DR59	12
Wildcat X	Ignition Coil (1)	EL05	36
Wildcat X	Ignition Switch	EL06	12
Wildcat X	Stator	EL07	54
Wildcat X	Magneto Case	EL08	54
Wildcat X	Main Wiring Harness	EL09	150
Wildcat X	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat X	Spark Plug Cap Assembly	EL13	24
Wildcat X	Battery	AC02	12
Wildcat X	Solenoid	AC06	18
Wildcat X	Starter Motor	AC11	30
Wildcat X	Voltage Regulator/Rectifier	AC14	12
Wildcat X	Storage Compartment	CH46	24
Wildcat X	Console/LED Panel	CH04	54
Wildcat X	Hood Decals	CH10	12
Wildcat X	Seat Assembly	CH18	12
Wildcat X	Seat Base	CH28	12
Wildcat X	Brake Assembly/ Calipers	DR02	72

Wildcat X	Brake Disc	DR04	42
Wildcat X	Brake Hose (Hyd)	DR06	90
Wildcat X	Passenger Handles	CH48	12
Wildcat X	Axle Seal (Front or Rear)	SS08	48
Wildcat X	Seat Belt	CH57	18
Wildcat X	Switch 2WD/4WD	BD33	12
Wildcat X	Exhaust Seal	EN69	36
Wildcat X	Heat Shield	CH59	54
Wildcat X	Belly Panel	CH60	12
Wildcat X	Belly Panel Side	CH61	18
Wildcat X	Floor	CH55	60
Wildcat X	Idle Speed Control Valve	FU45	36
Wildcat X	Canopy Tube (Front)	CH53	18
Wildcat X	Canopy Tube (Rear)	CH54	36
Wildcat X	Relay	EL53	12
Wildcat X	Hood w/Decals	CH11	18
Wildcat X	Air Intake Duct	CH14	42
Wildcat X	Decal/Reflector (Any)	CH24	12
Wildcat X	Transmission Inner components	CT19	876
Wildcat X	Taillight Housing	EL15	12
Wildcat X	Crankcase	EN06	894
Wildcat X	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78

Wildcat X Limited

Model	Activity Code Description	Activity Code	Qty In Min
Wildcat X Limited	Gearcase, Front	CT07	156
Wildcat X Limited	Gearcase, Front Rebuild	CT23	204
Wildcat X Limited	Door Latch	BD42	12
Wildcat X Limited	Door Frame	BD40	18
Wildcat X Limited	Door Hinge	BD41	12
Wildcat X Limited	Door W/Decals	BD43	18
Wildcat X Limited	Rack and Pinion Assembly	SB38	228
Wildcat X Limited	Seat Latch	CH47	12
Wildcat X Limited	Complete Warranty Claim	WP00	5
Wildcat X Limited	Drive Clutch IdlerSleeve	DR92	102
Wildcat X Limited	Fuel Pump	FU09	42
Wildcat X Limited	Headlight Assembly	EL03	12
Wildcat X Limited	Water Pump Complete	EN61	78
Wildcat X Limited	Gearcase(Rear)Clutch Cartridge	CT32	120
Wildcat X Limited	Side Restraint (1)	BD38	12
Wildcat X Limited	Electric Power Steering	EL61	42
Wildcat X Limited	Intake Boot	FU50	42
Wildcat X Limited	Clutch Cover/Gasket/Seal	DR01	108
Wildcat X Limited	Bumper (Front)	CH05	12
Wildcat X Limited	Bumper (Rear)	CH17	12
Wildcat X Limited	Pinion Housing Seal (Rear)	CT28	120
Wildcat X Limited	Gear Case Bladder	DR64	12
Wildcat X Limited	Clutch Cover (Inner)	DR87	90
Wildcat X Limited	Tilt Sensor Switch	EL31	24
Wildcat X Limited	Shock Absorber (Front/Rear)	SB06	18
Wildcat X Limited	Shock Spring (Front/Rear)	SB07	18
Wildcat X Limited	Battery Cable,Relay to Starter	EE04	24
Wildcat X Limited	Driveshaft (Front)	CT04	60
Wildcat X Limited	Driveshaft (Rear)	CT05	120
Wildcat X Limited	Actuator	EL33	12
Wildcat X Limited	Gear Case (Rear)	CT15	108
Wildcat X Limited	Lift Support	BD35	12
Wildcat X Limited	Pinion Housing Seal (Front)	CT27	168
Wildcat X Limited	Piston (Front and Rear)	EN97	378
Wildcat X Limited	Piston (Front or Rear)	EN96	342
Wildcat X Limited	Crankcase, Lower	EG30	390
Wildcat X Limited	Steering Shaft	SB34	78
Wildcat X Limited	Accelerator Assy	CH58	12
Wildcat X Limited	Gear Shifting Lever	CT12	24
Wildcat X Limited	Gear Shifting Shaft/Return Spring	CT13	24
Wildcat X Limited	Gear Case, Rear (Rebuild)	DR65	168
Wildcat X Limited	Oil Pump/Gasket/O-Rings (Complete)	FU12	864
Wildcat X Limited	Driveshaft Isolator	CT34	36
Wildcat X Limited	Driveshaft (Center)	CT33	42
Wildcat X Limited	Suspension Link (Lower)	SU35	18
Wildcat X Limited	Suspension Link (Upper)	SU36	18
Wildcat X Limited	Trailing Arm (Lower)	SU37	30
Wildcat X Limited	Trailing Arm (Upper)	SU38	36

Wildcat X Limited	Trailing Arm Mount Assy (Lower)	SU39	30
Wildcat X Limited	Trailing Arm Mount Assy (Upper)	SU40	36
Wildcat X Limited	Glove Box Cover	BD44	12
Wildcat X Limited	Glove Box Latch	BD45	12
Wildcat X Limited	Reverse Override Switch	EL60	12
Wildcat X Limited	Gear Shift Position Sensor	EL58	18
Wildcat X Limited	Camshaft/Sprocket (Front or Rear)	EN88	156
Wildcat X Limited	Camshaft/Sprocket (Front and Rear)	EN89	228
Wildcat X Limited	Head W/Valves (gskt) Front or Rear	EN90	270
Wildcat X Limited	Head W/Valves(gskt)Front and Rear	EN91	306
Wildcat X Limited	Cylinder (Front or Rear)	EN92	288
Wildcat X Limited	Cylinder (Front and Rear)	EN93	324
Wildcat X Limited	Rings (Front or Rear)	EN94	336
Wildcat X Limited	Rings (Front and Rear)	EN95	372
Wildcat X Limited	Air Pressure Sensor	FU49	42
Wildcat X Limited	Engine Short Block	EN87	780
Wildcat X Limited	Brake Return Spring	DR10	12
Wildcat X Limited	Oil Filler Case	GM03	12
Wildcat X Limited	Muffler Cover (All)	GM09	24
Wildcat X Limited	Skid Plate (Front/Rear)	BD08	12
Wildcat X Limited	Cargo Box	BD12	30
Wildcat X Limited	Fender (L or R)	BD14	12
Wildcat X Limited	Headlight Switch	BD20	12
Wildcat X Limited	Brake Pressure Switch	BE01	12
Wildcat X Limited	Speed Sensor Assembly	EL32	12
Wildcat X Limited	Gear Shift Cable/Rod	CT09	48
Wildcat X Limited	Gear Shifting Cam/Fork	CT11	876
Wildcat X Limited	Starter Idler Gear	CT17	48
Wildcat X Limited	V-Belt Cover/Gasket	CT18	48
Wildcat X Limited	Shift Lever Knob	CT21	12
Wildcat X Limited	Cam Chain Adjuster	EG02	36
Wildcat X Limited	Cam Chain Guide	EG03	306
Wildcat X Limited	Cam Chain Tensioner	EG04	492
Wildcat X Limited	Cam Shaft Drive Chain	EG06	492
Wildcat X Limited	Engine Oil Strainer	EG11	30
Wildcat X Limited	Exhaust Pipe	EG12	36
Wildcat X Limited	Oil Cooler	EG14	30
Wildcat X Limited	Oil Pump Drive Gear	EG16	852
Wildcat X Limited	Oil Pump Driven Gear	EG17	852
Wildcat X Limited	Output/Input Hose	EG18	42
Wildcat X Limited	Radiator Assembly	EG20	42
Wildcat X Limited	Radiator Cap	EG21	12
Wildcat X Limited	Radiator Screen	EG22	24
Wildcat X Limited	Valve Rocker Arm/Shaft	EG23	270
Wildcat X Limited	Battery Cable	EE01	12
Wildcat X Limited	Battery Holder Assembly	EE02	12
Wildcat X Limited	Axle Shaft (1) (Front or Rear)	SS02	36
Wildcat X Limited	Hub Bearing (1) (Front)/Knuckle	SS03	60
Wildcat X Limited	Steering Ball Joint	SS04	66
Wildcat X Limited	Tire	SS05	18
Wildcat X Limited	Shifter Plate	BD24	18
Wildcat X Limited	Decal, Warning (ATV)	BD29	12

Wildcat X Limited	A-Arm (Lower)	SB01	54
Wildcat X Limited	A-Arm (Upper)	SB02	24
Wildcat X Limited	Steering Tie Rod	SB16	36
Wildcat X Limited	Sway Bar Assembly	SB17	30
Wildcat X Limited	Tie Rod End (1)	SB19	24
Wildcat X Limited	Steering Wheel	SB33	12
Wildcat X Limited	Shock Rebuild	SU28	90
Wildcat X Limited	Frame	BD02	1080
Wildcat X Limited	12 Volt Power Adapter	EL22	12
Wildcat X Limited	Fuse Holder Cover	EL23	12
Wildcat X Limited	Speedometer, Digital	EL29	18
Wildcat X Limited	Crankshaft/Bearing(s)/Seals/Clean	EN07	846
Wildcat X Limited	Engine (Complete)	EN12	330
Wildcat X Limited	Engine Rubber Mount(s)	EN14	270
Wildcat X Limited	Expansion Chamber	EN19	24
Wildcat X Limited	Fan Assembly	EN20	30
Wildcat X Limited	Thermostat and Gasket	EN36	12
Wildcat X Limited	Intake Manifold/Studs/Bolts	EN49	84
Wildcat X Limited	Coolant Tank	EN53	30
Wildcat X Limited	Valve, Intake/Exhaust	EN54	294
Wildcat X Limited	Gas Tank (Complete)	FU04	60
Wildcat X Limited	Fuel Line	FU07	36
Wildcat X Limited	Air Intake Silencer	FU10	48
Wildcat X Limited	Throttle Cable	FU16	84
Wildcat X Limited	ECU	FU21	12
Wildcat X Limited	Fuel Injectors	FU23	36
Wildcat X Limited	Throttle Body	FU29	54
Wildcat X Limited	Throttle Position Sensor	FU30	54
Wildcat X Limited	Water Temperature Sensor	FU31	12
Wildcat X Limited	Drive Clutch Spring	DR27	66
Wildcat X Limited	Driven Pulley (Complete)	DR31	60
Wildcat X Limited	Driven Pulley Fixed Face	DR32	60
Wildcat X Limited	Driven Pulley Moveable Sheave	DR33	66
Wildcat X Limited	Driven Pulley Spring	DR34	66
Wildcat X Limited	Driven Pulley Torque Bracket	DR35	66
Wildcat X Limited	Master Cylinder Complete	DR53	18
Wildcat X Limited	Brake Pedal	DR59	12
Wildcat X Limited	Ignition Coil (1)	EL05	36
Wildcat X Limited	Ignition Switch	EL06	12
Wildcat X Limited	Stator	EL07	54
Wildcat X Limited	Magneto Case	EL08	54
Wildcat X Limited	Main Wiring Harness	EL09	150
Wildcat X Limited	Rotor Assembly/Starter Clutch Set	EL10	54
Wildcat X Limited	Spark Plug Cap Assembly	EL13	24
Wildcat X Limited	Battery	AC02	12
Wildcat X Limited	Solenoid	AC06	18
Wildcat X Limited	Starter Motor	AC11	30
Wildcat X Limited	Voltage Regulator/Rectifier	AC14	12
Wildcat X Limited	Storage Compartment	CH46	24
Wildcat X Limited	Console/LED Panel	CH04	54
Wildcat X Limited	Hood Decals	CH10	12
Wildcat X Limited	Seat Assembly	CH18	12

Wildcat X Limited	Seat Base	CH28	12
Wildcat X Limited	Brake Assembly/ Calipers	DR02	72
Wildcat X Limited	Brake Disc	DR04	42
Wildcat X Limited	Brake Hose (Hyd)	DR06	90
Wildcat X Limited	Passenger Handles	CH48	12
Wildcat X Limited	Axle Seal (Front or Rear)	SS08	48
Wildcat X Limited	Seat Belt	CH57	18
Wildcat X Limited	Switch 2WD/4WD	BD33	12
Wildcat X Limited	Exhaust Seal	EN69	36
Wildcat X Limited	Heat Shield	CH59	54
Wildcat X Limited	Belly Panel	CH60	12
Wildcat X Limited	Belly Panel Side	CH61	18
Wildcat X Limited	Floor	CH55	60
Wildcat X Limited	Idle Speed Control Valve	FU45	36
Wildcat X Limited	Canopy Tube (Front)	CH53	18
Wildcat X Limited	Canopy Tube (Rear)	CH54	36
Wildcat X Limited	Relay	EL53	12
Wildcat X Limited	Hood w/Decals	CH11	18
Wildcat X Limited	Air Intake Duct	CH14	42
Wildcat X Limited	Decal/Reflector (Any)	CH24	12
Wildcat X Limited	Transmission Inner components	CT19	876
Wildcat X Limited	Taillight Housing	EL15	12
Wildcat X Limited	Crankcase	EN06	894
Wildcat X Limited	Drive Clutch Cam Arms (1,2,3, or4)	DR22	78